

Original operating instructions

BPS 301i **Bar Code Positioning System**



© 2021

Leuze electronic GmbH + Co. KG

In der Braike 1

73277 Owen / Germany

Phone: +49 7021 573-0

Fax: +49 7021 573-199

www.leuze.com

info@leuze.com

1	About this document	6
1.1	Used symbols and signal words	6
2	Safety	8
2.1	Intended use	8
2.2	Foreseeable misuse	8
2.3	Competent persons	9
2.4	Disclaimer	9
2.5	Laser warning notices	9
3	Device description	10
3.1	Device overview	10
3.1.1	General information	10
3.1.2	Performance characteristics	10
3.1.3	Accessories	11
3.1.4	Device model with heating	11
3.2	Connection technology	12
3.2.1	MS 301 connection hood with M12 connectors	12
3.2.2	MK 301 connection hood with spring-cage terminals	12
3.2.3	KB 301-3000 connection hood with cable	14
3.3	Display elements	14
3.3.1	LED indicators	14
3.3.2	Display indicators	16
3.4	Bar code tape	17
3.4.1	General information	17
3.4.2	Control bar codes	19
3.4.3	Marker labels	23
3.4.4	Twin tapes	24
4	Functions	25
4.1	Position measurement	25
4.2	Speed measurement	26
4.3	Time behavior	26
4.4	WebConfig tool	26
4.5	Evaluation of the reading quality	27
4.6	Distance measurement to the bar code tape	27
5	Applications	28
5.1	High-bay storage device	29
5.2	Electrical monorail system	30
5.3	Gantry cranes	31




6	Mounting	32
6.1	Mounting bar code tape	32
6.1.1	Installation and application remarks	32
6.1.2	Cutting bar code tapes	33
6.1.3	Mounting the BCB	34
6.2	Mounting the bar code positioning system	37
6.2.1	Mounting instructions	38
6.2.2	Orientation of the BPS to the bar code tape.....	39
6.2.3	Mounting with the BTU 0300M-W mounting device	39
6.2.4	Mounting with the BT 300 W mounting bracket.....	40
6.2.5	Mounting with BT 56 mounting device	40
6.2.6	Mounting with BT 300-1 mounting device	41
6.2.7	Mounting with M4 fastening screws	41
7	Electrical connection	42
7.1	External parameter memory in the connection hood	42
7.2	MS 301 connection hood with connectors	43
7.3	MK 301 connection hood with spring-cage terminals	43
7.4	KB 301-3000 connection hood with cable	44
7.5	Pin assignment	45
7.5.1	PWR / SW IN/OUT (Power and switching input/output).....	45
7.5.2	RS 485 (HOST / BUS IN).....	46
7.5.3	BUS OUT (bus output, RS 485)	47
7.5.4	KB 301-3000 connection cable (RS 485)	48
7.5.5	Service USB	49
7.6	Cable lengths and shielding.....	50
8	Starting up the device – Basic configuration	51
8.1	Configuring RS 485 interface.....	51
8.2	Setting the bus address	51
8.3	Configuring the switching inputs/outputs	52
8.4	Configuring the resolution for the position value.....	52
8.5	Configuring speed monitoring with switching output.....	52
8.6	Setting tape selection via the webConfig tool	53
8.7	Communication protocol (RS binary protocol).....	53
8.8	Key factory settings of the BPS	56
9	Starting up the device – webConfig tool	57
9.1	Installing software	57
9.1.1	System requirements	57
9.1.2	Install USB driver.....	57
9.2	Start webConfig tool	58
9.3	Short description of the webConfig tool	59
9.3.1	Overview	59
9.3.2	PROCESS function	60
9.3.3	ALIGNMENT function.....	60
9.3.4	CONFIGURATION function.....	61
9.3.5	DIAGNOSIS function.....	64
9.3.6	MAINTENANCE function.....	65

10	Diagnosis and troubleshooting	66
10.1	What to do in case of failure?	66
10.1.1	Diagnosis with webConfig tool	66
10.2	Operating indicators of the LEDs	66
10.3	Error messages on the display	67
10.4	Checklist for causes of errors	67
11	Care, maintenance and disposal	69
11.1	Cleaning	69
11.2	Servicing	69
11.2.1	Firmware update	69
11.2.2	BCB repair with repair kit	69
11.3	Disposing	70
12	Service and support	71
13	Technical data	72
13.1	General specifications	72
13.1.1	BPS without heating	73
13.1.2	BPS with heating	74
13.2	Bar code tape	74
13.3	Dimensioned drawings	76
13.4	Dimensioned drawings: Accessories	78
13.5	Dimensioned drawing bar code tape	82
14	Order guide and accessories	83
14.1	BPS 301i type overview	83
14.2	Connection hoods	83
14.3	Accessory terminating resistor	83
14.4	Cables accessories	83
14.5	Other accessories	84
14.6	Bar code tapes	84
14.6.1	Standard bar code tapes	84
14.6.2	Special bar code tapes	85
14.6.3	Twin tapes	85
14.6.4	Repair tapes	86
14.6.5	Marker labels and control labels	86
15	EC Declaration of Conformity	87
16	Appendix	88
16.1	Bar code sample	88




1 About this document

1.1 Used symbols and signal words

Tab. 1.1: Warning symbols and signal words

	Symbol indicating dangers to persons
	Symbol indicating dangers from harmful laser radiation
	Symbol indicating possible property damage
NOTE	Signal word for property damage Indicates dangers that may result in property damage if the measures for danger avoidance are not followed.
CAUTION	Signal word for minor injuries Indicates dangers that may result in minor injury if the measures for danger avoidance are not followed.
WARNING	Signal word for serious injury Indicates dangers that may result in severe or fatal injury if the measures for danger avoidance are not followed.

Tab. 1.2: Other symbols

	Symbol for tips Text passages with this symbol provide you with further information.
	Symbol for action steps Text passages with this symbol instruct you to perform actions.
	Symbol for action results Text passages with this symbol describe the result of the preceding action.

Tab. 1.3: Terms and abbreviations

BCB	Bar code tape
BPS	Bar code Positioning System
CFR	Code of Federal Regulations
DAP	Device Access Point
DCP	Discovery and Configuration Protocol
EMC	Electromagnetic compatibility
EN	European standard
FE	Functional earth
GSD	General Station Description
GSDML	Generic Station Description Markup Language
GUI	Graphical User Interface
IO or I/O	Input/Output
I&M	Information & Maintenance
IP	Internet Protocol
LED	Light Emitting Diode
MAC	Media Access Control
MVS	Type of control bar code
MV0	Type of control bar code
NEC	National Electric Code
OSI	Open Systems Interconnection model
PELV	Protective Extra-Low Voltage
RT	Real Time
SNMP	Simple Network Management Protocol
PLC	Programmable Logic Control Programmable Logic Control
TCP	Transmission Control Protocol
UDP	User Datagram Protocol
USB	Universal Serial Bus
UL	Underwriters Laboratories
UV	Ultraviolet
XML	Extensible Markup Language



2 Safety

This sensor was developed, manufactured and tested in line with the applicable safety standards. It corresponds to the state of the art.

2.1 Intended use

The device is an optical measuring system which uses visible red laser light of laser class 1 to determine its position relative to a permanently mounted bar code tape.



All accuracy details for the BPS 300 measurement system refer to the position relative to the permanently mounted bar code tape.


 CAUTION	
	<p>Use only approved bar code tapes!</p> <p>The bar code tapes approved by Leuze and listed on the Leuze website as accessories are an essential part of the measurement system.</p> <p>Bar code tapes not approved by Leuze are not allowed.</p> <p>The use of such bar code tapes is contrary to the intended use.</p>

Areas of application

The BPS is designed for positioning in the following areas of application:

- Electrical monorail system
- Travel and lifting axes of high-bay storage devices
- Repositioning units
- Gantry crane bridges and their trolleys
- Elevators

 CAUTION	
	<p>Observe intended use!</p> <p>The protection of personnel and the device cannot be guaranteed if the device is operated in a manner not complying with its intended use.</p> <ul style="list-style-type: none"> ↳ Only operate the device in accordance with its intended use. ↳ Leuze electronic GmbH + Co. KG is not liable for damages caused by improper use. ↳ Read these operating instructions before commissioning the device. Knowledge of the operating instructions is an element of proper use.


NOTICE	
	<p>Comply with conditions and regulations!</p> <ul style="list-style-type: none"> ↳ Observe the locally applicable legal regulations and the rules of the employer's liability insurance association.


2.2 Foreseeable misuse

Any use other than that defined under "Intended use" or which goes beyond that use is considered improper use.

In particular, use of the device is not permitted in the following cases:

- in rooms with explosive atmospheres
- for medical purposes
- as own safety component in accordance with the machinery directive

NOTICE	
	<p>Use as safety-related component within the safety function is possible, if the component combination is designed correspondingly by the machine manufacturer.</p>

NOTICE	
	<p>Do not modify or otherwise interfere with the device!</p> <ul style="list-style-type: none"> ↪ Do not carry out modifications or otherwise interfere with the device. The device must not be tampered with and must not be changed in any way. ↪ The use of a bar code tape not approved by Leuze is equivalent to an intervention in or change to the device/measurement system. ↪ The device must not be opened. There are no user-serviceable parts inside. ↪ Repairs must only be performed by Leuze electronic GmbH + Co. KG.

2.3 Competent persons

Connection, mounting, commissioning and adjustment of the device must only be carried out by competent persons.

Prerequisites for competent persons:

- They have a suitable technical education.
- They are familiar with the rules and regulations for occupational safety and safety at work.
- They are familiar with the operating instructions for the device.
- They have been instructed by the responsible person on the mounting and operation of the device.

Certified electricians

Electrical work must be carried out by a certified electrician.

Due to their technical training, knowledge and experience as well as their familiarity with relevant standards and regulations, certified electricians are able to perform work on electrical systems and independently detect possible dangers.



In Germany, certified electricians must fulfill the requirements of accident-prevention regulations DGUV (German Social Accident Insurance) provision 3 (e.g. electrician foreman). In other countries, there are respective regulations that must be observed.

2.4 Disclaimer

Leuze electronic GmbH + Co. KG is not liable in the following cases:

- The device is not being used properly.
- Reasonably foreseeable misuse is not taken into account.
- Mounting and electrical connection are not properly performed.
- Changes (e.g., constructional) are made to the device.

2.5 Laser warning notices

 ATTENTION	
	<p>LASER RADIATION – CLASS 1 LASER PRODUCT</p> <p>The device satisfies the requirements of IEC/EN 60825-1:2014 safety regulations for a product of laser class 1 and complies with 21 CFR 1040.10 except for conformance with IEC 60825-1 Ed. 3., as described in Laser Notice No. 56, dated May 8, 2019.</p> <p>CAUTION: Opening the device can lead to dangerous exposure to radiation.</p> <ul style="list-style-type: none"> ↪ Observe the applicable statutory and local laser protection regulations. ↪ The device must not be tampered with and must not be changed in any way. There are no user-serviceable parts inside the device. Repairs must only be performed by Leuze electronic GmbH + Co. KG.

3 Device description

3.1 Device overview

3.1.1 General information

The BPS bar code positioning system uses visible red laser light to determine its position and its speed value relative to a bar code tape that is affixed along the travel path. This takes place in the following steps:


- Read a code on the bar code tape (see following figure)
- Determine the position of the read code in the scanning beam
- Calculate the position to within less than a millimeter using the code information and the code position relative to the device's center.

The position and speed values are then output to the controller via the host interface.

The BPS consists of device housing and interface connection hood for the connection to the control. The BPS can optionally be delivered with display and optics heating.

The following connection hoods are available for the connection of the RS 485 interface:

- MS 301 connection hood with M12 connectors
- MK 301 connection hood with spring-cage terminals
- KB 301 connection hood with cable

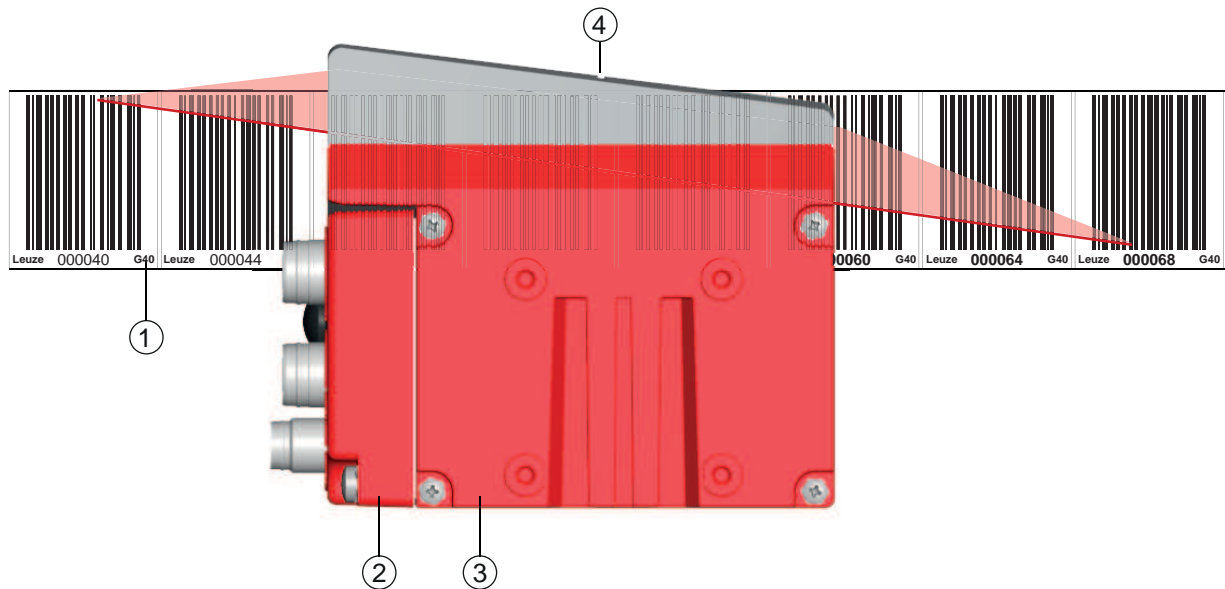

- 1 Bar code tape
- 2 Connection hood
- 3 Device housing
- 4 Middle of the scanning beam (device middle, output position value)

Fig. 3.1: Device construction, device arrangement and beam exit

3.1.2 Performance characteristics

The most important performance characteristics of the bar code positioning system:

- Positioning with submillimeter accuracy from 0 to 10,000 m
- For the control at high traverse rates of up to 10 m/s
- Simultaneous position and speed measurement
- Working range: 50 to 170 mm; enables flexible mounting positions
- Interfaces: PROFINET fieldbus, PROFIBUS fieldbus, SSI, RS 232/RS 422, RS 485
- Binary inputs and outputs for control and process monitoring
- Configuration via webConfig tool or fieldbus
- Diagnosis via webConfig tool or optional display

- Optional model with display
- Optional model with heating for use to -35 °C

3.1.3 Accessories

Special accessories are available for the bar code positioning system. The accessories are optimally matched to the BPS:

- Highly flexible, scratch-, smudge- and UV-resistant bar code tape
- Mounting devices for precise mounting with one screw (easy-mount)
- Modular connection technology via connection hoods with M12 connectors, spring-cage terminals or with cable

3.1.4 Device model with heating

The bar code positioning system is optionally available as a model with integrated heating. In this case, heating is permanently installed ex works.

NOTICE



No self-installation of the heating!

↪ Self-installation of the heating on-site by the user is not possible.

The heating consists of two parts:

- Front cover heater
- Housing heater

Features of the integrated heating:

- Extends the application range of the BPS to -35 °C
- Supply voltage 18 ... 30 V DC
- BPS release through an internal temperature switch (start-up delay of about 30 min for 24 V DC and minimum ambient temperature of -35 °C)
- Required conductor cross-section for the power supply: At least 0.75 mm²

NOTICE



Do not use ready-made cables!

↪ It is not possible to use ready-made cables.
The current consumption of the BPS is too high for the ready-made cables.

Function

When the supply voltage is applied to the BPS, a temperature switch initially only supplies the heating with current (front cover heater and housing heater). During the heating phase (around 30 min), when the inside temperature rises above 15 °C, the temperature switch connects the BPS to the supply voltage. This is followed by the self test and the changeover to read operation. The PWR LED lights up, showing overall readiness for operation.

When the inside temperature reaches approx. 18 °C, another temperature switch turns the housing heater off and, if necessary, back on again (if the inside temperature drops below 15 °C). This does not interrupt the read operation.

The front cover heater remains activated until an inside temperature of 25 °C is reached. At temperatures above this, the front cover heater switches off and, with a switching hysteresis of 3 °C, back on again at an inside temperature below 22 °C.

3.2 Connection technology

For the electrical connection of the BPS, the following connection variants are available:


- MS 301 connection hood with M12 connectors
- MK 301 connection hood with spring-cage terminals
- KB 301-3000 connection hood with cable


The voltage supply (18 ... 30 VDC) is connected acc. to the connection type selected.

Two freely programmable switching inputs/switching outputs for individual adaptation to the respective application are also available here.

3.2.1 MS 301 connection hood with M12 connectors


The MS 301 connection hood features three M12 connector plugs and a Mini-B type USB socket as a service interface for configuration and diagnostics of the BPS.

NOTICE	
	<p>Contained in the MS 301 are the address switches for setting the bus address of the BPS 301i and the integrated parameter memory for easily exchanging the BPS.</p> <p>Both the settings as well as the bus address are stored in the MS 301 and automatically transmitted to the device on every device start-up.</p>

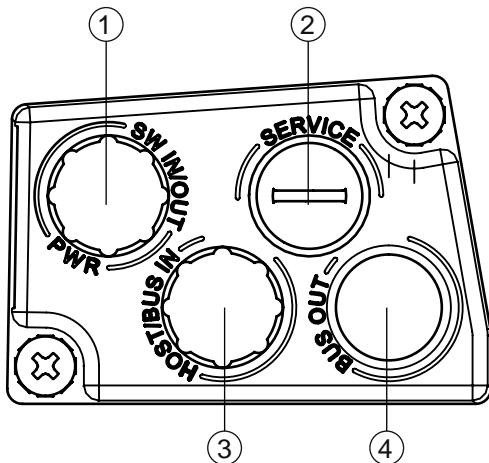

- 1 PWR / SW IN/OUT: M12 plug (A-coded)
- 2 SERVICE: Mini-B USB socket (behind protective cap)
- 3 HOST / BUS IN: M12 plug (B-coded), RS 485
- 4 BUS OUT: M12 socket (B-coded), RS 485

Fig. 3.2: MS 301 connection hood, connections

NOTICE	
	<p>Shielding connection</p> <p>↪ The shielding connection is done via the M12 connector housing.</p>


3.2.2 MK 301 connection hood with spring-cage terminals

The MK 301 connection hood makes it possible to connect the BPS directly and without additional connectors.

- The MK 301 features three cable bushings in which the shielding connection for the interface cable is also located.
- A Mini-B type USB socket is used for service purposes and for configuration and diagnostic of the BPS.

NOTICE

i Contained in the MK 301 are the address switches for setting the bus address and the integrated parameter memory for easily exchanging the BPS. Both the settings as well as the bus address are stored in the MK 301 and automatically transmitted to the device on every device start-up.

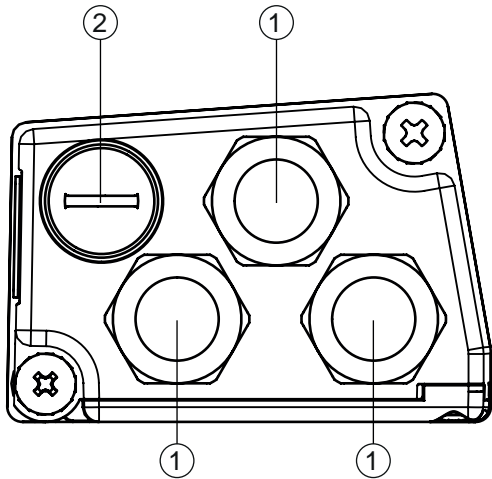

- 1 3x cable bushing, M16 x 1.5
- 2 SERVICE: Mini-B USB socket (behind protective cap)

Fig. 3.3: Connection hood MK 301, connections

Cable fabrication and shielding connection

- ↪ Remove approx. 78 mm of the connection cable sheathing. 15 mm of sheath of the shielded line must be freely accessible.
- ↪ Lead the individual wires into the terminals according to the diagram.


NOTICE

! **Do not use wire-end sleeves!**

↪ When fabricating cables, we recommend against using wire-end sleeves.

NOTICE

i The shield is automatically contacted when the cable is lead into the metal screw fitting and fastened when the cord grip is closed.

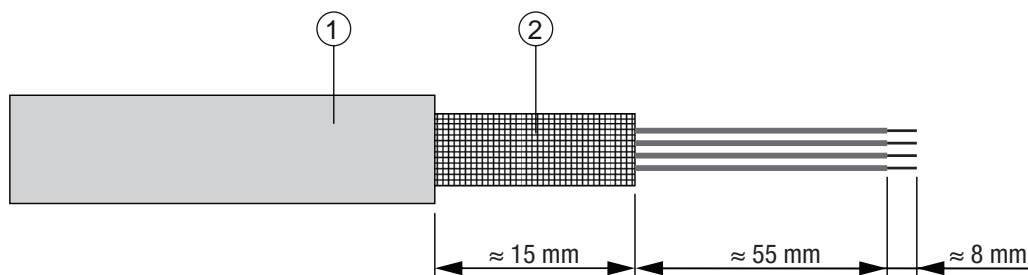

- 1 Diameter of contact area, cable: 6 ... 9.5 mm
- 2 Diameter of contact area, shield: 5 ... 9.5 mm

Fig. 3.4: Cable fabrication for connection hoods with spring-cage terminals

3.2.3 KB 301-3000 connection hood with cable


With connection hood KB 301, it is possible to directly connect the BPS.

- A Mini-B type USB socket is used for service purposes and for configuration and diagnostic of the BPS.
- The length of the connection cable is 3 m.

NOTICE



To connect, the system plugs (JST) at the end of the cable must be removed.

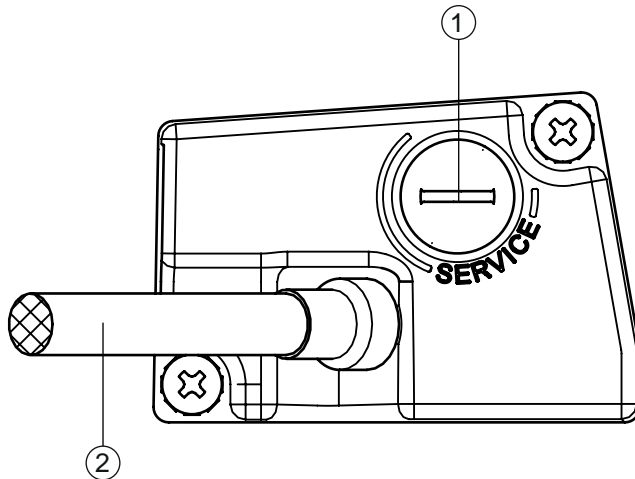

- 1 SERVICE: Mini-B USB socket (behind protective cap)
- 2 Connection cable

Fig. 3.5: Connection hood KB 301-3000


3.3 Display elements

The BPS is available optionally with display, two control buttons and LEDs or with only two LEDs as indicators on the device housing.

3.3.1 LED indicators

The device housing features the following multicolor LED indicators as primary display element:

- PWR
- BUS

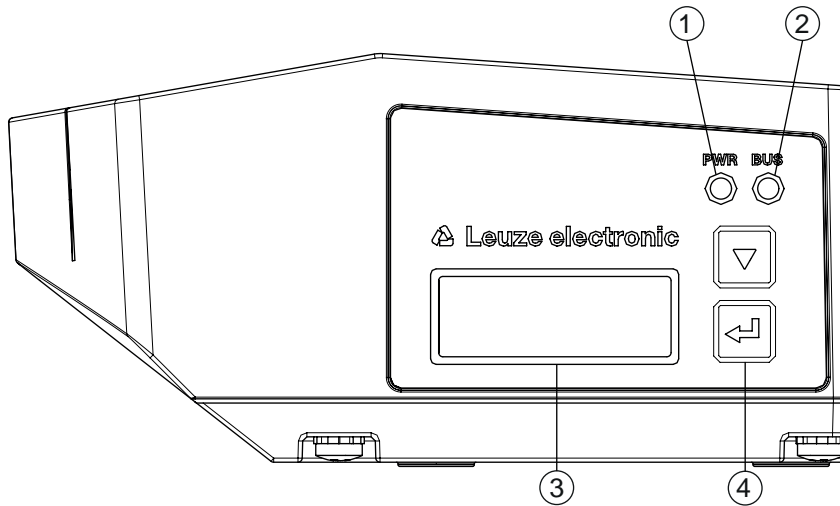

- 1 PWR LED
- 2 BUS LED
- 3 Display
- 4 Control buttons

Fig. 3.6: Indicators on the device housing

Tab. 3.1: Meaning of the LED indicators on the device housing

LED	Color, state	Description
LED 1 PWR	Off	Device is switched off <ul style="list-style-type: none"> • No supply voltage
	Green, flashing	Device is being initialized <ul style="list-style-type: none"> • Supply voltage connected • Initialization running • No measurement value output
	Green, continuous light	Device in operation <ul style="list-style-type: none"> • Initialization finished • Measurement value output
	Red, flashing	Warning set <ul style="list-style-type: none"> • No measurement (e.g. no bar code tape)
	Orange, continuous light	Service active <ul style="list-style-type: none"> • No data on the host interface • Configuration via USB service interface
LED 2 BUS	Off	No supply voltage
	Green, flashing	Initialization of the host interface <ul style="list-style-type: none"> • No communication
	Green, continuous light	Host interface active <ul style="list-style-type: none"> • Communication possible
	Red, flashing	Communication error detected

3.3.2 Display indicators

The optional display of the BPS is only used as a display element. The display has the following features:


- Monochromatic with white background lighting
- Double line, 128 x 32 pixels
- Display language: English

Two control buttons can be used to control which values appear in the display.

The background lighting is activated by pressing any control button and is automatically deactivated after ten minutes have passed.

The display shows the content on two lines:

- The upper display line shows the selected function as an English term.
- The lower display line shows the data of the selected function.

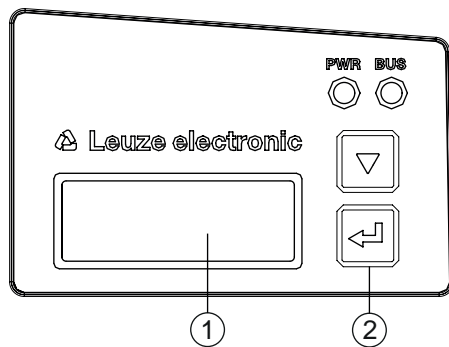

- 1 Display
- 2 Control buttons

Fig. 3.7: Display on the device housing

Display functions

The following functions can be displayed and activated in the display:

- Position value
 - *Position Value*
 - Position value in mm
Display with "." as decimal separator character (e.g., + 34598.7 mm)
- Reading quality
 - *Quality*
 - 0 ... 100%
- Device status
 - *BPS Info*
 - *System OK / Warning / Error*
- I/O status
Status of the inputs/outputs
 - *I/O status*
 - *IO1 In:0 / IO2 Out:0*
In/Out depending on configuration, 0/1 for state of the I/O
- Device address for host communication
 - *BPS Address*
 - Set bus address, e.g. 12
- Version information
Software and hardware version of the device
 - *Version*
 - *SW: V1.3.0 HW:1*

NOTICE**Laser activation by selecting *Quality*!**

↳ If the position measurement has stopped and the laser thereby switched, the laser is switched on and the position measurement started by activating *Quality*.

The display is controlled via the control buttons:

- – **Enter**: activate or deactivate the display shift function
- – **Down**: scroll through functions (downwards)

Example: Representation of the I/O status on the display

1. Press button : Display flashes
2. Press button : Display changes from position value (*Position Value*) to reading quality (*Quality*)
3. Press button : Display changes from reading quality (*Quality*) to device status (*BPS Info*)
4. Press button : Display changes from device status (*BPS Info*) to *I/O Status*
5. Press button : *I/O Status* displayed, display stops flashing

Display during device start-up

During device start-up, a start-up display first appears which is briefly followed by the display with the version information.

The standard display after starting up the BPS is *Position Value*.

3.4 Bar code tape**3.4.1 General information**

The bar code tape is available in different variants:

- BCB G40 ... bar code tape with 40 mm grid
Code128 with character set C, increasing in increments of 4 (e.g., 000004, 000008, ...)
- BCB G30 ... bar code tape with 30 mm grid
Code128 with character set C, increasing in increments of 3 (e.g. 000003, 000006, ...)

A bar code tape consists of a sequence of individual position labels in one of the two grids. Defined cut marks are provided for cutting the BCB.

The BCB is delivered on a roll. A roll contains up to 300 m of BCB, with the wrapping direction from the outside to the inside (smallest number on the outside). If more than 300 m of BCB is ordered, the total length is divided into rolls of max. 300 m.

Standard bar code tapes in fixed length increments as well as special bar code tapes with custom tape start value, tape end value, custom length and height can be found on the Leuze website in the accessories for the BPS 300 devices.

An entry wizard is available for special bar code tapes on the Leuze website under devices BPS 300 - *Accessories* tab. The entry wizard provides support when entering the individual pieces of tape data and creates a query or order form with the correct part number and type designation.

NOTICE**Only one BCB type per system!**

↳ In a given system, use either only BCB G30 ... with 30 mm grid or only BCB G40 ... with 40 mm grid.
If different BCB G30 ... or BCB G40 ... models are used in one system, the BPS cannot ensure an exact position determination.

NOTICE

Configure the BPS for the used BCB type!

- ↪ The used BCB type must be set in the webConfig tool with the *Tape selection* parameter; see chapter 9.3.4 "CONFIGURATION function".
- ↪ On delivery, the BPS is set for BCB G40 ... with a 40 mm grid. If the BCB G30 ... with a 30 mm grid is used, the *Tape selection* must be adjusted in the BPS configuration.
- ↪ If the used BCB type does not correspond to the *Tape selection* configured in the BPS, exact position determination cannot be performed by the BPS.

BCB G40 ... bar code tape with 40 mm grid



- 1 Position label with position value
- 2 Cut mark
- 3 Grid dimension = 40 mm
- 4 Height
Standard heights: 47 mm and 25 mm
- 5 G40 = designation in plain-text for 40 mm grid

Fig. 3.8: BCB G40 ... bar code tape with 40 mm grid

NOTICE


i Standard BCB G40 ... bar code tapes are available in various length increments in the following heights:

- 47 mm
- 25 mm

Special BCB G40 ... bar code tapes are available in mm height increments between 20 and 140 mm.

An entry wizard is available for special bar code tapes on the Leuze website under devices BPS 300 - *Accessories* tab. The entry wizard provides support when entering the individual pieces of tape data and creates a query or order form with the correct part number and type designation.

BCB G30 ... bar code tape with 30 mm grid

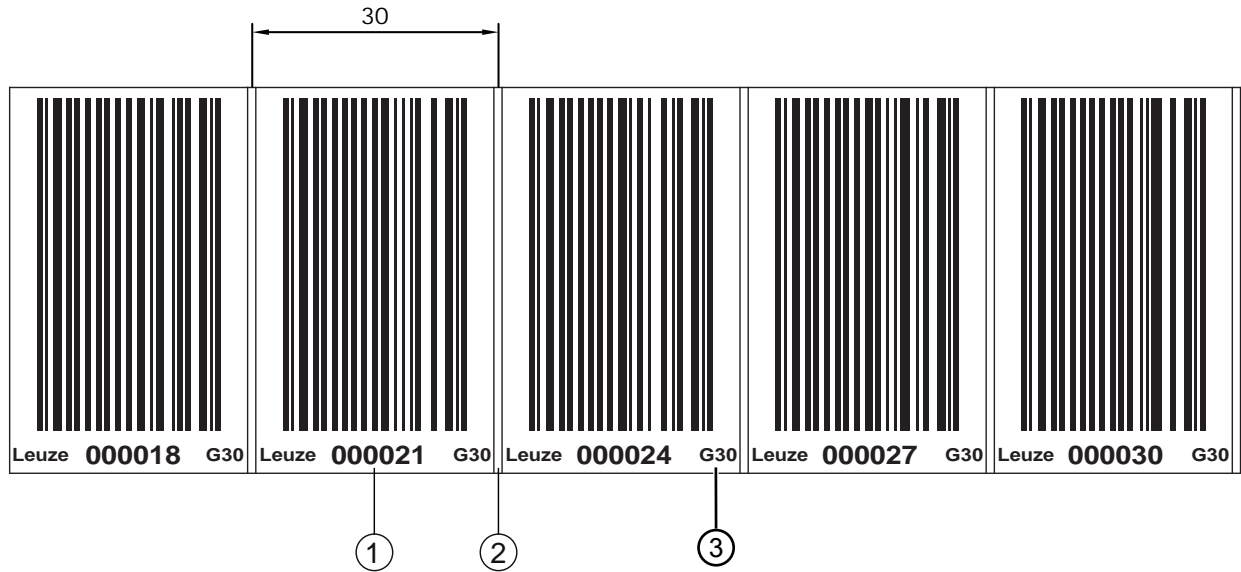

- 1 Position label with position value
- 2 Cut mark
- 3 G30 = designation in plain-text for 30 mm grid

Fig. 3.9: BCB G30 ... bar code tape with 30 mm grid

NOTICE	
	<p>Standard BCB G30 ... bar code tapes are available in various length increments in the following heights:</p> <ul style="list-style-type: none"> - 47 mm - 25 mm <p>Special BCB G30 ... bar code tapes are available in mm height increments between 20 and 140 mm.</p> <p>An entry wizard is available for special bar code tapes on the Leuze website under devices BPS 300 - <i>Accessories</i> tab. The entry wizard provides support when entering the individual pieces of tape data and creates a query or order form with the correct part number and type designation.</p>

3.4.2 Control bar codes

With the help of control bar codes that are affixed on top of the bar code tape at appropriate positions, functions in the BPS can be activated or deactivated, e.g., for changing various position values at switches.


Code type Code128 with character set B is used for the control bar code.

MVS label

Designation: BCB G40 ... MVS or BCB G30 ... MVS

The MVS label is a control bar code for the direction-independent switching of the position values from one bar code tape to another in the middle of the control bar code label.

If, upon reaching the changeover position in the middle of the MVS label, the BPS does not detect the new BCB section in the scanning beam, the position value of the first BCB section is still output after the middle of the MVS label for half of the label width.

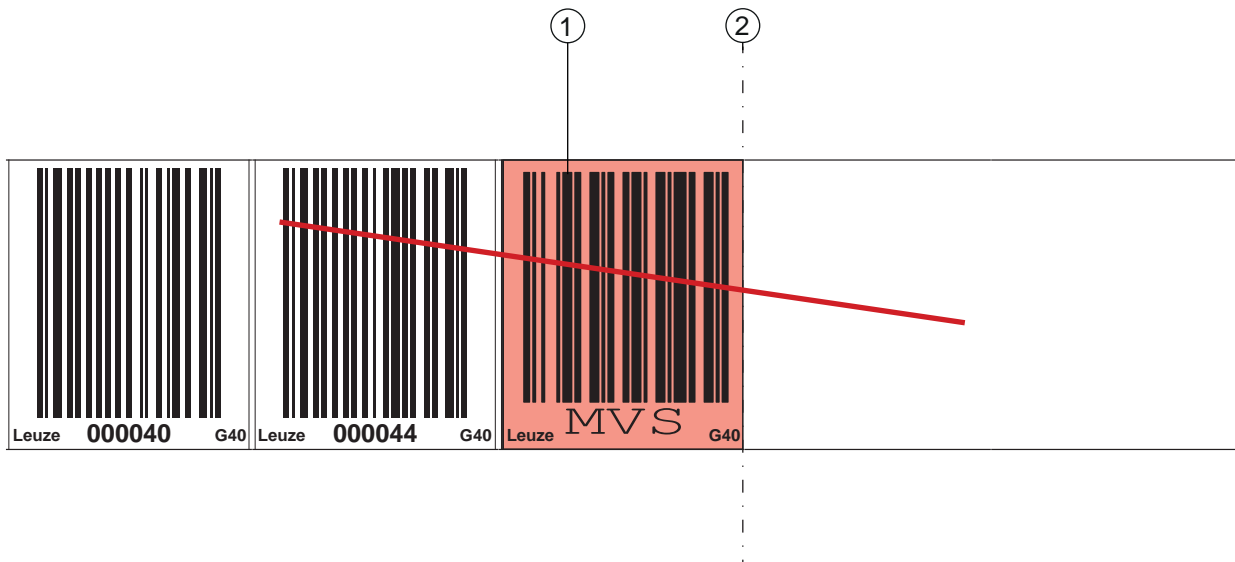

- 1 Control bar code
- 2 Deactivation of the position determination at the end of the MVS label


Fig. 3.10: Arrangement of the MVS control bar code

MV0 label

Designation: BCB G40 ... MV0 or BCB G30 ... MV0

The *MV0* label is a control bar code for the direction-independent switching of the position values from one bar code tape to another in the middle of the control bar code label.

If, upon reaching the changeover position in the middle of the *MV0* label, the BPS does not detect the new BCB section in the scanning beam, no position is output after the middle of the *MV0* label for.

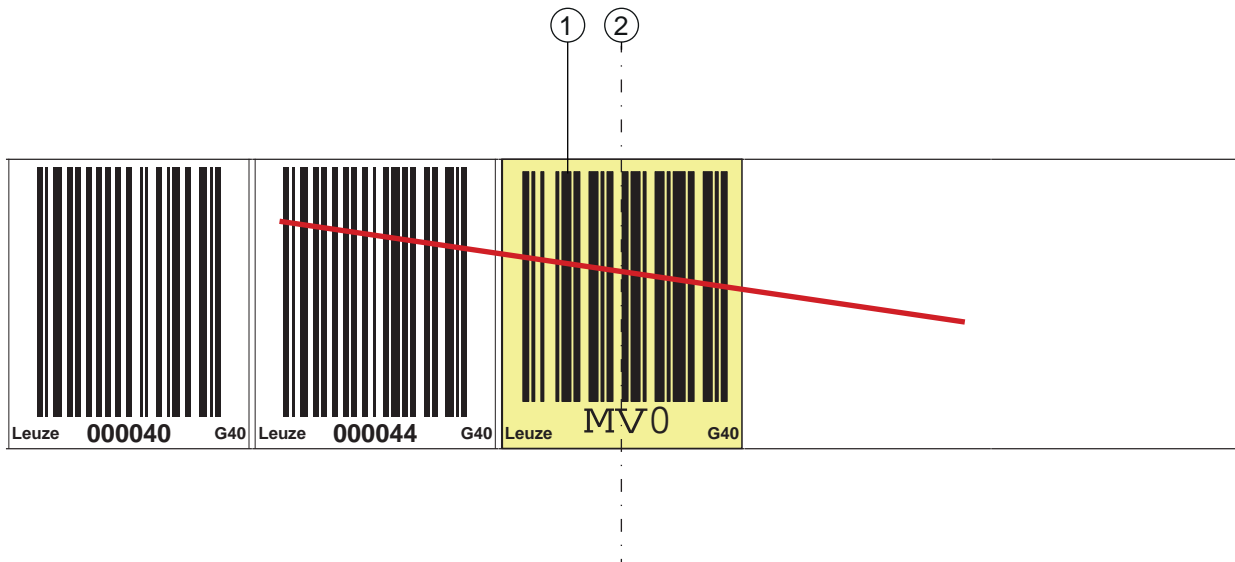

- 1 Control bar code
- 2 Deactivation of position determination from the middle of the control bar code

Fig. 3.11: Arrangement of the MV0 control bar code

Arrangement of the control bar codes

The control bar code is attached in such a way that it replaces one position bar code or seamlessly connects two bar code tapes with different value ranges to one another.

A position label does not need to follow immediately after the MVS or MV0 control bar code. For an uninterrupted measurement value determination, a gap less than or equal to one label width (40 mm) may be present between the control bar code and the subsequent position label.

NOTICE

Distance between two control bar codes!

⚠ Make certain that there is only one control bar code (or marker label) in the scanning beam at a time.
The minimum distance between two control bar codes is determined by the distance between the BPS and bar code tape and the resulting length of the scanning beam.

The control bar codes are simply affixed over the existing bar code tape.

A control bar code should cover an entire position bar code and must have the correct grid dimension:

- 30 mm with BCB G30 ... bar code tapes
- 40 mm with BCB G40 ... bar code tapes

NOTICE

i Keep the gap between the BCBs that are switched between as small as possible.



- 1 Control bar code perfectly affixed on the bar code tape
- 2 Control bar code at small gap between two bar code tapes

Fig. 3.12: Correct positioning of the control bar code

NOTICE

! Gaps in bar code tape!

⚠ Avoid polished and high-gloss surfaces.
⚠ Keep the gaps between the two bar code tapes and the control bar code as small as possible.

Measurement value switching between two bar code tapes with different value ranges

The *MVS* or *MVO* control bar code is used to switch between two bar code tapes.

NOTICE

! 1 m difference in the bar code position values for correct measurement value switching!

↪ For different BCB value ranges, make certain that the position value has a value distance of minimum 1 m between the preceding position bar code (before the control bar code) and the subsequent position bar code (after the control bar code).
If the minimum distance between the bar code values is not maintained, position determination may be faulty.

⇒ Example (BCB with 40 mm grid): If the last position bar code on the BCB before the control bar code is 75120, the following position bar code on the BCB after the control bar code must be at least 75220.

- The end of the preceding bar code tape and the start of the subsequent bar code tape can end and begin, respectively, with completely different position bar codes.
- Position value changeover by means of a control bar code always occurs at the same position, i.e., it serves to change from the preceding tape to the subsequent tape and vice versa.
- If the center of the BPS reaches the transition point of the control bar code, the device switches to the second BCB, provided the next position label is in the BPS's scanning beam.

The output position value is thereby always uniquely assigned to one BCB.


NOTICE

i If the BPS does not detect the new BCB section upon reaching the changeover position, the position-value output is dependent on the used control bar code.

MVS control bar code: The position value of the first BCB is output beyond the middle of the *MVS* label for half of the label width.

MVO control bar code: No position values are output after the middle of the *MVO* label.

- When the control label is passed, the new BCB value is output relative to the middle of the device or label.

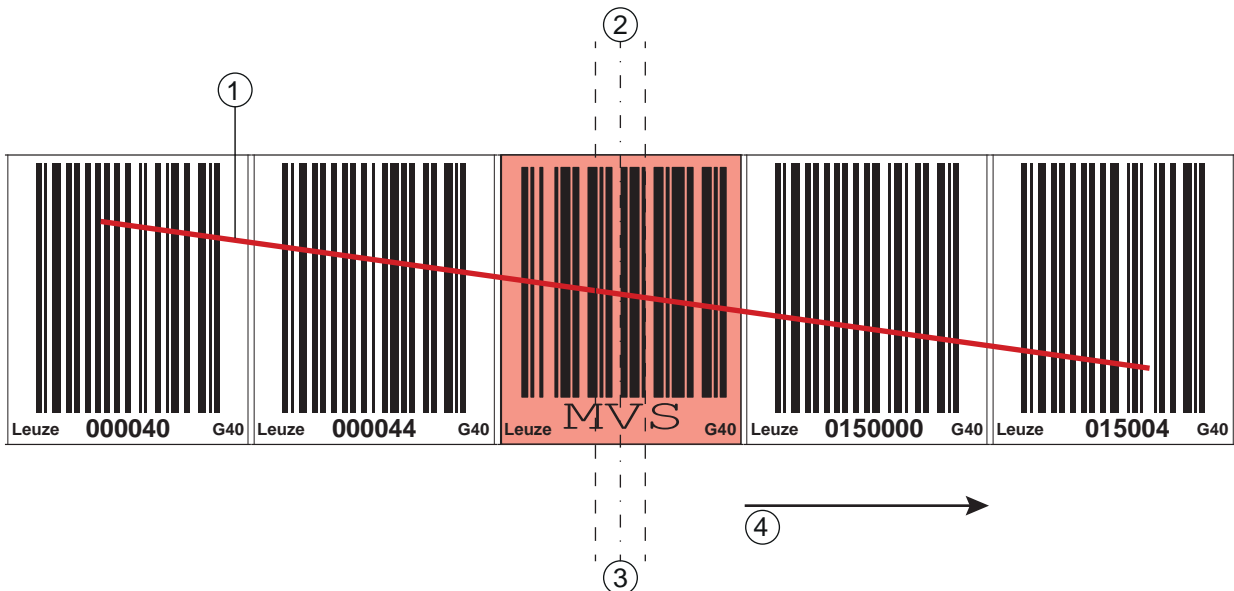


- 1 Scanning beam
- 2 Control bar code center
- 3 Middle of the BPS
- 4 Direction of movement

Fig. 3.13: Changeover position with *MVS* control bar code for BCB changeover

3.4.3 Marker labels

Designation: BCB G30 ... ML ... or BCB G40 ... ML ...

Marker labels, which are affixed at the appropriate locations on top of the bar code tape, can be used to trigger various functions in the superior control. The BPS detects the defined marker labels in the scanning beam, decodes them, and makes them available to the control.

NOTICE	
	<p>Distance between two marker labels!</p> <p>↪ Make certain that there is only one marker label (or control bar code) in the scanning beam at a time. The minimum distance between two marker labels is determined by the distance between the BPS and bar code tape and the resulting length of the scanning beam.</p>

Definition of the marker label

The following combinations of letters and numbers may be used as marker labels:

- AA1
- BB1
- CC1
- DD1
- EE1
- FF1
- GG1


Marker labels are implemented as follows:

- Color red
- Height 47 mm
- in grid dimension 40 mm (BCB G40 ... ML)
- in grid dimension 30 mm (BCB G30 ... ML)
- Code 128 B

Marker labels are individual labels and are supplied in a packaging unit containing 10 pieces.

Arrangement when using the marker label with positioning

The marker label must be attached to the bar code tape aligned with the grid of the actual coding. A position code should be visible before and after the marker label.

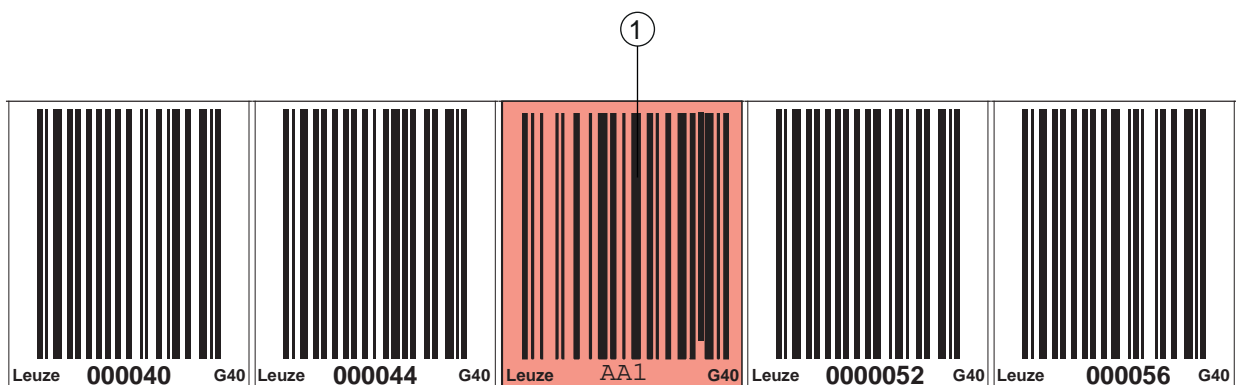

1 Marker labels

Fig. 3.14: System arrangement of marker labels

Arrangement when using the marker label without positioning

The marker label must be positioned within the BPS's detection range.

3.4.4 Twin tapes


Designation: BCB G40 ... TWIN ... or BCB G30 ... TWIN ...

Twin tapes are jointly manufactured bar code tapes with the same value range.

NOTICE	
	<p>A twin tape always consists of two bar code tapes!</p> <p>↪ When ordering a twin tape, two bar code tapes are always included with an order.</p>


Twin tapes are used if positioning with two bar code tapes is necessary, e.g., with crane systems or elevators.

Because they are manufactured jointly, both tapes have the same length tolerance. As a result, differences in length and code position are minimal. By having the same code position on both tapes, improved synchronization can be achieved during positioning compared to bar code tapes that are manufactured separately.

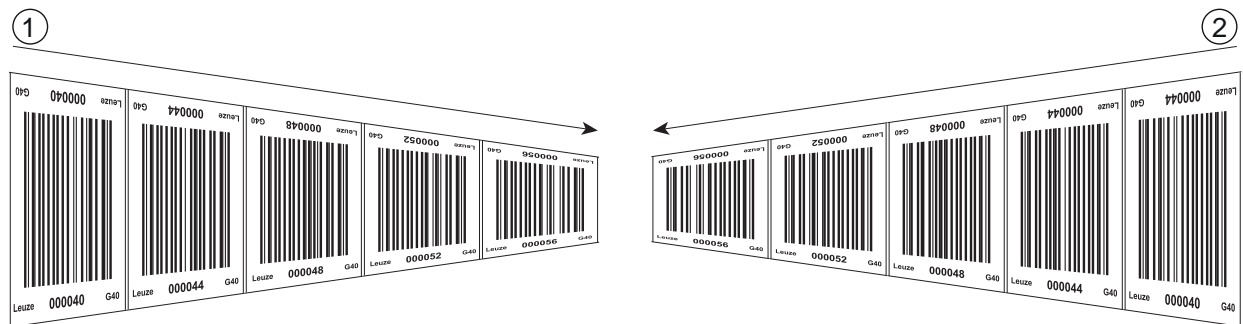

- 1 Twin bar code tape 1
- 2 Twin bar code tape 2

Fig. 3.15: Twin bar code tape with double numbering

NOTICE	
	<p>Twin tapes are always delivered in pairs on two rolls.</p> <p>If twin tapes are replaced, both tapes are to be replaced.</p> <p>An entry wizard for twin tapes with custom tape start value, tape end value, custom length and height is available on the Leuze website under devices BPS 300 - <i>Accessories</i> tab. The entry wizard provides support when entering the individual pieces of tape data and creates a query or order form with the correct part number and type designation.</p>

4 Functions

This chapter describes the functions of the BPS and the parameters for adaptation to the respective application conditions and requirements.

The parameters are set via the webConfig tool (see chapter 9 "Starting up the device – webConfig tool") or via the Service Data Objects (SDOs) (Object index).

Main functions:

- Position measurement
- Speed measurement

The following parameters are relevant for the time behavior of the position and speed measurement:

- Measurement value preparation
Configurable response time
- Measurement error tolerance
Configurable time-based error suppression

4.1 Position measurement

The output value of the position measurement is calculated from the measurement and the settings for resolution, preset, offset, etc.

The most important individual parameters for the position measurement are:

Parameter	Description	Range/Values
Position resolution	The parameter specifies the resolution of the position value. It acts only on the host interface. The resolution has no effect on the set parameter values such as offset or preset.	0.01 mm 0.1 mm 1 mm 10 mm or Free resolution
Unit	The parameter specifies the measurement unit of the measured position and speed. The selection of the measurement unit affects all parameters with measurement units.	Metric (mm) or Inch (1/100 in)
Offset	The offset is used to correct the position value by a fixed amount. If the offset is activated, the offset is added to the position value. This yields a new output value: Output value = position value + offset	1 mm or inch/100
Preset	Like the offset, the preset is used to correct the position value. With preset, a preset value is specified. The value is accepted during a corresponding event (switching input or fieldbus). If the preset is activated, this has priority over the offset.	1 mm or inch/100

4.2 Speed measurement

The current speed is ascertained and output on the basis of the respective position values.

The most important individual parameters for the speed measurement are:

Parameter	Description	Range/Values
Speed resolution	The parameter defines the resolution of the speed value. It affects only the fieldbus output.	1 mm/s 10 mm/s 100 mm/s or Free resolution
Averaging	The parameter specifies the averaging time of the calculated speed values in steps.	Steps: 1 to 32 ms

4.3 Time behavior

The BPS of the 300i series operate with a scanning rate of 1000 scans per second. A measurement value is ascertained every 1 ms.


The following parameters are relevant for the time behavior of the position and speed measurement:


Parameter	Description	Range/Values
Integration depth	The integration depth affects the measurement of position and speed. The <i>integration depth</i> parameter specifies the number of sequential measurements that the BPS uses for position determination. The integration results in smoothing of the output measurement value. With the BPS 300i, an <i>integration depth</i> of 8 yields a response time of 8 ms.	Factory setting: 8
Error delay time	Errors that occur are suppressed for the configured time. If no valid position or speed value can be ascertained in the configured <i>error delay time</i> , the last valid value is always output. If the error persists after the <i>error delay time</i> elapses, the value of the <i>Position/Speed value in case of error</i> parameter is then output (standard).	Factory setting: 50 ms

4.4 WebConfig tool

The webConfig configuration tool offers a graphical user interface for the display of process data, configuration and diagnosis of the BPS via a PC; see chapter 9 "Starting up the device – webConfig tool".

4.5 Evaluation of the reading quality

NOTICE	
	<p>Output of the reading quality</p> <p>The bar code positioning system can diagnose the reading quality from the arrangement of the BPS relative to the bar code tape.</p> <ul style="list-style-type: none"> ↳ The reading quality is displayed in % values. ↳ In spite of optimum operating conditions, the reading quality may be slightly below 100%. This does not indicate a defect of the BPS or of the bar code tape.


NOTICE	
	<p>The warning threshold preset ex works for a reading quality < 60% as well as a switch-off threshold for a reading quality < 30% corresponds to Leuze's experience in a typical application.</p> <p>For applications that involve an intentional interruption of the bar code tape (switches, expansion gaps, vertical slopes/descents), the preset limit values can be adapted to the respective application.</p>


The reading quality is dependent on several factors:

- Operation of the BPS in the specified depth of field
- Number of bar codes in the transmitted beam
- Number of bar codes in the reading field
- Soiling of the bar code
- Traverse rate of the BPS (number of bar code symbols within the time window)
- Ambient light incident on the bar code and on the optics (glass exit window) of the BPS

The reading quality is affected, in particular, in the following cases:

- Switches, expansion gaps and other transition points at which the bar code tape is not affixed interruption-free.
- Vertical travel if at least three bar code symbols are not completely in the reading field of the sensor at any given point in time.
- Vertical curve in which the bar code tape was separated at the marked cut marks for adapting to the curve.

NOTICE	
	<p>If the reading quality is influenced by the factors listed above, the reading quality can be reduced to as low as 0%.</p> <ul style="list-style-type: none"> ↳ This does not mean that the BPS is defective, but rather that the reading quality characteristics are reduced to as low as 0% in the given arrangement. ↳ If, at a reading quality of 0%, a position value is output, it is correct and valid.

NOTICE	
	<p>The values of the reading quality are displayed via the optional display (<i>Quality</i>), the serial communication protocol and via the webConfig tool (see chapter 9.3.3 "ALIGNMENT function").</p>

The evaluation of the reading quality provides the following information, e.g.:

- The reading quality is constantly bad: Soiling of the BPS optics
- The reading quality is always bad at certain position values: Soiling of the BCB

4.6 Distance measurement to the bar code tape

Within the reading field, the BPS can output the current distance from the read head to the BCB. The distance from the position label closest to the reference point is output.

The distance measurement value is output in the webConfig tool via the *ALIGNMENT* function (*Quality* menu), which is only available in the *Service* operating mode (see chapter 9.3.3 "ALIGNMENT function").

5 Applications

Wherever systems are moved automatically, it is necessary to uniquely determine their respective positions. In addition to mechanical measuring sensors, optical methods are particularly well suited for position determination as they can be used to determine position without mechanical wear and slippage.

Compared to common optical measurement techniques, the Leuze Bar code Positioning System (BPS) is able to measure a position with absolute sub-millimeter accuracy, i.e. independent of reference points. As a result, it is able to provide a unique position value at any time. With the highly flexible and hard-wearing Bar Code Tape (BCB), the system can even be used without problem in systems with curves or guide tolerances. And this at lengths of up to 10,000 meters.

The product family of Leuze bar code positioning systems convinces with a variety of advantages:

- The laser simultaneously scans three bar codes and, as a result, is able to determine the position with sub-millimeter accuracy. The wide reading field makes accurate position determination possible even in the event of minor damage to the tape.
- With the systems' flexible depth of field, it is also possible to bridge over mechanical deviations.
- Due to the large reading distance combined with the great depth of field, a large opening angle and a very compact construction, the device is ideally suited for the conveyor and storage technology market.
- The BPS devices are capable of simultaneously measuring position and speed and are thus also suitable for control tasks in your automation applications.
- Using a mounting device, the BPS can be mounted with millimeter accuracy with just one screw. If mounted using a mounting device, a new device is automatically aligned correctly should it be necessary to exchange a device (easy-mount).
- The unique encoding of the position value on the bar code tape allows the system to be put back into operation without problem even after a brief voltage drop without, e.g., needing to utilize a reference point.
- The Leuze bar code tape is very robust, highly flexible and, thanks to the self-adhesive back, can be easily integrated into your overall mechanical system. It can be fit optimally to both vertical as well as horizontal curved paths and thereby reliably facilitates trouble-free and reproducible measurement at any point in your system with sub-millimeter accuracy.

Typical applications for the BPS include:

- High-bay storage device (see chapter 5.1 "High-bay storage device")
- Electrical monorail system (see chapter 5.2 "Electrical monorail system")
- Gantry cranes (see chapter 5.3 "Gantry cranes")

5.1 High-bay storage device

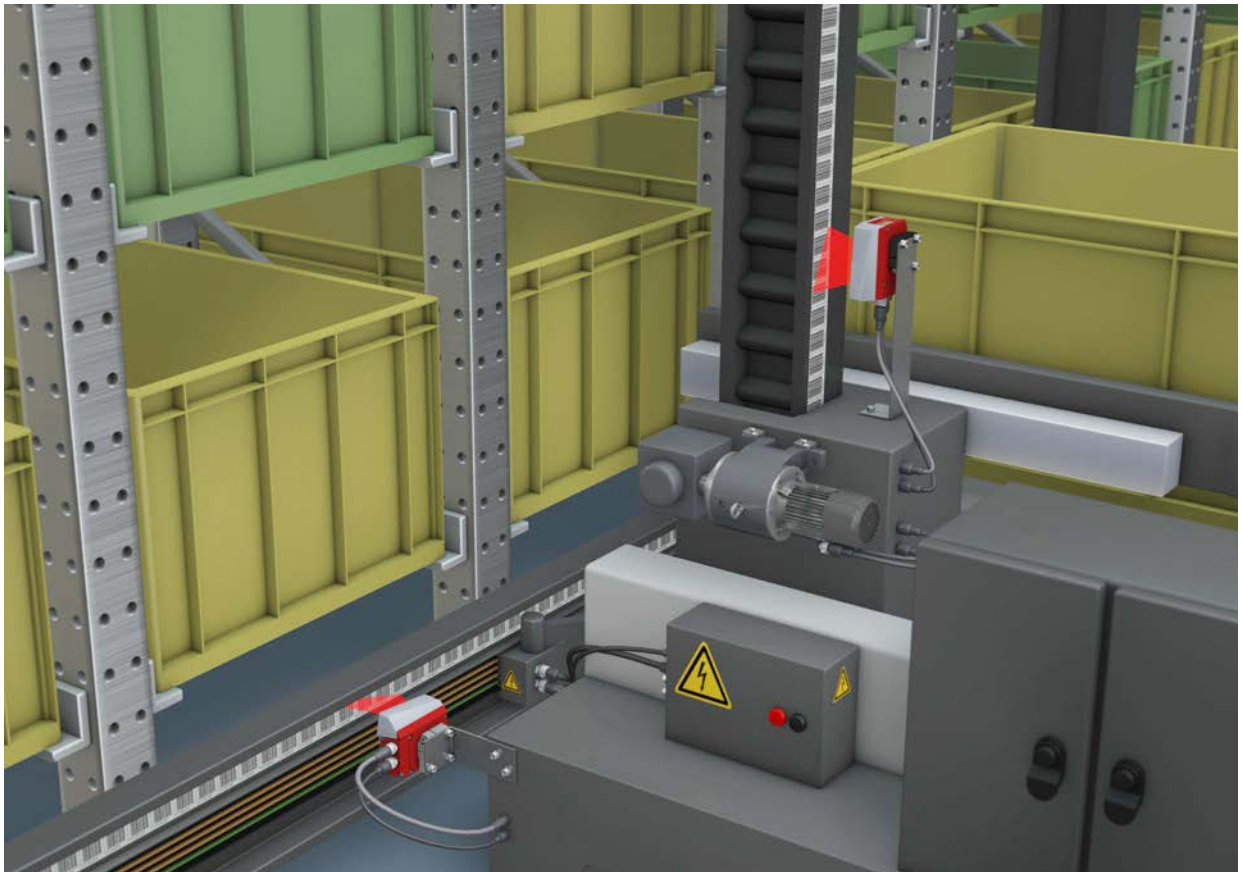


Fig. 5.1: High-bay storage device

- ↪ Simultaneous position and speed measurement for regulation tasks
- ↪ Precise positioning with a reproducibility of ± 0.15 mm
- ↪ Control at high traverse rates of up to 10 m/s

5.2 Electrical monorail system

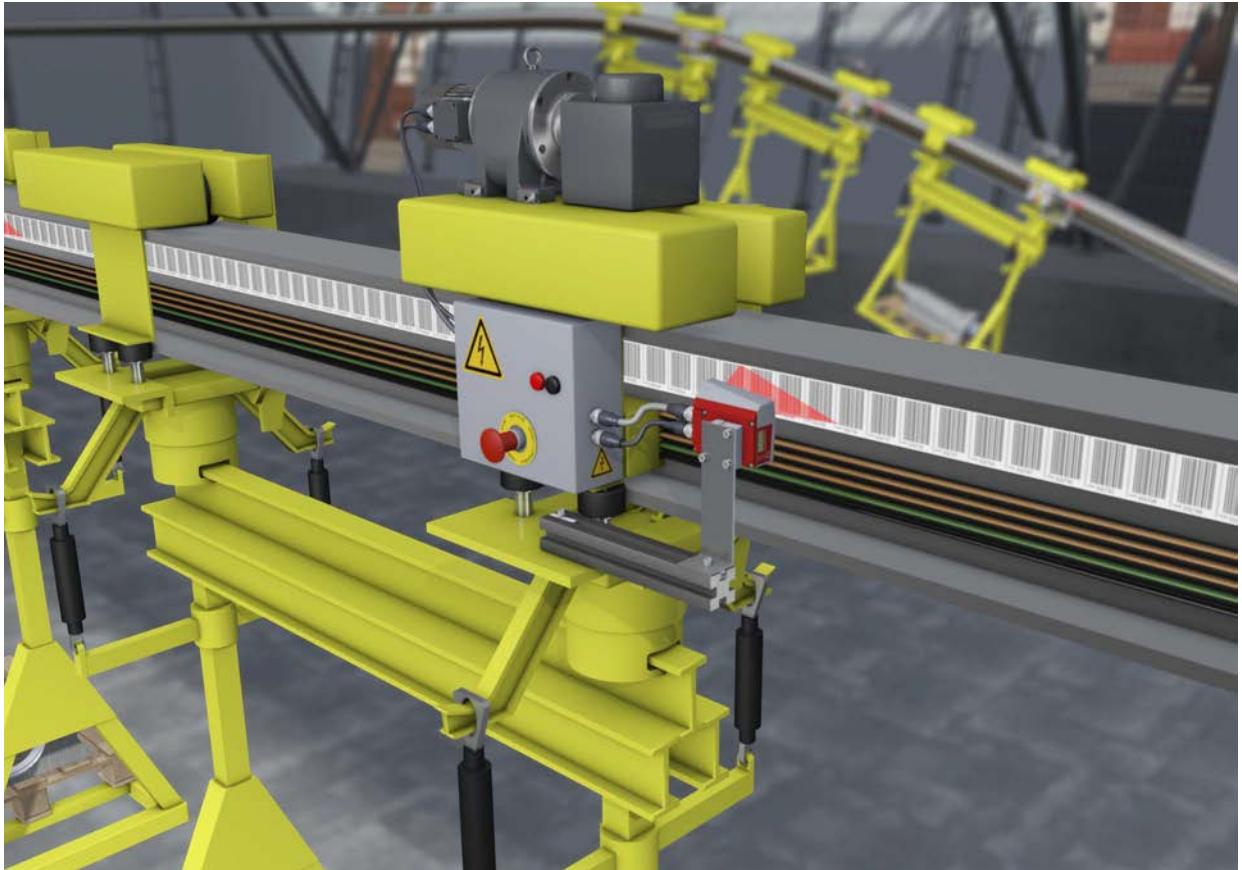


Fig. 5.2: Electrical monorail system

- ↪ Positioning from 0 to 10,000 meters
- ↪ The working range from 50 - 170 mm allows for mounting positions and reliable position detection at varying distances
- ↪ Control codes for changing to different position values at switches

5.3 Gantry cranes

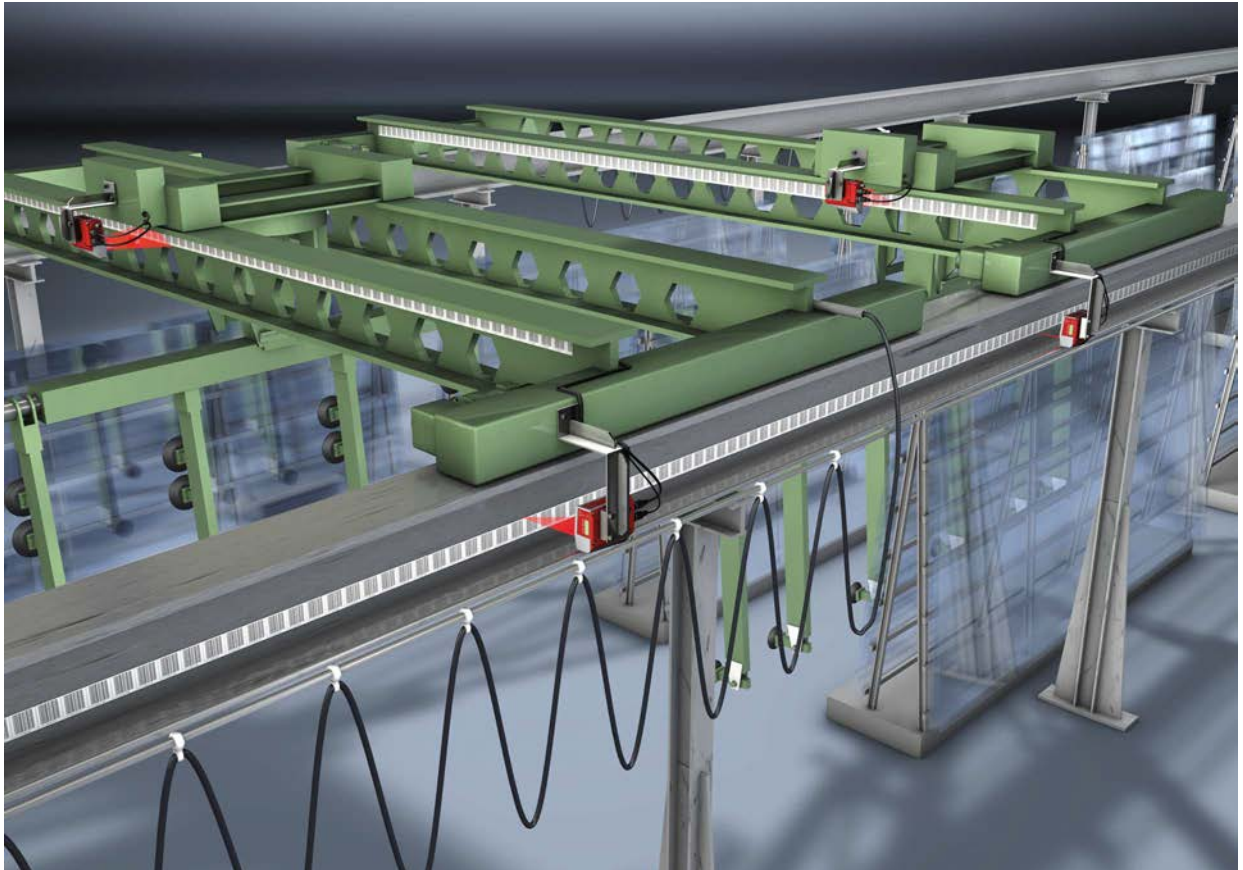




Fig. 5.3: Gantry cranes

- ↪ Scratch- and smudge-proof, UV-resistant bar code tapes
- ↪ Synchronous positioning with twin tapes on both rails
- ↪ Mounting device for fast, precise mounting with one screw

6 Mounting

6.1 Mounting bar code tape

6.1.1 Installation and application remarks

NOTICE	
	<p>BCB mounting</p> <ul style="list-style-type: none"> ↪ When processing BCBs, observe the specified processing temperatures. When processing BCBs in cold storage facilities, the BCB must be affixed before cooling the storage facility. However, if it should be necessary to affix the BCB at temperatures outside of the specified processing temperature, assure that the bonding surface as well as the BCB are at the processing temperature. ↪ Avoid dirt deposits on the BCB. If possible, affix the BCB vertically. If possible, affix the BCB below an overhead covering. The BCB must never be continuously cleaned by on-board cleaning devices such as brushes or sponges. Permanent on-board cleaning devices polish the BCB and give it a glossy finish. The reading quality deteriorates as a result. ↪ After affixing the BCBs, make certain that there are no polished, high-gloss surfaces in the scanning beam (e.g., glossy metal at gaps between the individual BCBs), as the measurement quality of the BPS may be impaired. Affix the BCBs to a diffusely reflective support, e.g., a painted surface. ↪ Avoid sources of extraneous light and reflections on the BCB. Ensure that neither strong sources of extraneous light nor reflections of the support on which the BCB is affixed occur in the vicinity of the BPS scanning beam. ↪ Affix the BCB over expansion joints up to a width of several millimeters. The BCB must not be interrupted at this location. ↪ Cover protruding screw heads with the BCB. ↪ Ensure that the BCB is affixed without tension. The BCB is a plastic tape that can be stretched by strong mechanical tension. Excessive mechanical stretching results in lengthening of the tape and distortion of the position values.
NOTICE	
	<p>BCB application</p> <ul style="list-style-type: none"> ↪ Make certain that the BCB is located in the scanning beam of the BPS over the entire traversing path. The BPS can determine the position on BCBs with arbitrary orientation. ↪ Bar code tapes with different value ranges may not directly follow one another. In the case of different value ranges, a gap of at least 1 m must be maintained between the position value of the last position bar code of the preceding BCB and the first position value of the first position bar code of the subsequent BCB (see chapter 3.4.2 "Control bar codes"). ↪ For <i>MVS/MV0</i> control bar codes (see chapter 3.4.2 "Control bar codes"), the minimum distance of 1 m between the last position bar code before the control bar code and the first position bar code after the control bar code must be maintained. ↪ For bar code tapes with different value ranges, both BCBs must correspond to the BCB type configured in the BPS (see chapter 3.4.1 "General information"). ↪ Avoid position bar code labels with the value <i>00000</i>. Measurements to the left of the center of a <i>00000</i> label produce negative position values that may not be displayed correctly.


6.1.2 Cutting bar code tapes

NOTICE

Avoid cutting BCB!

- ↪ If possible, avoid cutting bar code tapes. Optimum position value determination by the BPS is achieved with continuously affixed BCB.
- ↪ If there are mechanical gaps, first affix the BCB continuously. Then cut the BCB.

The BCB is cut at the indicated cut marks:

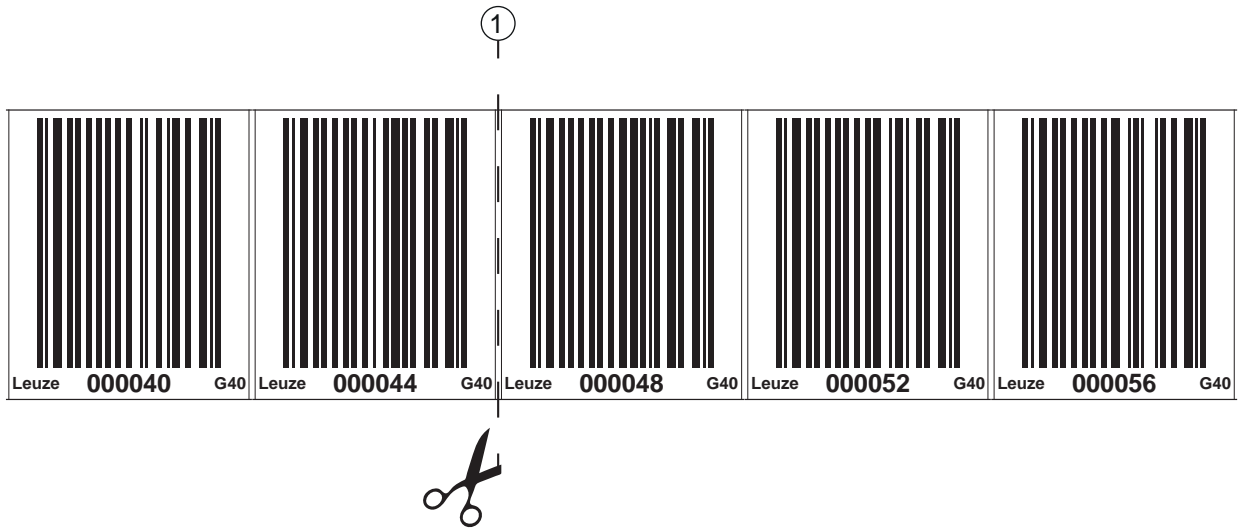

1 Cut mark

Fig. 6.1: Cut mark on the bar code tape


If another BCB is to be affixed directly after the preceding BCB, the subsequent bar code value must differ from the preceding BCB by at least 1 m:



- 1 Preceding bar code tape
- 2 Cut mark
- 3 Subsequent bar code tape, value range + 1 m

Fig. 6.2: Cut bar code tape

If there is a gap without tape after the preceding BCB, it must be at least 300 mm wide before the subsequent BCB is affixed. The first bar code value of the subsequent BCB must differ by at least 20 (200 mm) from the last bar code value of the preceding BCB.

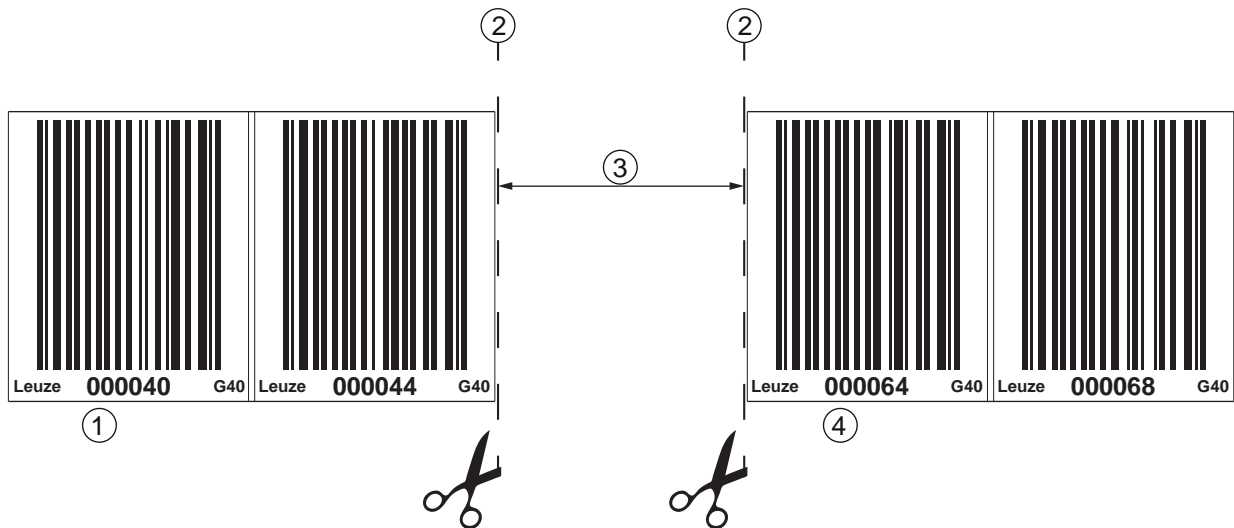

- 1 Preceding bar code tape
- 2 Cut mark
- 3 Gap, at least 300 mm
- 4 Subsequent bar code tape

Fig. 6.3: Gap in cut bar code tape to avoid double positions

NOTICE	
	<p>No glossy gaps in the cut bar code tape!</p> <p>↳ Ensure that there are matt, bright surfaces behind the gaps in the BCB. Polished, reflective, and high-gloss surfaces in the scanning beam may impair the measurement quality of the BPS.</p>

6.1.3 Mounting the BCB


Mount the BCB as follows:

- ↳ Check the surface.
It must be flat, free of grease and dust, and be dry.
- ↳ Define a reference edge (e.g., metal edge of the busbar).
- ↳ Remove the backing and affix the BCB along the reference edge tension free.
- ↳ Secure the bar code tape to the mounting surface by pressing down with the palm of your hand. When affixing, make certain that the BCB is free of folds and creases and that no air pockets form.


NOTICE	
	<p>When mounting, do not pull on the BCB!</p> <p>The BCB is a plastic tape that can be stretched by strong mechanical tension. The stretching results in lengthening of the tape and distortion of the position values on the BCB.</p> <p>While the BPS can still perform the position calculation in the event of distortions, the absolute measurement accuracy is no longer ensured in this case. If the values are taught using a teach-in process, stretching of the BCB is irrelevant.</p>

NOTICE	
	<p>If a bar code tape was damaged, e.g., by falling parts, you can download a repair kit for the BCB from the Internet (see chapter 11.2.2 "BCB repair with repair kit").</p> <p>↳ Use the bar code tape created with the repair kit only temporarily as an emergency solution.</p>

BCB mounting in horizontal curves

NOTICE	
	<p>Limited absolute measurement accuracy and reproducibility! BCB mounting in curves reduces the absolute accuracy of the BPS, since the distance between two bar codes is no longer exactly 40 mm or 30 mm due to optical distortions.</p>


↪ For horizontal curves, maintain a minimum bending radius of 300 mm.

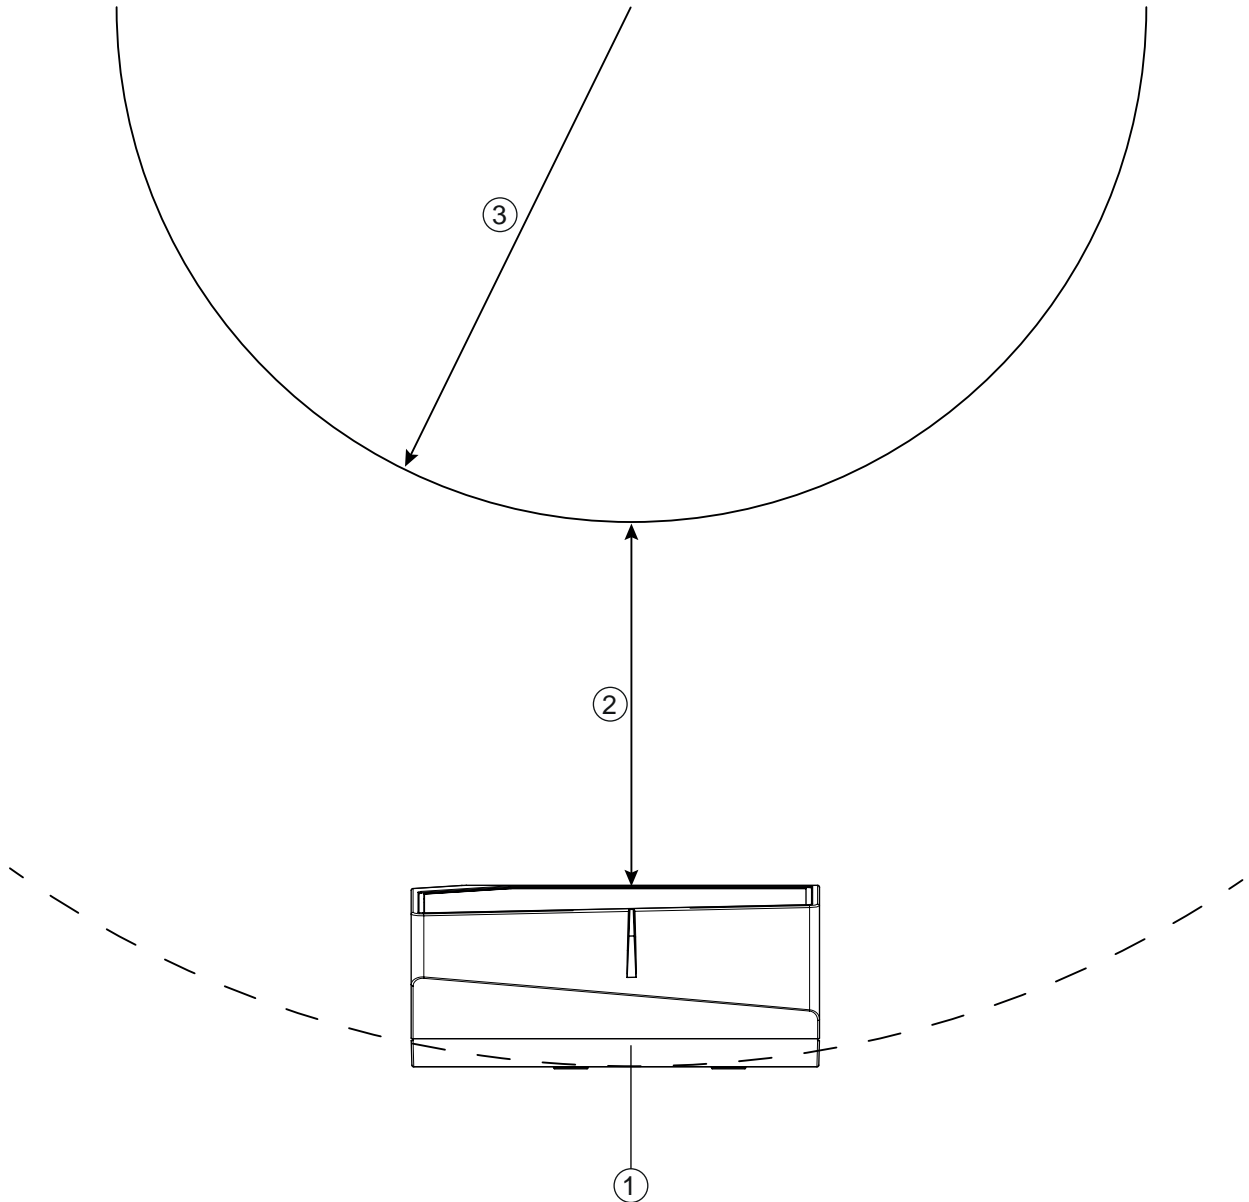

- 1 BPS
- 2 Reading distance
- 3 Radius of the bar code tape, $R_{\min} = 300 \text{ mm}$

Fig. 6.4: Mounting the bar code tape for use in horizontal curves

BCB mounting in vertical curves

NOTICE	
	<p>Limited absolute measurement accuracy and reproducibility! ↪ BCB mounting in curves decreases the absolute measurement accuracy of the BPS, since the distance between two bar codes is no longer exactly 40 mm or 30 mm. ↪ In areas where the BCB is fanned out around curves, limitations of the reproducibility must be expected.</p>

- ↪ Only partially cut the BCB at the cut mark.
- ↪ Affix the BCB along the curve like a fan.
- ↪ Ensure that the BCB is affixed without mechanical tension.

NOTICE

No glossy gaps in the bar code tape!

↪ Ensure that there are matt, bright surfaces behind the fanning in the BCB curves. Polished, reflective, and high-gloss surfaces in the scanning beam may impair the measurement quality of the BPS.


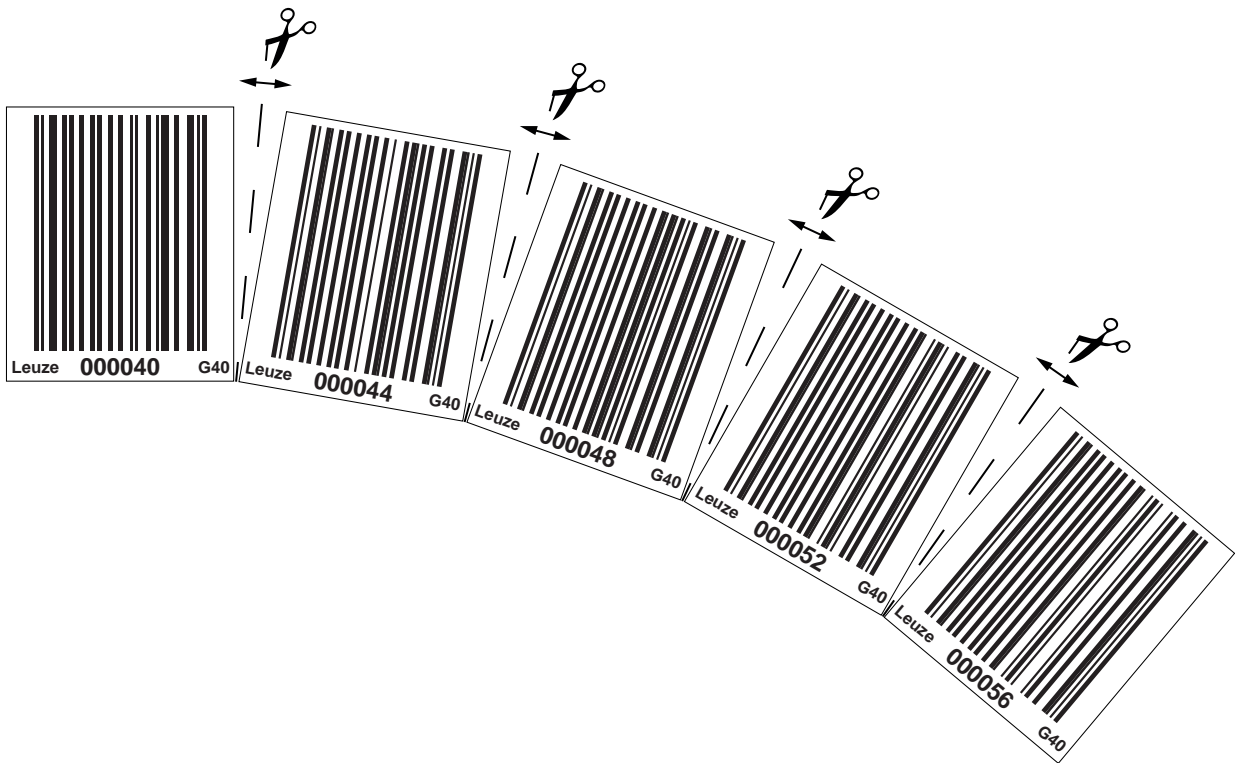


Fig. 6.5: Preparing the bar code tape for use in vertical curves

Mounting twin tapes


If two bar code tapes with the same value range are used for positioning, e.g., for crane systems or elevators, the use of twin tapes is recommended (see chapter 3.4.4 "Twin tapes").

Twin tapes are provided with duplicate numbering. As a result, it is not necessary to affix the BCBs upside down in order to have the same values at the same position.

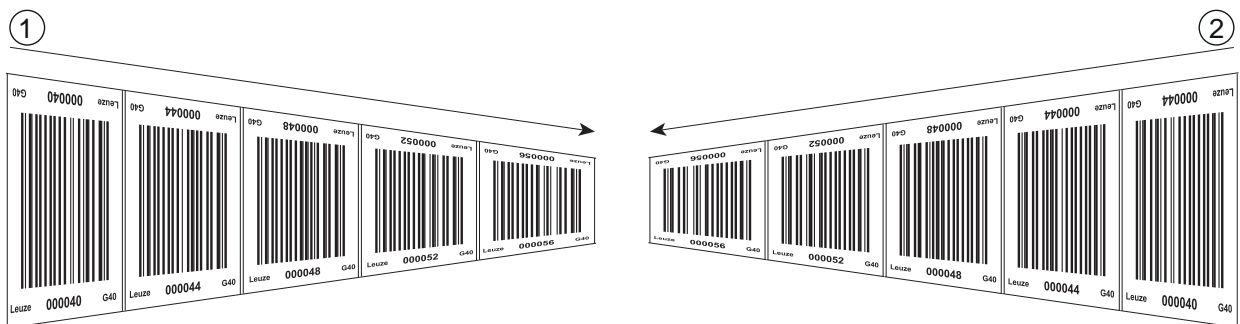


- 1 Twin bar code tape 1
- 2 Twin bar code tape 2

Fig. 6.6: Mounting twin bar code tapes

NOTICE	
	<p>A twin tape always consists of two bar code tapes.</p> <ul style="list-style-type: none"> ↪ When ordering twin tapes, two bar code tapes are always included with an order. ↪ The two twin bar code tapes have the exact same length tolerances relative to each other. ↪ Ensure that the BCB is affixed without tension. The BCB is a plastic tape that can be stretched by strong mechanical tension. Excessive mechanical stretching results in lengthening of the tape and distortion of the position values.


Mounting two bar code tapes with the same value range

For crane systems or elevators, two bar code tapes with the same value range are used for positioning.

NOTICE	
	<p>If two bar code tapes with the same value range and the same length tolerances are needed, the use of twin tapes is recommended (see chapter 3.4.4 "Twin tapes").</p>

If a twin tape is not used: To have the same values at the same position, one bar code tape must be affixed with numbers upside down while the other is affixed normally.

If twin bar code tapes are not used, the two bar code tapes may deviate +/- 1 mm per meter relative to one another.

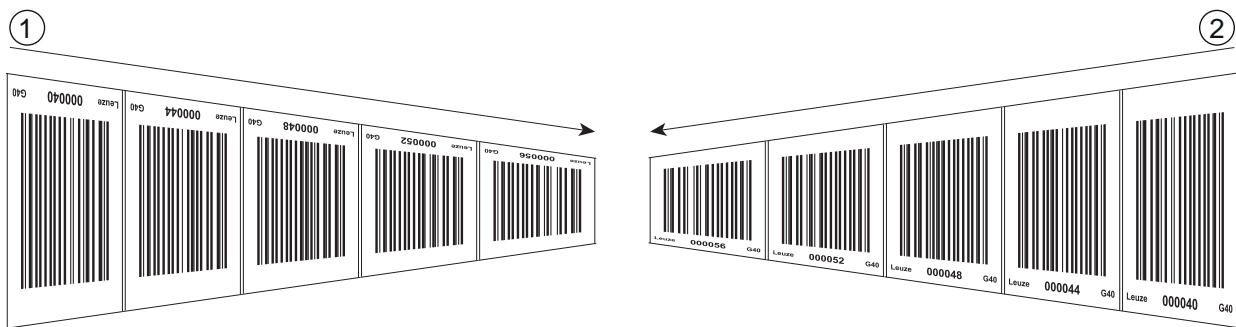


- 1 BCB affixed upside down
- 2 BCB affixed normally

Fig. 6.7: Affixing two bar code tapes with the same value range


6.2 Mounting the bar code positioning system


The BPS can be mounted in the following ways:

- Mounting using a mounting device on the fastening grooves
 - BTU 0300M-W: Wall mounting
 - BT 56: Mounting on a rod
- Mounting using a mounting device on the M4 mounting threads on the rear of the device
 - BT 300 W: Mounting on a mounting bracket
 - BT 300-1: Mounting on a rod
- Mounting using four M4 mounting threads on the rear of the device

NOTICE	
	<p>If the BTU 0300M-W mounting device is used to mount the device, the new device is automatically aligned correctly should it be necessary to exchange a device.</p>

6.2.1 Mounting instructions

NOTICE	
	<p>Select the mounting location.</p> <ul style="list-style-type: none"> ↪ Make certain that the required environmental conditions (humidity, temperature) are maintained. ↪ Make certain that the distance between BPS and bar code tape is sufficiently large. The scanning beam of the BPS should cover three or more bar codes. The distance between BPS and bar code tape must be in the working range of the reading field curve. ↪ Make certain that the exit window does not become soiled, e.g., by leaking liquids, abrasion from cardboard packaging or residues from packaging material. ↪ Mounting the BPS outdoors or with BPS with integrated heating: Mount the BPS in a way which provides maximum thermal isolation, e.g., using rubber-bonded metal. Mount the BPS so that it is protected from airflow, e.g., in a protective housing. ↪ Mounting the BPS in a protective housing: When installing the BPS in a protective housing, ensure that the scanning beam can exit the protective housing without obstruction. ↪ Make certain that the working range determined from the scanning curve is adhered to at all locations where a position determination is to be made. ↪ Ensure that the scanning beam is always incident on the BCB when the system is moving. For the position calculation, the scanning beam of the BPS must be incident on the BCB without interruption. For the best functionality, the BPS must be guided parallel to the BCB. It is not permitted to move outside of the approved working range of the BPS (50 ... 170 mm) while the system is in motion. ↪ Make certain that there is only one control bar code (or marker label) in the scanning beam at a time. The minimum distance between two control bar codes is determined by the distance between the BPS and bar code tape and the resulting length of the scanning beam.

NOTICE	
	<p>For parallel mounting, maintain the minimum distance!</p> <ul style="list-style-type: none"> ↪ Maintain the minimum distance of 300 mm if you mount two BPS next to or above one another.


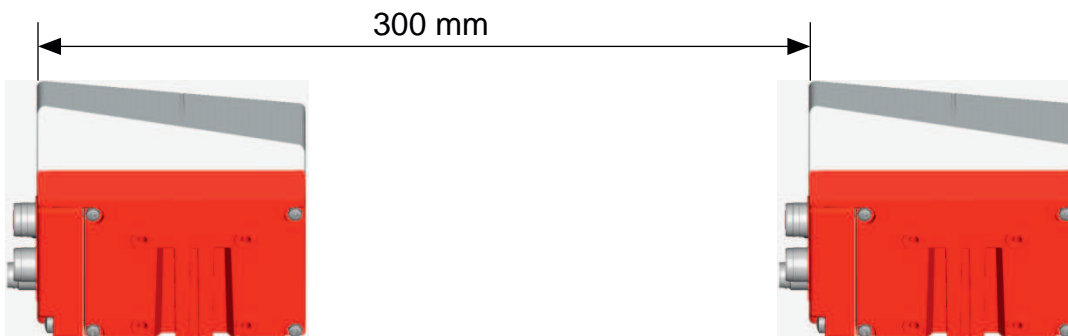


Fig. 6.8: Minimum distance for parallel mounting

6.2.2 Orientation of the BPS to the bar code tape

The beam of the BPS must be oriented at an incline of 7° to the bar code tape (see following figure). When positioning, make certain that the angle of radiation to the rear side of the housing is 90° and the reading distance to the bar code tape is maintained.

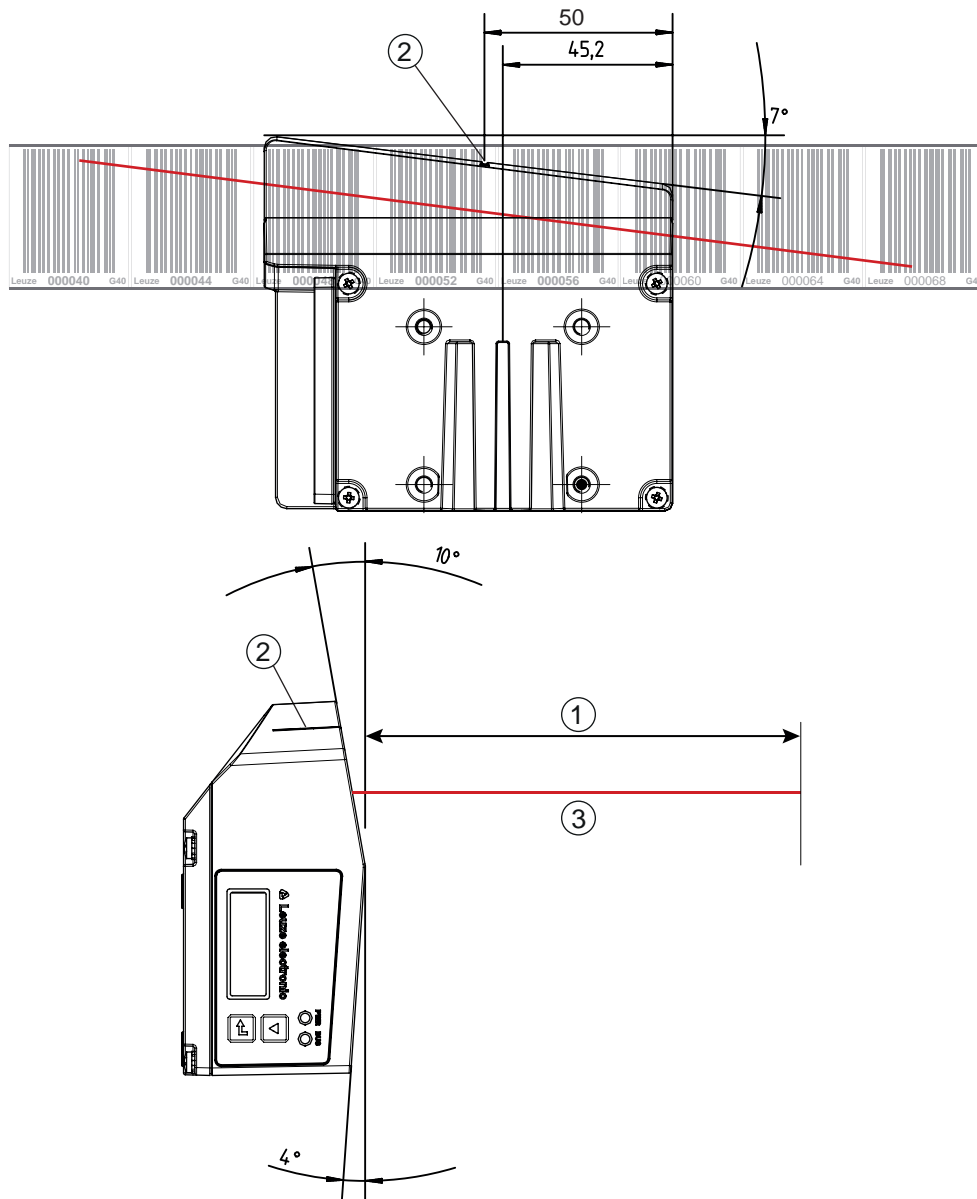


- 1 Reading distance
- 2 Reference point for the bar code position
- 3 Scanning beam

Fig. 6.9: Beam exit

6.2.3 Mounting with the BTU 0300M-W mounting device

Mounting the BPS with a BTU 0300M-W mounting device is intended for wall mounting.

For ordering information see chapter 14 "Order guide and accessories"; for dimensioned drawing see chapter 13.4 "Dimensioned drawings: Accessories".

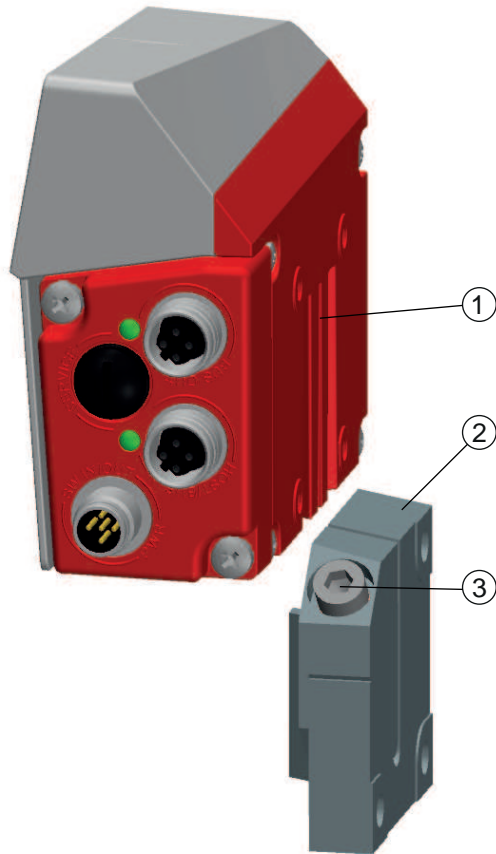

- 1 Clamp profile
- 2 Clamping jaws
- 3 Screw terminal

Fig. 6.10: Mounting the BPS with the BTU 0300M-W mounting device

- ↗ Mount the BTU 0300M-W on the system side with M6 fastening screws (not included in delivery contents).
- ↗ Mount the BPS with the dovetail fastening grooves on the clamping jaws of the BTU 0300M-W with limit stop at end.
- ↗ Secure the BPS with the M6 screw terminal.
Maximum tightening torque for the M6 screw terminal: 8 Nm

6.2.4 Mounting with the BT 300 W mounting bracket

Mounting of the BPS with a BT 300 W mounting bracket is intended for wall mounting.

For ordering information see chapter 14 "Order guide and accessories"; for dimensioned drawing see chapter 13.4 "Dimensioned drawings: Accessories".

- ↗ Mount the BT 0300 W mounting bracket on the system side with M6 fastening screws (included in delivery contents).
- ↗ Mount the BPS on the mounting bracket with M4 fastening screws (included in delivery contents).
Maximum tightening torque of the M4 fastening screws: 2 Nm

6.2.5 Mounting with BT 56 mounting device

Mounting of the BPS with a BT 56 mounting device is intended for rod mounting.

For ordering information see chapter 14 "Order guide and accessories"; for dimensioned drawing see chapter 13.4 "Dimensioned drawings: Accessories".

- ↗ Mount the BT 56 on the rod with the clamp profile (system-side).
- ↗ Mount the BPS with its fastening grooves on the clamping jaws of the BT 56 with limit stop at end.
- ↗ Secure the BPS with the M6 screw terminal.
Maximum tightening torque for the M6 screw terminal: 8 Nm


6.2.6 Mounting with BT 300-1 mounting device

Mounting of the BPS with a BT 300-1 mounting device is intended for rod mounting.

For ordering information see chapter 14 "Order guide and accessories"; for dimensioned drawing see chapter 13.4 "Dimensioned drawings: Accessories".

- ↪ Mount the BT 300-1 mounting device with the clamp profile on the rod (system-side).
- ↪ Mount the BPS on the mounting bracket of the BT 300-1 with M4 fastening screws (included in delivery contents).
Maximum tightening torque of the M4 fastening screws: 2 Nm

6.2.7 Mounting with M4 fastening screws

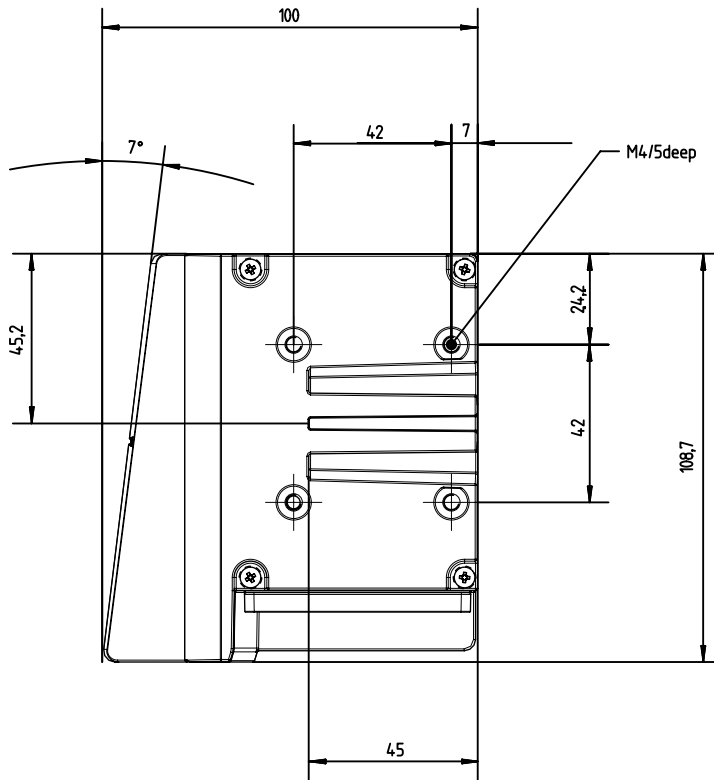


all dimensions in mm


Fig. 6.11: Dimensioned drawing of rear of BPS


- ↪ Mount the BPS on the system with M4 fastening screws (not included in delivery contents).
Maximum tightening torque of the fastening screws: 2 Nm


7 Electrical connection

 **CAUTION**


 Before connecting the device, be sure that the supply voltage agrees with the value printed on the name plate.

 Only allow competent persons to perform the electrical connection.



 Ensure that the functional earth (FE) is connected correctly. Fault-free operation is only guaranteed if the functional earth is connected properly.

 If faults cannot be rectified, take the device out of operation. Protect the device from accidentally being started.





 **CAUTION**

 **UL applications!**
For UL applications, use is only permitted in Class 2 circuits in accordance with the NEC (National Electric Code).


NOTICE

 **Protective Extra Low Voltage (PELV)**
 The BPS is designed in accordance with protection class III for supply with PELV (protective extra-low voltage).

NOTICE

 **Connection hood and degree of protection IP 65**
 Before connecting, mount the connection hood on the BPS device housing.
 To ensure degree of protection IP 65 is fulfilled, the screws of the connection hood are tightened with a tightening torque of 1.4 Nm for connecting to the BPS.
 Degree of protection IP 65 is not fulfilled until connectors or cable bushings are screwed on and caps are installed.

NOTICE

 For all connections (connection cable, interconnection cable, etc.), use only the cables listed in the accessories (see chapter 14 "Order guide and accessories").




7.1 External parameter memory in the connection hood

The MS 301 and MK 301 connection hoods store the bus address and keep a copy of the current BPS parameter set ready.

- When the BPS is exchanged on-site, the bus address does not have to be re-set; it stays in the connection hood. The bus is not interrupted when the device is exchanged. BUS IN and BUS OUT are connected in the MS 301 and safeguard the operation of the bus even in the case of device replacement.
- The two address switches located in the MS 301 and MK 301 connection hoods are used to set the bus address of the BPS 301i.


If the BPS 301i is the last participant on the bus cable, the BUS OUT socket on the MS 301 must be provided with a terminator plug (see chapter 14.3 "Accessory terminating resistor") or the bus termination on the MK 301 must be activated with slide switch T.

NOTICE

 **No parameter memory and no configuration switches in connection hood KB 301-3000!**
 No parameter memory is integrated in connection hood KB 301-3000.
 Connection hood KB 301-3000 does not include any switches for configuring the BPS.


7.2 MS 301 connection hood with connectors


The MS 301 connection hood features three M12 connector plugs and a Mini-B type USB socket as a service interface.

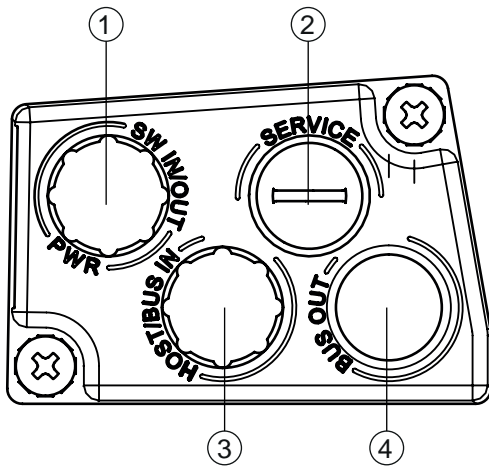

- 1 PWR / SW IN/OUT: M12 plug (A-coded)
- 2 SERVICE: Mini-B USB socket (behind protective cap)
- 3 HOST / BUS IN: M12 plug (B-coded), RS 485
- 4 BUS OUT: M12 socket (B-coded), RS 485

Fig. 7.1: MS 301 connection hood, connections

NOTICE	
	<p>Shielding connection and functional earth connection!</p> <ul style="list-style-type: none"> ↪ The shielding connection is done via the M12 connector housing. ↪ Ensure that the functional earth (FE) is connected correctly. Unimpaired operation is only guaranteed when the functional earth is connected properly. All electrical disturbances (EMC couplings) are discharged via the functional earth connection.


NOTICE	
	<p>Bus interruption and bus termination!</p> <ul style="list-style-type: none"> ↪ The bus is looped through the MS 301, i.e. the bus is not interrupted when the BPS is removed from the MS 301. ↪ The bus is terminated at BUS OUT via an external mounted terminating resistor (see chapter 14.3 "Accessory terminating resistor"). If the termination is activated, the downstream bus cable is disconnected.

- ↪ Connect connection PWR / SW IN/OUT to the supply voltage or the switching inputs/outputs connection cable.
- ↪ Connect the HOST / BUS IN connection to the BUS OUT connection of the upstream BPS with the interconnection cable.
- ↪ Connect the BUS OUT connection to the HOST / BUS IN connection of the downstream BPS with the interconnection cable.
- ↪ If the current BPS 301i is the last bus participant, connect a terminating resistor to connection BUS OUT.

7.3 MK 301 connection hood with spring-cage terminals




With the MK 301 connection hood, the BPS is connected directly and with no additional plug.

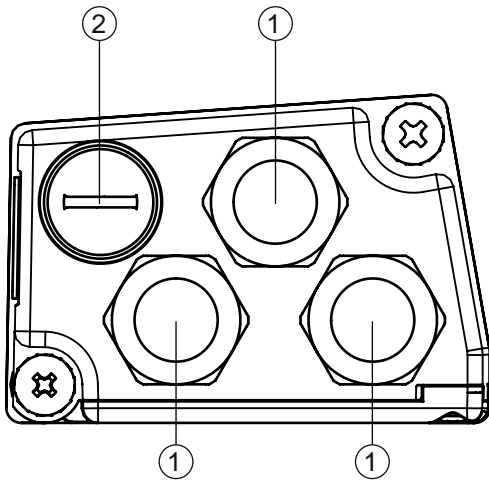- The MK 301 features three cable bushings in which the shielding connection for the interface cable is also located.
- A Mini-B type USB socket is used for service purposes.



- 1 3x cable bushing, M16 x 1.5
- 2 SERVICE: Mini-B USB socket (behind protective cap)


Fig. 7.2: Connection hood MK 301, connections

NOTICE	
	<p>Cable fabrication!</p> <p>↪ We recommend against using wire-end sleeves.</p>
NOTICE	
	<p>Functional earth connection!</p> <p>↪ Ensure that the functional earth (FE) is connected correctly. Unimpaired operation is only guaranteed when the functional earth is connected properly. All electrical disturbances (EMC couplings) are discharged via the functional earth connection.</p>
NOTICE	
	<p>Bus interruption and bus termination!</p> <p>↪ The bus is looped through the MK 301, i.e. the bus is not interrupted when the BPS 301i is removed from the MK 301.</p> <p>↪ The bus is terminated via slide switch T in the MK 301. If the termination is activated (slide switch T in the ON position), the downstream bus cable is disconnected.</p>

- ↪ Connect the connection PWR / SW IN/OUT to the supply voltage or the switching inputs/outputs connection cable.
- ↪ Connect the HOST / BUS IN connection to the BUS OUT connection of the upstream BPS with the interconnection cable.
- ↪ Connect the BUS OUT connection to the HOST / BUS IN connection of the downstream BPS with the interconnection cable.
- ↪ If the current BPS 301i is the last bus participant, set slide switch T to ON to activate bus termination.

7.4 KB 301-3000 connection hood with cable

Connection hood KB 301 features a connection cable and a Mini-B type USB socket as service interface.

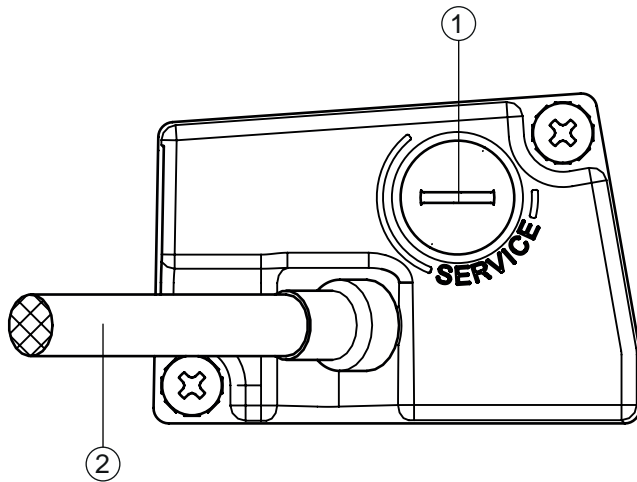

- 1 SERVICE: Mini-B USB socket (behind protective cap)
- 2 Connection cable

Fig. 7.3: Connection hood KB 301-3000

- ↪ Remove the system plug (JST) at the end of the cable.
- ↪ Connect the connection cable to your interface.

7.5 Pin assignment

7.5.1 PWR / SW IN/OUT (Power and switching input/output)

5-pin, M12 plug (A-coded) or terminal block for connecting to PWR / SW IN/OUT.

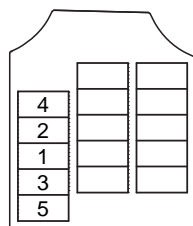
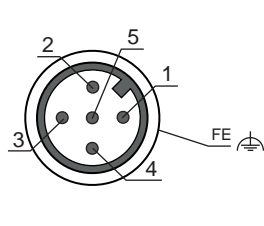




Fig. 7.4: PWR / SW IN/OUT connection

Tab. 7.1: PWR / SW IN/OUT pin assignment

Pin/terminal	Designation	Assignment
1	VIN	+18 ... +30 VDC supply voltage
2	SWIO1	Sw. input/output 1 (configurable)
3	GNDIN	Negative supply voltage (0 VDC)
4	SWIO2	Sw. input/output 2 (configurable)
5	FE	Functional earth
Thread (M12 connector) Cable gland	Functional earth	Connection cable shield. The shield of the connection cable is on the thread of the M12 plug or on the screw fitting of the cable bushing. The thread or the screw fitting is part of the metallic housing. The housing is at the potential of the functional earth via pin 5.

Connection cables: see chapter 14 "Order guide and accessories"


 CAUTION	
	<p>UL applications! For UL applications, use is only permitted in Class 2 circuits in accordance with the NEC (National Electric Code).</p>


Switching input/output


The BPS is equipped with two, freely programmable, optically decoupled switching inputs/outputs, SWIO1 and SWIO2.


- The switching inputs can be used to activate various internal functions of the BPS (e.g., Measurement Stop/Start, Teach Preset, Reset Preset).
- The switching outputs can be used to signal the state of the BPS and to implement external functions independent of the superior control (e.g. position value/speed value invalid, position and speed limit value exceeded, device error).
- The control can use switching inputs/outputs as digital I/Os.


If no internal BPS function is connected to the switching inputs/outputs, the ports can be addressed as two inputs, two outputs or as one input and one output of a digital I/O component.

NOTICE	
	<p>The function as input or output is set via the webConfig configuration tool (CONFIGURATION > DEVICE > Switching inputs/outputs, see chapter 9.3.4 "CONFIGURATION function").</p>

NOTICE	
	<p>Maximum input current ↳ The input current of the respective switching input is maximum 8 mA.</p>

NOTICE	
	<p>Maximum loading of the switching outputs ↳ Do not load the respective switching output of the BPS with more than 60 mA at + 18 ... 30 VDC in normal operation. ↳ Each configured switching output is short-circuit proof.</p>

NOTICE	
	<p>The two switching inputs/outputs, SWIO1 and SWIO2, are configured as follows by default: Switching output SWIO1: Position value invalid Switching input SWIO2: Teach Preset</p>

NOTICE	
	<p>SWIO1 and SWIO2 as switching output ↳ At the outputs of the BPS (SWIO1 and SWIO2), no switching outputs may be connected from external sensors/devices. The switching output of the BPS may otherwise malfunction.</p>

7.5.2 RS 485 (HOST / BUS IN)

5-pin, M12 plug (B-coded) or terminal block for connecting to an RS 485 interface.

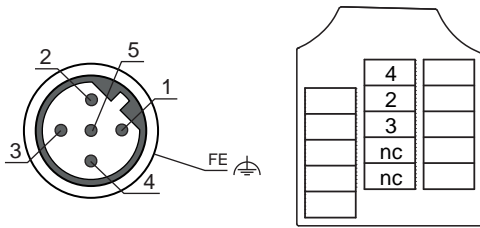


Fig. 7.5: RS 485 connection

Tab. 7.2: RS 485 pin assignment (HOST / BUS IN)

Pin/terminal	Designation	Assignment
1	n.c.	Not connected
2	RS485B	RS 485 B signal line
3	GND_ISO	RS 485 reference ground Potential equalization
4	RS485A	RS 485 A signal line
5	FE	Functional earth Shield
Thread (M12 connector) Cable gland	Functional earth (housing)	Connection cable shield. The shield of the connection cable is on the thread of the M12 plug or on the screw fitting of the cable bushing. The thread or the screw fitting is part of the metallic housing. The housing is at the potential of the functional earth via pin 5.

NOTICE

Use ready-made cables!

↳ If possible, use the ready-made cables from Leuze (see chapter 14.4 "Cables accessories").

NOTICE

Self-configured cables with RS 485 interface!

↳ Ensure adequate shielding.
The entire interconnection cable must be shielded and earthed.

↳ The RS 485 signal lines must be stranded in pairs.

7.5.3 BUS OUT (bus output, RS 485)

For the creation of an RS 485 network with multiple participants, the BPS is equipped with the outgoing BUS OUT RS 485 interface. All other BPS devices can be connected in series to the first BPS.

5-pin, M12-socket (B-coded) or terminal block for connection to BUS OUT.

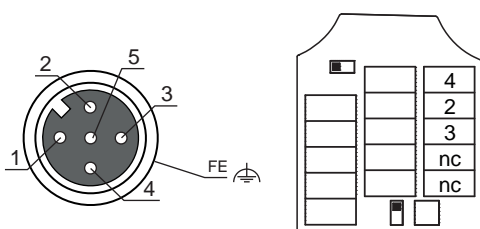


Fig. 7.6: BUS OUT connection

Tab. 7.3: BUS OUT pin assignment

Pin/terminal	Designation	Assignment
1	VCC485	+5 V for bus termination
2	RS485B	RS 485 B signal line
3	GND_ISO	RS 485 reference ground Potential equalization
4	RS485A	RS 485 A signal line
5	FE	Functional earth
Thread (M12 connector) Cable gland	Functional earth (housing)	Connection cable shield. The shield of the connection cable is on the thread of the M12 plug or on the screw fitting of the cable bushing. The thread or the screw fitting is part of the metallic housing. The housing is at the potential of the functional earth via pin 5.

NOTICE**Use ready-made cables!**

↪ If possible, use the ready-made cables from Leuze (see chapter 14.4 "Cables accessories").

NOTICE**Self-configured cables with RS 485 interface!**

- ↪ Ensure adequate shielding.
The entire interconnection cable must be shielded and earthed.
- ↪ The RS 485 signal lines must be stranded in pairs.

NOTICE**BUS OUT termination necessary at the last BPS bus participant!**

If the termination is activated, the downstream bus cable is disconnected.

- ↪ Terminate the last physical RS 485 participant on the MS 301 connection hood with a terminating resistor on the BUS OUT socket (see chapter 14.3 "Accessory terminating resistor").
- ↪ Terminate the last physical RS 485 participant on the MK 301 connection hood with slide switch T (ON position).

7.5.4 KB 301-3000 connection cable (RS 485)

Tab. 7.4: KB 301-3000 connection cable

Pin	Designation	Assignment
WH	FE	Functional earth
WH-BK	GNDIN	Negative supply voltage (0 VDC)
BK	VIN	+18 ... +30 VDC supply voltage
WH-GN	SWIO2	Sw. input/output 2 (configurable)
GY	SWIO1	Sw. input/output 1 (configurable)
WH-YE	Reserved	---
WH-RD	RS485B	RS 485 B signal line
YE	Reserved	---


Pin	Designation	Assignment
RD	RS485A	RS 485 A signal line
VT	GND_ISO	RS 485 reference ground Potential equalization
BN	MNA 0	MNA 0 address setting
WH-BN	MNA 1	MNA 1 address setting
OG	MNA 2	MNA 2 address setting
WH-OG	MNA 3	MNA 3 address setting
GN	MNA 4	MNA 4 address setting
BU	Reserved	---

RS 485 address setting via connection cable KB 301-3000

The RS 485 address (0 ... 15) is set via the signals or individual conductors MNA0 to MNA4. The signals are low-active.


Signal	MNA4 GN	MNA3 WH-OG	MNA2 OG	MNA1 WH-BN	MNA0 BN
0	High	High	High	High	High
1	High	High	High	High	Low
2	High	High	High	Low	High
3	High	High	High	Low	Low
4	High	High	Low	High	High
5	High	High	Low	High	Low
6	High	High	Low	Low	High
7	High	High	Low	Low	Low
8	High	Low	High	High	High
9	High	Low	High	High	Low
10	High	Low	High	Low	High
11	High	Low	High	Low	Low
12	High	Low	Low	High	High
13	High	Low	Low	High	Low
14	High	Low	Low	Low	High
15	High	Low	Low	Low	Low

7.5.5 Service USB

NOTICE	
	<p>PC connection!</p> <ul style="list-style-type: none"> ↳ The service USB interface of the BPS can be connected to the USB interface on the PC with a standard USB cable (plug combination - Mini-B type / Type A). ↳ If possible, use the specific USB service cable from Leuze (see chapter 14.4 "Cables accessories").

5-pin, Mini-B plug for connecting to the service USB.

Tab. 7.5: Service USB pin assignment

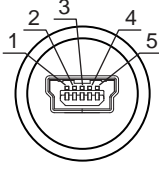	Pin	Designation	Assignment
	1	VB	Sense input
	2	D-	Data -
	3	D+	Data +
	4	ID	Not connected
	5	GND	Ground

NOTICE**Self-configured cables!**

- ↳ The entire USB interconnection cable must absolutely be shielded acc. to the USB specifications.
- ↳ The maximum cable length of 3 m must not be exceeded.

7.6 Cable lengths and shielding

Observe the maximum cable lengths and the shielding types:

Connection	Interface	Max. cable length	Shielding
BPS service	USB	3 m	Shielding absolutely necessary acc. to USB specifications
BPS host	RS 485	1200 m	Shielding absolutely necessary RS 485 conductors, stranded in pairs
Network from the first BPS to the last network participant	RS 485	1200 m	Shielding absolutely necessary RS 485 conductors, stranded in pairs
Switching input		10 m	Not necessary
Switching output		10 m	Not necessary
BPS power supply unit		30 m	Not necessary

8 Starting up the device – Basic configuration

The BPS is configured via the webConfig tool (see chapter 9 "Starting up the device – webConfig tool"). The bus address is set via the address switch of the MS 301 or MK 301 connection hood.

8.1 Configuring RS 485 interface

General information

The BPS 301i features an integrated RS 485 interface for connecting to the host system. With this interface, the BPS 301i can be used in the RS 485 network. To connect additional participants, the HOST / BUS IN interface is physically looped through to the BUS_OUT connection.

The baud rate for serial communication is set via the webConfig tool: 4,800 ... 115,200 baud.

NOTICE



Activation/deactivation/configuration of the interface with the webConfig tool!

↪ The RS 485 interface can only be activated, deactivated and configured via the webConfig tool (see chapter 9.3.4 "CONFIGURATION function").

Factory settings of the interface parameters

- Baud rate: 38,400 baud
Value range: 4,800 ... 115,200 baud
- Data format: 8N1
Value range: 8N1, 8E1, 8O1, 8N2

Setting the configuration of the interface

↪ Set the parameters for the RS 485 interface via the webConfig tool.
CONFIGURATION > COMMUNICATION (see chapter 9.3.4 "CONFIGURATION function").

8.2 Setting the bus address

The bus address is set on the MS 301 or MK 301 connection hood with the rotary switch:

The RS 485 bus address must be individually set for each BPS 301i on the connection hood. On delivery, the bus address is set to 0.

NOTICE



Bus addresses!


↪ Only select bus addresses between 0 and 15.
The BPS 301i only supports bus addresses 0 ... 15.

NOTICE




Bus termination!

- ↪ Connection hood MS 301: terminate the last physical bus participant with a terminating resistor on the BUS OUT socket (see chapter 14.3 "Accessory terminating resistor").
- ↪ Connection hood MK 301: terminate the last physical bus participant with slide switch T on the connection hood (ON position).

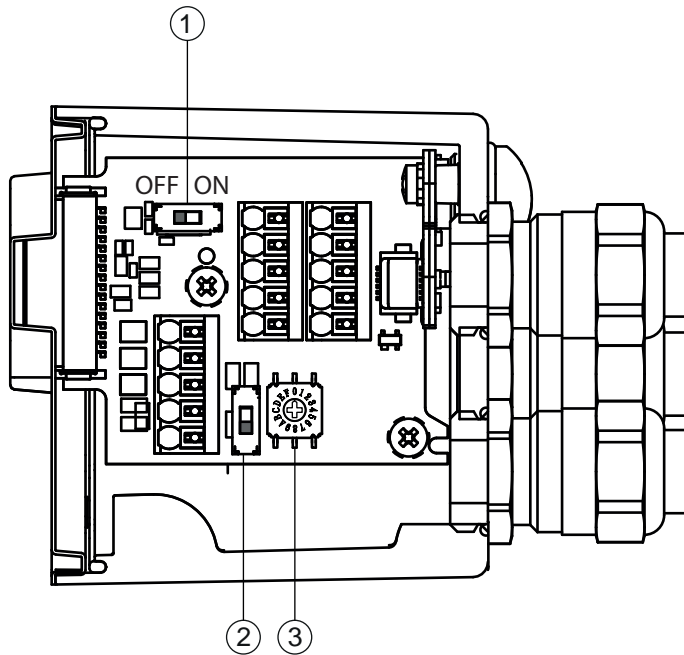

- 1 Slide switch T, bus termination
- 2 Slide switch S1, address range (low = 0 ... 15, high = 16 ... 31)
- 3 Slide switch S2, address

Fig. 8.1: MK 301 connection hood, setting of the RS 485 address

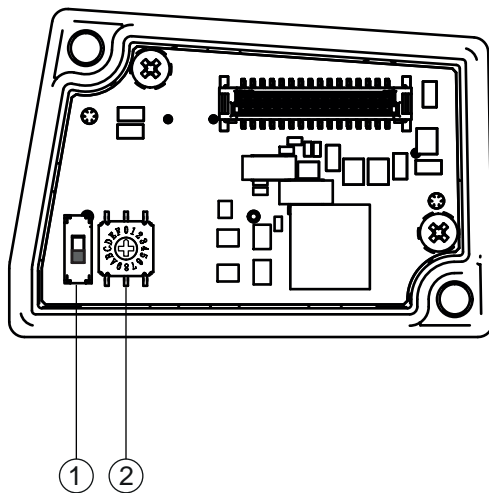

- 1 Slide switch S1, address range (low = 0 ... 15, high = 16 ... 31)
- 2 Slide switch S2, address

Fig. 8.2: MS 301 connection hood, setting of the RS 485 address

8.3 Configuring the switching inputs/outputs

- ↗ Set the configuration of the switching inputs/outputs via the webConfig tool.
CONFIGURATION > DEVICE (see chapter 9.3.4 "CONFIGURATION function")

8.4 Configuring the resolution for the position value

- ↗ Set the parameters for the resolution during position measurement via the webConfig tool.
CONFIGURATION > OUTPUT (see chapter 9.3.4 "CONFIGURATION function")

8.5 Configuring speed monitoring with switching output

- ↗ Set the parameters for speed monitoring via the webConfig tool.
- ↗ *Switching output* function: **CONFIGURATION > DATA PROCESSING > Speed > Monitoring** (see chapter 9.3.4 "CONFIGURATION function")

⇒ Speed limit values: **CONFIGURATION > DATA PROCESSING > Speed > Monitoring** (see chapter 9.3.4 "CONFIGURATION function")

8.6 Setting tape selection via the webConfig tool

✎ In the webConfig tool (**CONFIGURATION > MEASUREMENT DATA > Bar code tape**), set the *Tape selection* parameter according to the used bar code tape grid (see chapter 9.3.4 "CONFIGURATION function").

- 30 mm grid
- 40 mm grid

8.7 Communication protocol (RS binary protocol)

The RS binary protocol consists of three bytes of request telegram and seven or nine bytes of response telegram.

Request telegram

The request for transmitting the measured positions or the speed is controlled via a request telegram that is three bytes long.

The BPS processes the three bytes of the request telegram, checks the XOR link and executes the function specified in the command byte.

Tab. 8.1: Structure of the request telegram

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	1	1	0	0	ADR	ADR	ADR	ADR
1	CMD	CMD	CMD	CMD	CMD	CMD	CMD	CMD
2	XOR	XOR	XOR	XOR	XOR	XOR	XOR	XOR

- Byte 0
Reserve control byte: Bit 7 and bit 6 must be set to logical 1.
Address bits (ADR): Up to 16 BPS can be addressed via the address bits, e.g., on an RS 485 bus.
- Byte 1: CMD
Command byte = Data request to the BPS

Tab. 8.2: Function of the command byte (CMD)

Byte value Decimal	Byte value Hex	Function
241	0xF1	Transfer single position value
244	0xF4	Start positioning
245	0xF5	Stop positioning
246	0xF6	Transfer single speed value
248	0xF8	Transfer single position and speed value
250	0xFA	Transfer marker bar code
252	0xFC	Transfer diagnostic information
253	0xFD	Activate standby or sleep mode

Example: Request of a single speed value

Tab. 8.3: Request of a single speed value

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	1	1	0	0	ADR	ADR	ADR	ADR
1	1	1	1	1	0	1	1	0

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
XOR	0	0	1	1	XOR	XOR	XOR	XOR

- Byte 2: XOR link of byte 0 and byte 1
An odd number of binary 1 values – calculated column by column from top to bottom – sets the XOR bit to 1.

The XOR checksum is entered by the sender (control) in the request protocol and checked by the receiver (BPS). A protocol is correctly transferred if the XOR checksum of the transmitter and the XOR checksum of the receiver are the same. If the XOR comparison is negative (different checksums), the protocol is not accepted by the BPS. The BPS does not send acknowledgment for an unequal checksum.

Response telegram for commands 0xF1 to 0xF6 and 0xFA to 0xFC

In the response telegram to commands 0xF1 to 0xF6 and 0xFA to 0xFC, the BPS transfers the available status information and the requested data in a seven-byte length.

For commands 0xFA to 0xFC, the response only contains three bytes of user data, i.e., byte 2 is always transferred with 0x00 and the user data is located in byte 3 to byte 5.

Tab. 8.4: Response of the BPS

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	BCB_DIR	READY	IO2	IO1	ADR	ADR	ADR	ADR
1	TMP	QUALITY		SLEEP	MIS	DIAG	OUT	ERR
2	P31	P30	P29	P28	P27	P26	P25	P24
3	P23	P22	P21	P20	P19	P18	P17	P16
4	P15	P14	P13	P12	P11	P10	P09	P08
5	P07	P06	P05	P04	P03	P02	P01	P00
6	XOR	XOR	XOR	XOR	XOR	XOR	XOR	XOR

Response telegram for command of 0xFA (transfer marker bar code)

Marker bar code: **A01**

- Byte 3: **A** = 41(h) = 01000001(b)
- Byte 4: **0** = 30(h) = 00110000(b)
- Byte 5: **1** = 31(h) = 00110001(b)

Tab. 8.5: Response of the BPS

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	BCB_DIR	READY	IO2	IO1	ADR	ADR	ADR	ADR
1	TMP	QUALITY		SLEEP	MIS	DIAG	OUT	ERR
2	0	0	0	0	0	0	0	0
3	0	1	0	0	0	0	0	1
4	0	0	1	1	0	0	0	0
5	0	0	1	1	0	0	0	1
6	XOR	XOR	XOR	XOR	XOR	XOR	XOR	XOR

Response telegram for command of 0xFC (transfer diagnostic data)

Error and diagnostic data:

- E00: no error (initial value)
- E01: error during control of measurement operation (measurement start/stop, standby)
- E02: polygon wheel motor error (motor requires too much energy)
- E03: laser error (laser current too high, critical SOS amplitude)

- E05: diagnostic data

Diagnostic data: **E05**

- Byte 3: **E** = 45(h) = 01000101(b)
- Byte 4: **0** = 30(h) = 00110000(b)
- Byte 5: **5** = 35(h) = 00110100(b)

Tab. 8.6: Response of the BPS

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	BCB_DIR	READY	IO2	IO1	ADR	ADR	ADR	ADR
1	TMP	QUALITY		SLEEP	MIS	DIAG	OUT	ERR
2	0	0	0	0	0	0	0	0
3	0	1	0	0	0	1	0	1
4	0	0	1	1	0	0	0	0
5	0	0	1	1	0	1	0	1
6	XOR	XOR	XOR	XOR	XOR	XOR	XOR	XOR

Response telegram for command 0xF8

In the response telegram to command 0xF8, the BPS transfers the available status information and the requested data in a nine-byte length.

Tab. 8.7: Response of the BPS

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	BCB_DIR	READY	IO2	IO1	ADR	ADR	ADR	ADR
1	TMP	QUALITY		SLEEP	MIS	DIAG	OUT	ERR
2	P31	P30	P29	P28	P27	P26	P25	P24
3	P23	P22	P21	P20	P19	P18	P17	P16
4	P15	P14	P13	P12	P11	P10	P09	P08
5	P07	P06	P05	P04	P03	P02	P01	P00
6	V15	V14	V13	V12	V11	V10	V09	V08
7	V07	V06	V05	V04	V03	V02	V01	V00
8	XOR	XOR	XOR	XOR	XOR	XOR	XOR	XOR

Status bits in the response telegram

- BCB_DIR: Tape direction, orientation of the BPS to the BCB
0: 0°
1: Turned 180°
- READY: Device status
0: Not ready
1: Ready
- IO2, IO1: Signal state of the switching input/output
0: Signal level not active
1: Signal level active
- TMP: Temperature warning
0: No temperature warning
1: Warning: Below/above specified internal device temperature
- QUALITY: Reading quality
00: ≥ 75%
01: 50 ... 74%
10: 25 ... 49%
11: < 25%

- SLEEP: Activation of standby or sleep mode
- MIS: Marker information in memory
- DIAG: Diagnostic data in memory
- OUT: Measurement value invalid
- ERR: Device error
- D31 ... D00: Position value or speed value, D00 = LSB
- V15 ... V00: Speed value, V00 = LSB
- XOR: XOR link of byte 0 to byte 1
An odd number of binary 1 values – calculated column by column from top to bottom – sets the XOR bit to 1.

8.8 Key factory settings of the BPS


Tab. 8.8: Factory settings on delivery of the BPS

Parameter	Factory setting	Explanation
Tape selection	BCB with 40 mm grid	Changeover between BCB with 30 mm grid and BCB with 40 mm grid
Position measurement	Integration depth: 8	Number of successive measurements that the BPS uses for position determination.
	Resolution: 1 mm	Resolution of the position value in mm
RS 485 serial interface		
Baud rate	38,400 baud	Baud rate of the serial communication
Data format	8N1	Data format of the serial communication
Switching inputs/outputs		
IO1	HIGH Function: Position value invalid	Switching output - level controlled If a valid position value cannot be ascertained, the output is set
IO2	HIGH Function: Preset teach	Switching input - edge-triggered Transition 0 → 1: Read in preset value

9 Starting up the device – webConfig tool


With the Leuze webConfig tool, a web-technology based, graphical user interface is available for configuring the BPS.

The webConfig tool can be run on any Internet-ready PC. The webConfig tool uses HTTP as communication protocol and the client-side restriction to standard technologies (HTML, JavaScript and AJAX) that are supported by modern browsers.


NOTICE	
	The webConfig tool is offered in the following languages: German, English, French, Italian, Spanish

9.1 Installing software

In order for the BPS to be automatically detected by the connected PC, the USB driver must be installed once on your PC. Administrator rights are required for driver installation.

NOTICE	
	If a USB driver for the webConfig tool is already installed on your computer, the USB driver does not need to be installed again.

9.1.1 System requirements

NOTICE	
	Regularly update the operating system and the Internet browser. Install the current Windows Service Packs.


Tab. 9.1: webConfig system requirements

Operating system	Windows 10 (recommended) Windows 8, 8.1 Windows 7
Computer	PC, laptop or tablet with USB interface, version 1.1 or higher
Graphics card	Min. resolution: 1280 x 800 pixels
Required disk space for USB driver	10 MB
Internet browser	Recommended is a current version of Mozilla Firefox Google Chrome Microsoft Edge Note: Other Internet browsers are possible but have not been tested with the current device firmware.

9.1.2 Install USB driver

- ↪ Start your PC with administrator privileges and log on.
- ↪ Download the setup program from the Internet:
www.leuze.com > Products > Measuring Sensors > Bar Code Positioning Systems > BPS 300i > (Name of the BPS) > Tab Downloads > Software/driver.
- ↪ Start the setup program and follow the instructions.


NOTICE

 Alternatively, you can manually install the **LEO_RNDIS.inf** USB driver. Contact your network administrator if the installation fails.

9.2 Start webConfig tool

Prerequisite: The Leuze USB driver for the webConfig tool is installed on the PC.

- ↪ Connect the operating voltage to the BPS.
- ↪ Connect the SERVICE USB interface of the BPS to the PC. The connection to the SERVICE USB interface of the BPS is established via the PC-side USB interface. Use a standard USB cable with one Type A plug and one Mini-B type plug.
- ↪ Start the webConfig tool using your PC's Internet browser with IP address **192.168.61.100** This is the default Leuze service address for communication with bar code positioning systems of the BPS 300i series.
- ⇒ The webConfig start page appears on your PC.

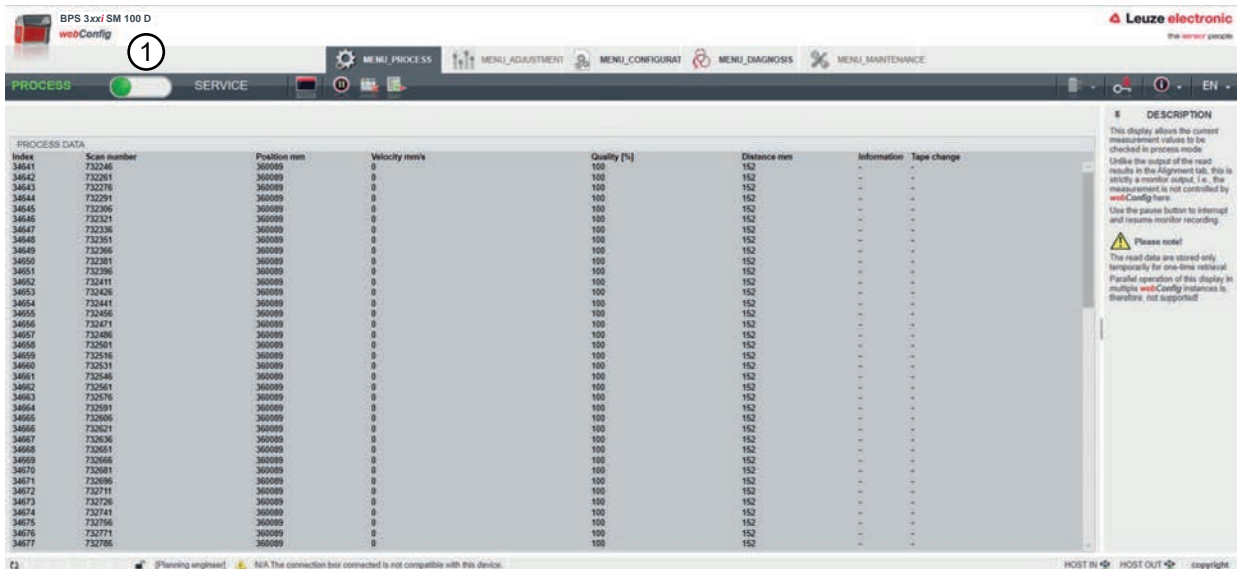


1 Changing the operating mode **Process – Service** (upper left)

Fig. 9.1: The start page of the webConfig tool

The user interface of the webConfig tool is largely self-explanatory.

NOTICE

 The webConfig tool is completely contained in the firmware of the BPS. The pages and functions of the webConfig tool may appear and be displayed differently depending on the firmware version.

Clear browser history

The cache of the Internet browser is to be cleared if different device types or devices with different firmware were connected to the webConfig tool.

- ↪ Delete cookies and temporary Internet and website data from browser history before starting the web-Config tool.

Note limit of Firefox sessions for version 30.0 and higher

If the limited number of Firefox sessions is exceeded, it may no longer be possible to address the BPS via the webConfig tool.

- ↪ Do **not** use the Internet browser's refresh function: [Shift] [F5] or [Shift] + mouse click

9.3 Short description of the webConfig tool

9.3.1 Overview

Operating modes

For configurations with the webConfig tool, you can switch between the following operating modes:

- **Process**

The BPS is connected to the control.

- The process communication to the control is activated.
- The switching inputs/outputs are activated.
- Configuration and diagnostics functions available, cannot be changed.
- *PROCESS* function available.
- Alignment and maintenance functions not available.

- **Service**

- The process communication to the control is interrupted.
- The switching inputs/outputs are deactivated.
- The configuration can be changed.
- *PROCESS* function not available.
- Alignment, configuration, diagnostics and maintenance functions available.

Process operating mode

In the *Process* operating mode, the webConfig tool has the following main menus and functions:

- *PROCESS*

Check and save the current read data in process mode (see chapter 9.3.2 "PROCESS function").

- Tabular display of the following values:
Scan number, position, speed, reading quality, distance from BCB, info on the control label

- *CONFIGURATION* (see chapter 9.3.4 "CONFIGURATION function")

Information on the current BPS configuration – no change to the configuration:

- Display of the interface parameters
- Selection of the used bar code tape (30 mm grid or 40 mm grid)
- Display of the tape value correction (deviation of the BCB from scaling)
- Display of the device components (switching inputs/outputs, display)
- Data processing (position/speed detection or monitoring, data preparation)
- Display of the warning threshold and the error threshold for the reading quality

Service operating mode

In the *Service* operating mode, the webConfig tool also has the following main menus and functions:

- *ALIGNMENT* (see chapter 9.3.3 "ALIGNMENT function")

- Display of the following values:
Scan number, position, speed, quality, distance, number of labels in the scanning beam

- Graphical displays of the following values:
Position, speed, quality

- *CONFIGURATION* (see chapter 9.3.4 "CONFIGURATION function")

- Configuration of the interface parameters
- Configuration of device components (switching inputs/outputs, display)
- Selection of the used bar code tape
- Configuration of the data processing (position/speed detection or monitoring, data preparation)
- Configuration of the warning threshold and the error threshold for the reading quality

- *DIAGNOSIS* (see chapter 9.3.5 "DIAGNOSIS function")

- Event logging of warnings and errors.
- *MAINTENANCE* (see chapter 9.3.6 "MAINTENANCE function")
- Firmware update
- User management
- Backup/Restore

9.3.2 PROCESS function

The *PROCESS* function serves to control the current measurement data in the *Process* operating mode. The measurement results are output in tabular form – strictly as monitor output. The **Pause/Start** icon can be used to interrupt and resume monitor recording.

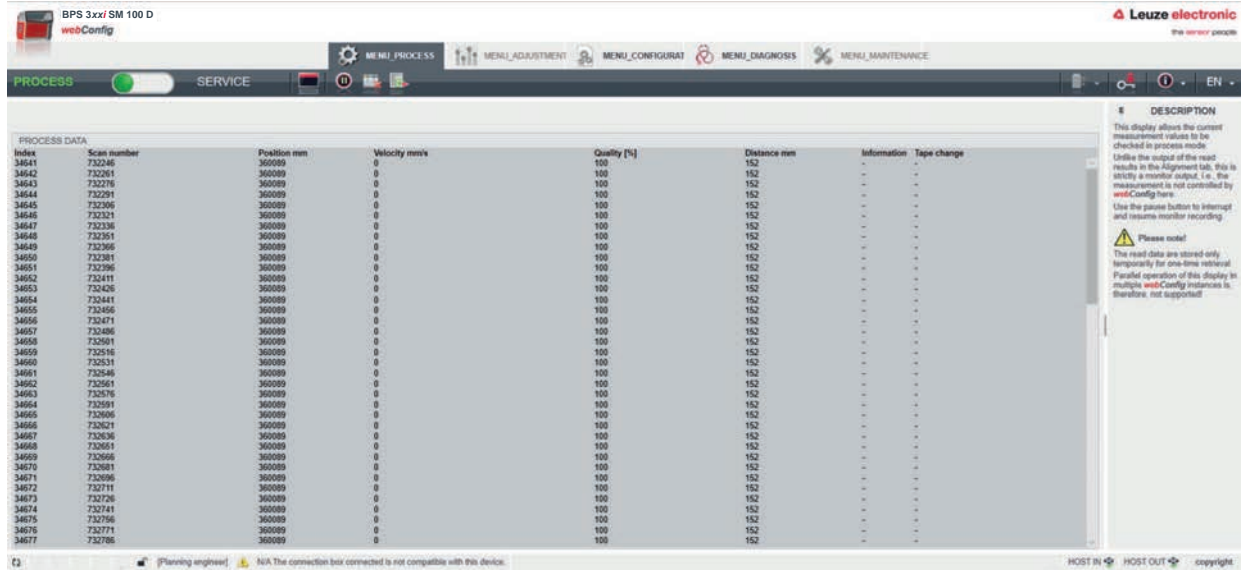


Fig. 9.2: PROCESS webConfig function

9.3.3 ALIGNMENT function

NOTICE

ALIGNMENT function only in the Service operating mode!

The BPS can only be aligned using the *ALIGNMENT* function in the *Service* operating mode.

The *ALIGNMENT* function serves to simplify mounting and alignment of the BPS. The laser is to be activated via the **Start** icon so that the function can monitor and directly display the measurement values for position and speed and determine the optimum installation location.

In addition, reading quality (in %), working distance and the number of labels in the scanning beam can be displayed. Using this information, it is possible to assess how well the BPS is aligned with the BCB.

NOTICE

During output of the measurement results, the BPS is controlled by the webConfig tool.



Fig. 9.3: ALIGNMENT webConfig function

9.3.4 CONFIGURATION function

NOTICE

Configuration changes only in the Service operating mode!

Changes made using the CONFIGURATION function can only be performed in the Service operating mode.

Overview of the webConfig configuration functions

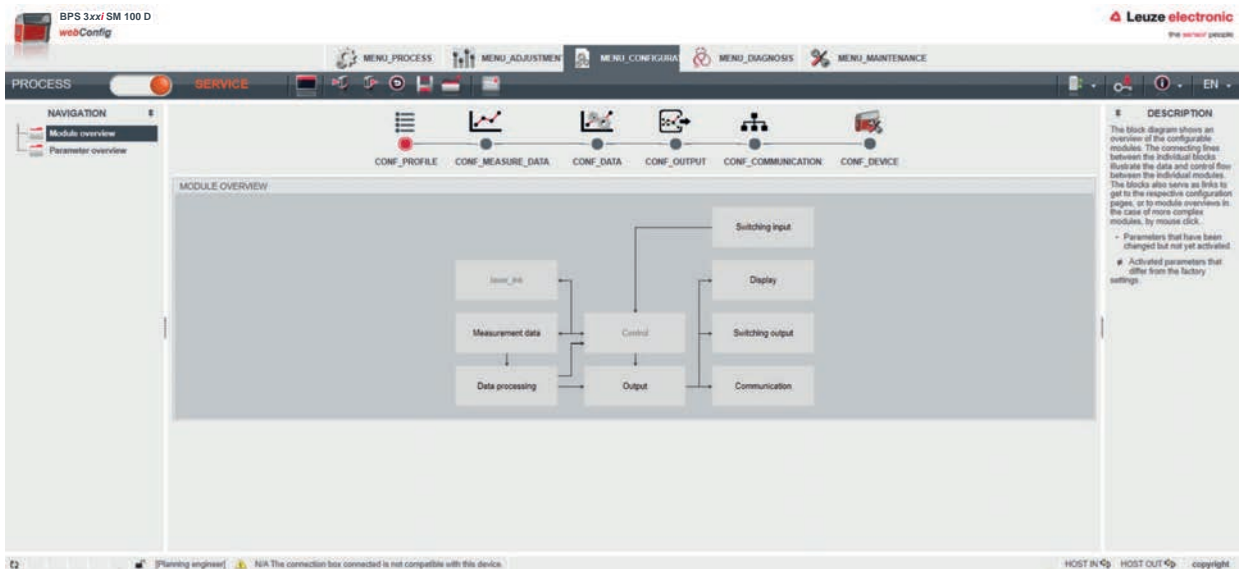



Fig. 9.4: CONFIGURATION webConfig function

Configuration of the switching inputs/outputs (DEVICE tab)

- I/O mode: switching input or switching output
- Output function
- Input function
- Time behavior functions
 - Signal delay
 - Pulse duration
 - Switch-on/switch-off delay

- Debounce time
- Inversion yes/no

Configuring switching outputs

- ↪ Select the function symbol for activation of the switching output in the *Functions* area.
- ↪ Use the left mouse button to drag the function symbol into the *Activation* window.
- ↪ Configure the timing; see "Time behavior functions of the switching inputs/outputs".
- ↪ Save the configuration of the switching outputs in the device.
Click on the  icon.

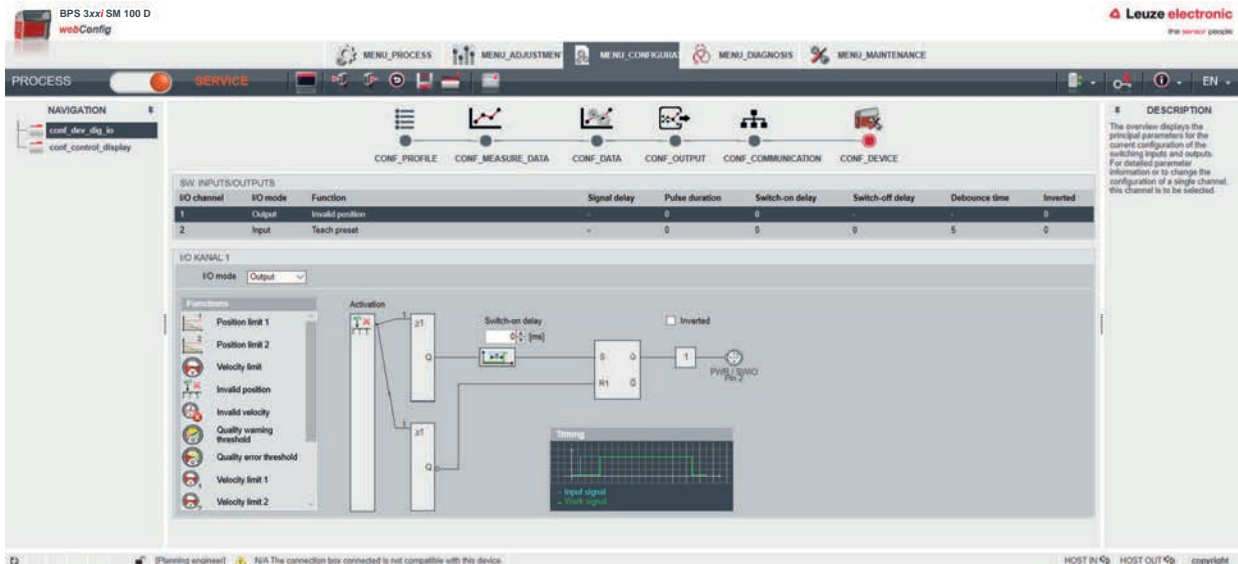



Fig. 9.5: Configuration of the switching outputs

Possible signals via the switching outputs:

- Position limit 1/2
Signals a value above/below the position limit.
- Invalid position
Signals that no valid position can be ascertained.
- Speed limit
Signals a value above/below the speed limit.
- Speed limit value 1-4
Signals that speed limit value 1-4 has been exceeded or has not been met.
- Invalid speed
Signals that no valid speed can be ascertained.
- Quality warning threshold
Signals that the reading quality is less than the warning threshold.
- Quality error threshold
Signals that the reading quality is less than the error threshold.
- Device error
Signals a device error.
- Marker bar code or control bar code label detected

Configuring switching inputs

- ↪ Select the function of the switching input from the *Function* list:
 - No function
 - Start/stop measurement
 - Teach preset

- Reset preset
- ↪ Configure the timing; see "Time behavior functions of the switching inputs/outputs".
- ↪ Save the configuration of the switching inputs in the device.
Click the  symbol.

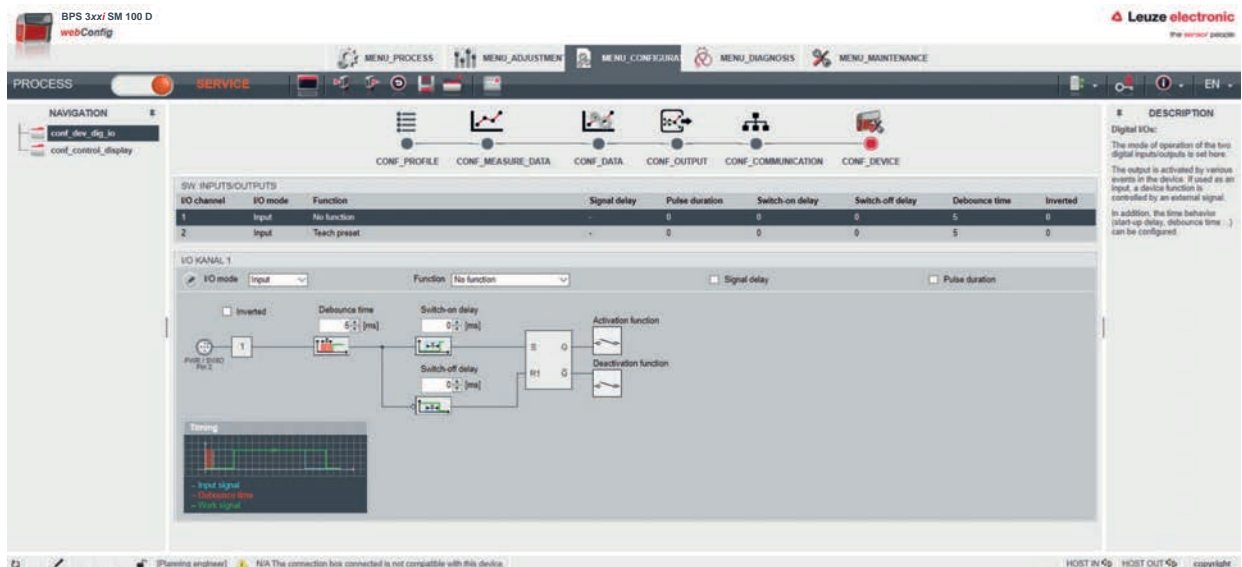


Fig. 9.6: Configuration of the switching inputs

Time behavior functions of the switching inputs/outputs

The time behavior functions (e.g., start-up delay) can **only** be configured with the webConfig tool.

- Start-up delay
With this setting, the output pulse is delayed by the specified time (in ms).
- Switch-on time
Defines the switch-on time period for the switching input. Any activated switch-off function then no longer has any function.
If the output is deactivated via the switch-off signal before the start-up delay lapses, only a brief pulse appears at the output following the start-up delay.
- Debounce time
Parameter for setting the software debounce time for the switching input. The definition of a debounce time extends the signal transition time accordingly.
If this parameter has the value 0, no debouncing takes place. Otherwise, the set value corresponds to the time (in ms) that the input signal must be present and stable.
- Switch-off delay
This parameter specifies the duration of the switch-off delay (in ms).

Configuration of the bar code tape selection and tape value correction (**MEASUREMENT DATA** tab, **Bar code tape**)

- Bar code tape with 30 mm grid (BCB G30 ...) or 40 mm grid (BCB G40 ...)
- Tape value correction
With this parameter, the deviation of the BCB from the correct millimeter scaling that arises from the production process can be corrected.

Configuration of position detection (**DATA PROCESSING** tab, **Position > Detection**)

- Integration depth
Number of successive measurements that the BPS uses for position determination.
- Scaling free resolution
Free scaling of the output of the position values.
- Preset

A preset position value (preset value) is activated at an appropriate position.

- Offset
Output value=measurement value+offset
If a preset is active, this has priority over the offset.
- Error handling procedures
Parameters for the position value in case of failure.

Configuration of position monitoring (*DATA PROCESSING* tab, Position > Monitoring)

- Position limit value 1/2
Signals that the position value is outside of the configured limit value range.

Configuration of speed detection (*DATA PROCESSING* tab, Speed > Detection)

- Speed measurement averaging
Measurement value preparation averages all speed values calculated during the selected period (averaging) to yield a speed output value.
- Scaling free resolution
Free scaling of the output of the speed values.
- Error handling procedures
Parameters for the speed value in case of failure.

Configuration of speed monitoring (*DATA PROCESSING* tab, Measurement data > Speed > Monitoring)

- Speed limit value 1-4
Signals that the speed is outside of the configured limit value range.

Configuration of the measurement value display (*DATA PROCESSING* tab, General preparation)

- Unit of measurement: metric or inch
- Counting direction
Count direction for position calculation or sign for speed calculation.
- Output mode sign
Output mode of the sign. Affects position value and speed output.

Configuration of monitoring of the reading quality (*DATA PROCESSING* tab, Reading quality)

- Warning threshold for reading quality in %
- Error threshold for reading quality in %

Configuration of the communication data (*COMMUNICATION* tab)

- Configuration of the SERVICE USB interface
- Setting the process interface
 - Baud rate: 4,800 baud ... 115,200 baud
 - Data format: 8N1, 8E1, 8O1, 8N2

9.3.5 DIAGNOSIS function

The *DIAGNOSIS* function is available in the *Process* and *Service* operating modes.

The device event log is displayed with the *DIAGNOSIS* function.

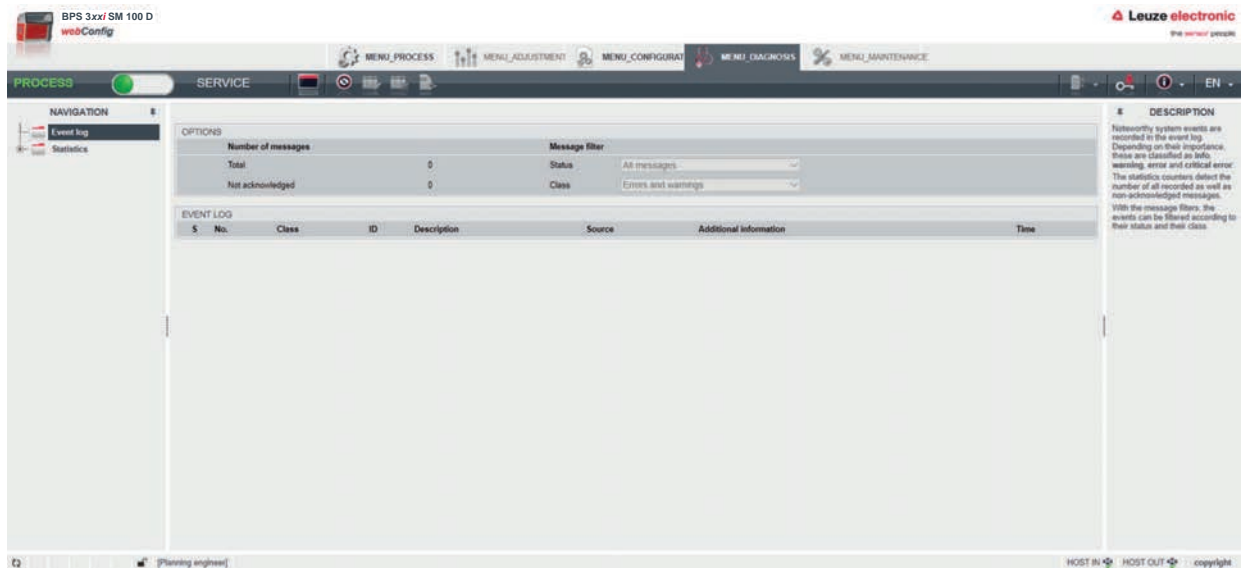


Fig. 9.7: DIAGNOSIS webConfig function

9.3.6 MAINTENANCE function

The *MAINTENANCE* function is only available in the *Service* operating mode.

Functionalities:

- User management
- Devices Backup/Restore
- Firmware update
- System clock
- Settings of the user interface

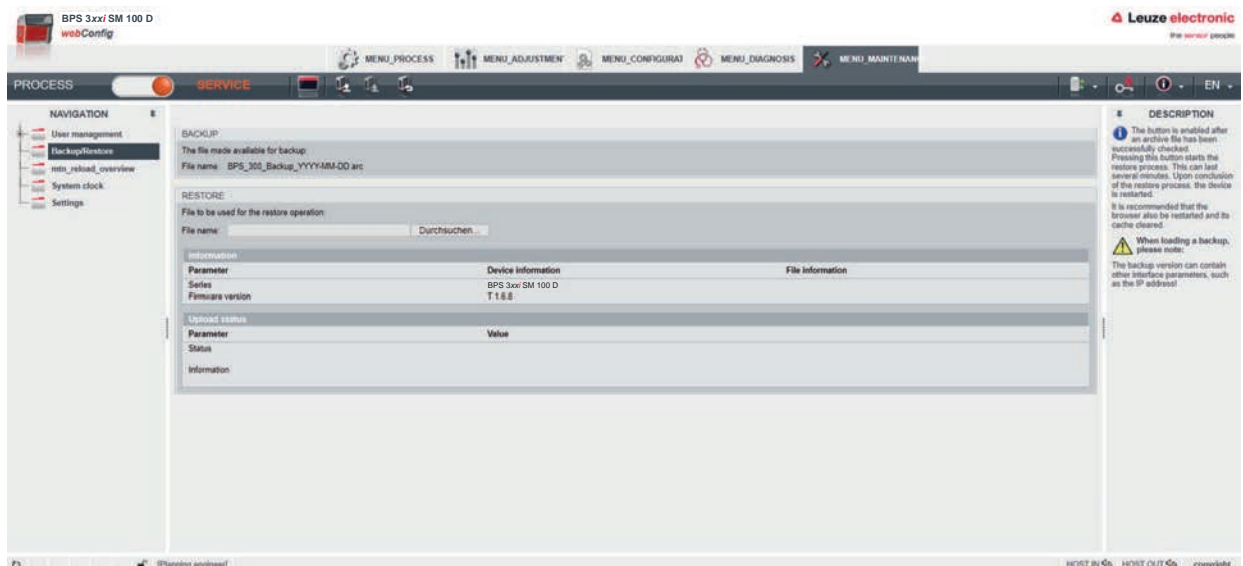


Fig. 9.8: MAINTENANCE webConfig function


10 Diagnosis and troubleshooting

10.1 What to do in case of failure?

After switching on the BPS, display elements (see chapter 3.3 "Display elements") assist in checking the proper function and troubleshooting.

In case of error, you can determine the error from the LED displays. With the error message you can determine the cause of the error and initiate measures to rectify it.

- ↳ Switch off the system and leave it switched off.
- ↳ Analyze the cause of the error using the operation indicators, the error messages and the diagnostic tools (also with the help of the webConfig tool, *DIAGNOSIS* tab) and rectify the error.

NOTICE	
	<p>Contact Leuze subsidiary/customer service.</p> <p>↳ If you are unable to rectify a fault, contact the Leuze branch responsible for you or call the Leuze customer service (see chapter 12 "Service and support").</p>

10.1.1 Diagnosis with webConfig tool

System events are displayed in the webConfig tool via the *DIAGNOSIS* tab. Noteworthy system events are recorded in the event log. Depending on their importance, the events are classified as info, warning, error and critical error. The statistics counters detect the number of all recorded as well as non-acknowledged messages. With the message filters, the events can be filtered according to their status and their class.

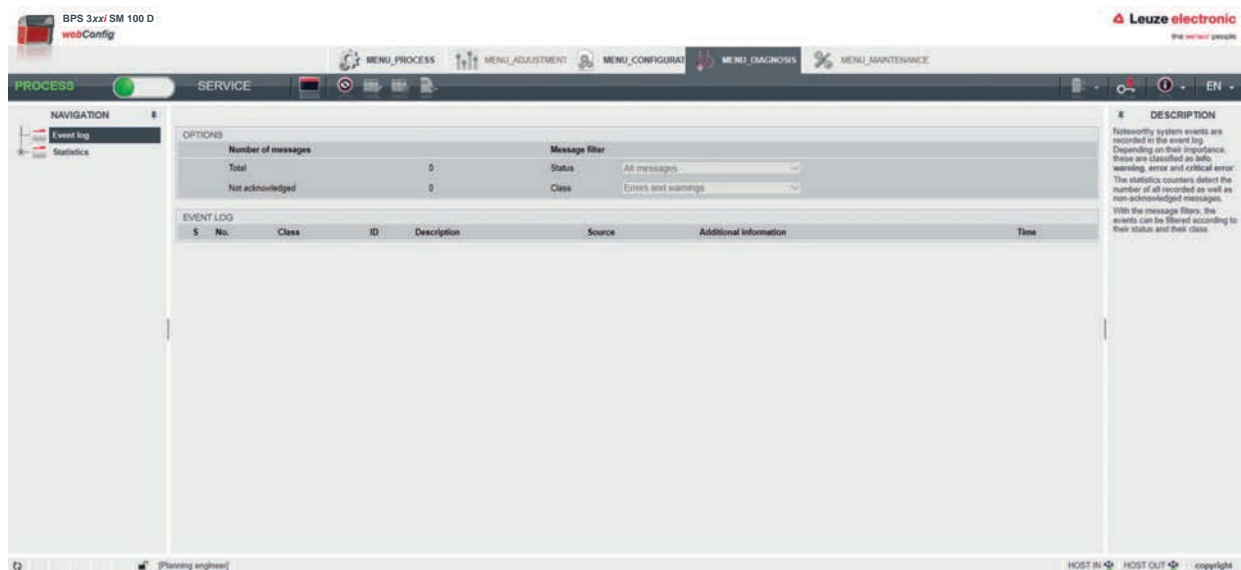


Fig. 10.1: *DIAGNOSIS* webConfig function

10.2 Operating indicators of the LEDs

You can ascertain general causes of errors via the PWR and BUS status LEDs (see chapter 3.3 "Display elements").

Tab. 10.1: PWR LED displays – causes and measures

Error	Possible cause	Measures
Off	No supply voltage connected to the device Hardware error	Check supply voltage Contact Leuze customer service (see chapter 12 "Service and support")
Green, flashing	Device is being initialized	

Error	Possible cause	Measures
Red, flashing	No bar code in the scanning beam No valid measurement value	Query BCB diagnostic data and carry out the resulting measures (see chapter 10.4 "Checklist for causes of errors", "Position measurement errors – causes and measures" table)
Orange, continuous light	Device in <i>Service</i> mode	Reset the device to <i>Process</i> mode using the webConfig tool

10.3 Error messages on the display

Via the optional display of the BPS, the device outputs the following possible error status information while it has the *BPS Info* device status:

- *System OK*
BPS operating error-free.
- *Error*
Device function is not ensured.



Fig. 10.2: Example: Device status/error status information on the display

10.4 Checklist for causes of errors

Tab. 10.2: Service interface errors – causes and measures

Error	Possible cause	Measures
webConfig does not start	Incorrectly connected interconnection cable Connected BPS is not recognized No communication via USB service interface Old webConfig configuration in the browser cache IP address not correct	Check interconnection cable Install USB driver Clear browser history

Tab. 10.3: Process interface errors – causes and measures

Error	Possible cause	Measures
Sporadic interface error	Check wiring for proper contacting	Check wiring: <ul style="list-style-type: none"> • Check wire shielding • Check wires used
	EMC coupling	Observe contact quality of screwed or soldered contacts in the wiring Avoid EMC coupling caused by power cables laid parallel to device lines Separate laying of power and data communications cables
	Maximum cable length exceeded	Check cable lengths according to the data rate

Tab. 10.4: LED indicators - interface errors – causes and measures

Error	Possible cause	Measures
BUS LED "Off"	No supply voltage connected to the device	Check supply voltage
	Hardware error	Contact Leuze customer service (see chapter 12 "Service and support")
BUS LED "red flashing"	Incorrect wiring	Check wiring
	Communication error	Check interface parameters Carry out a reset on the control
	Different protocol settings	Check protocol settings

Tab. 10.5: Position measurement errors – causes and measures

Error	Possible cause	Measures
Measurement value or reading quality is continuously instable	Soiling of the BPS optics	Clean the optics of the BPS
Measurement value or reading quality is poor <ul style="list-style-type: none"> • at certain position values • always at the same position values 	Soiling of the bar code tape	Clean the bar code tape Replace the bar code tape
No measurement value can be determined	No code in scanning beam Code not in the working range of the BPS	Align the scanning beam with the bar code tape Align the BPS with the bar code tape (working range 50 mm ... 170 mm)
Faulty measurement value	Wrong bar code tape BCB grid different from BPS configuration Preset or offset active. Incorrect unit or resolution configured.	Change BPS configuration to the bar code tape that is being used

11 Care, maintenance and disposal

11.1 Cleaning

If there is dust on the device:

- ↪ Clean the device with a soft cloth; use a cleaning agent (commercially available glass cleaner) if necessary.

NOTICE



Do not use aggressive cleaning agents!

- ↪ Do not use aggressive cleaning agents such as thinner or acetone for cleaning the device.

11.2 Servicing

The device does not normally require any maintenance by the operator.

Repairs to the device must only be carried out by the manufacturer.

- ↪ For repairs, contact your responsible Leuze subsidiary or Leuze customer service (see chapter 12 "Service and support").

11.2.1 Firmware update

A firmware update can only be performed by Leuze Service on-site or at the company headquarters.

- ↪ For firmware updates, contact your responsible Leuze subsidiary or Leuze customer service (see chapter 12 "Service and support").

11.2.2 BCB repair with repair kit

If a bar code tape was damaged, e.g., by falling parts, you can download a repair kit for the BCB from the Internet.

www.leuze.com > **Products** > **Measuring Sensors** > **Bar Code Positioning Systems** > **BPS 300i** > (Name of the BPS) > **Tab Downloads** > **Repair kit.**

NOTICE



Do not use the BCB repair kit on a permanent basis!

- ↪ Use the bar code tape created with the repair kit only temporarily as an emergency solution. The optical and mechanical properties of the self-printed bar code tape do not correspond to those of the original bar code tape. Self-printed bar code tape should not remain in the system on a permanent basis.
- ↪ Original repair tapes (BCB G30 ... RK or BCB G40 ... RK) with custom tape start value, tape end value, custom length in standard heights of 25 mm and 47 mm can be found on the Leuze website in the accessories for the BPS 300 devices. An entry wizard is available for repair tapes on the Leuze website under devices BPS 300 - Accessories. The entry wizard provides support when entering the individual pieces of tape data and creates a query or order form for the desired repair tape.
- ↪ Repair tapes are available up to a maximum length of 5 m per repair tape. Repair tapes longer than 5 must be ordered as special tapes in the entry wizard.

NOTICE



In the repair kit files, you will find all position values with 30 mm grid (BCB G30 ...) and 40 mm grid (BCB G40 ...).

Layout:

- BCB G30: 0.9 m of bar code tape is provided on each A4 sheet.
 - Five lines of 18 cm with six code-information segments of 30 mm each
 - Tape lengths: from 0 to 9999.99 m in various files; each 500 m

- BCB G40: 1 m of bar code tape is provided on each A4 sheet.
 - Five lines of 20 cm with five code-information sections of 40 mm each
 - Tape lengths: from 0 to 9999.99 m in various files; each 500 m

Replacing a section of defective bar code tape

- ↪ Determine the coding of the defective area.
- ↪ Print out the coding for the given area.
- ↪ Affix the printed code over the defective section of bar code tape.


NOTICE	
	<p>Printing coding</p> <ul style="list-style-type: none"> ↪ Select only those pages that are actually required. ↪ Change the printer settings so that the bar code is not distorted. ↪ Check the print results and measure the distance between two bar codes: BCB G40 ...: 40 mm and BCB G30 ...: 30 mm. See graphics below. ↪ Cut the code strips and arrange them next to one another. The code content must always increase or decrease in increments of 30 mm or 40 mm. Check that the printed values increase by 3 (BCB G30 ...) or 4 (BCB G40 ...).



Fig. 11.1: Checking the print result – BCB G40 ...-repair kit (40 mm gird)



Fig. 11.2: Checking the print result – BCB G30 ...-repair kit (30 mm gird)

11.3 Disposing

- ↪ For disposal observe the applicable national regulations regarding electronic components.

12 Service and support

24-hour on-call service at:

+49 7021 573-0

Service hotline:

+49 7021 573-123

Monday to Friday 8.00 a.m. to 5.00 p.m. (UTC+1)

E-mail:

service.identify@leuze.de

Repair service and returns:

Procedure and Internet form can be found at

www.leuze.com/repair

Return address for repairs:


Service center

Leuze electronic GmbH + Co. KG

In der Braike 1

D-73277 Owen / Germany

What to do should servicing be required?

NOTICE	
	<p>Please use this chapter as a master copy should servicing be required!</p> <p>↪ Enter the contact information and fax this form together with your service order to the fax number given below.</p>

Customer data (please complete)

Device type:	
Serial number:	
Firmware:	
Display messages	
Status of LEDs:	
Error description:	
Company:	
Contact person/department:	
Phone (direct dial):	
Fax:	
Street/No:	
ZIP code/City:	
Country:	

Leuze Service fax number:


+49 7021 573-199

13 Technical data

13.1 General specifications

Tab. 13.1: Optics

Light source	Laser diode
Wavelength	655 nm
Impulse duration	< 150 µs
Max. output power	1.8 mW
Average life expectancy laser diode	100,000 h (typ. at +25 °C)
Beam deflection	Via rotating polygon wheel
Exit window	Glass
Laser class	1 acc. to IEC/EN 60825-1:2014
Working range	50 mm ... 170 mm At a reading distance of 50 mm, the reading field width is 120 mm. At a reading distance beyond 100 mm, the reading field width is 160 mm (see BPS reading field curve).

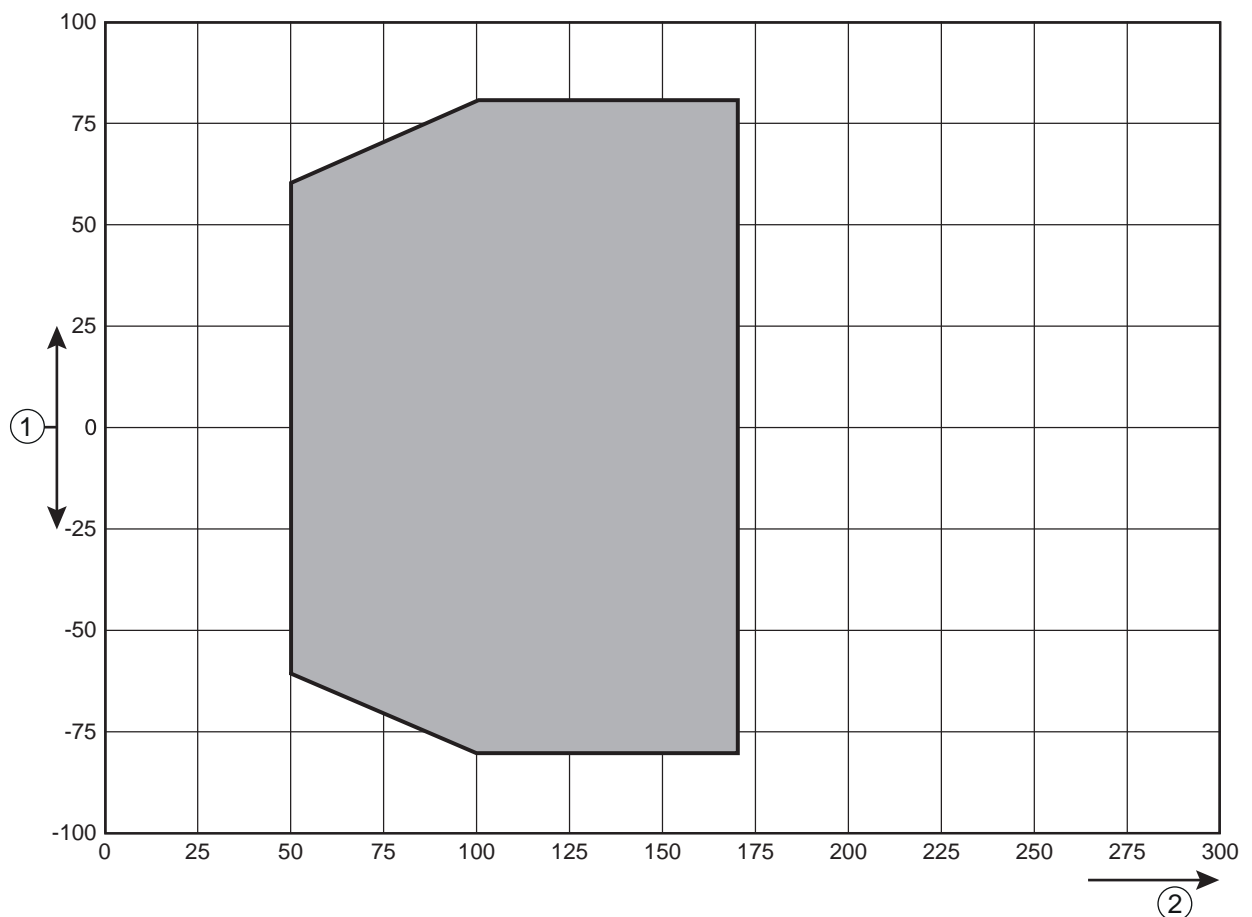

- 1 Reading field width [mm]
- 2 Reading distance [mm]

Fig. 13.1: BPS reading field curve

Tab. 13.2: Measurement data

Reproducibility (1 sigma)	±0.05 mm
---------------------------	----------

Output time	1 ms ... 30 ms (configurable) Default: 1 ms
Response time	8 ms (adjustable, factory setting 8 ms)
Basis for contouring error calculation	4 ms
Measurement range	0 ... 10,000,000 mm
Resolution	0.1 mm (adjustable, factory setting 0.1 mm)
Max. traverse rate	10 m/s

Tab. 13.3: Operating and display elements

Display (optional – only in device models with "D")	Monochromatic graphical display, 128 x 32 pixels, With background lighting
Keyboard (optional – only in device models with "D")	Two buttons
LEDs	Two LEDs for power (PWR) and bus state (BUS), two-colored (red/green)

Tab. 13.4: Mechanical data



Housing	Diecast aluminum
Degree of protection	IP 65
Weight	Approx. 580 g (without connection hood)
Dimensions of the BPS 301i without connection hood	(H x W x D) 108.7 mm x 100.0 mm x 48.3 mm

Tab. 13.5: Environmental data



Air humidity	Max. 90% rel. humidity, non-condensing
Vibration	IEC 60068-2-6, test Fc
Shock	IEC 60068-2-27, test Ea
Continuous shock	
Electromagnetic compatibility	IEC 61000-6-3 IEC 61000-6-2 (contains IEC 61000-4-2, -3, -4, -5, -6)

Tab. 13.6: Certifications, conformity

Conformity	CE, CDRH
Certifications	UL 60950-1, CSA C 22.2 No. 60950-1

 CAUTION	
	UL applications! For UL applications, use is only permitted in Class 2 circuits in accordance with the NEC (National Electric Code).

13.1.1 BPS without heating

 CAUTION	
	UL applications! For UL applications, use is only permitted in Class 2 circuits in accordance with the NEC (National Electric Code).



Tab. 13.7: Electrical equipment

Data specification	Values/description
Interface type	RS 485 Protocol: binary protocol Baud rate: 4,800 baud ... 115,200 baud Data formats: <ul style="list-style-type: none"> • Data bits: 8 • Parity: none, even, odd • Stop bit: 1, 2
Service USB interface	Mini-B type USB 2.0 socket
PWR LED green	Device ready (power on)
Operating voltage U_B	18 ... 30 VDC (Class 2, protection class III)
Power consumption	Max. 3.7 W

Tab. 13.8: Ambient temperature

Ambient temperature (operation)	-5 °C ... +50 °C
Ambient temperature (storage)	-35 °C ... +70 °C

13.1.2 BPS with heating

 CAUTION	
	<p>UL applications! For UL applications, use is only permitted in Class 2 circuits in accordance with the NEC (National Electric Code).</p>

Tab. 13.9: Electrical equipment

Operating voltage U_B	18 ... 30 VDC
Power consumption	Max. 17.7 W
Structure of the heating	Housing heating and separate heating of the optics glass
Warmup time	Minimum 30 min at +24 VDC and an ambient temperature of -35 °C
Minimum conductor cross section	Conductor cross section of at least 0.75 mm ² for the supply voltage supply line. Note: Wiring through of the voltage supply to multiple heating devices is not permissible. Standard, M12 ready-made cable not usable (insufficient conductor cross section).

Tab. 13.10: Ambient temperature

Ambient temperature (operation)	-35 °C ... +50 °C
Ambient temperature (storage)	-35 °C ... +70 °C

13.2 Bar code tape

Tab. 13.11: BCB dimensions

	BCB G40 ...	BCB G30 ...

Grid	40 mm	30 mm
Standard height	47 mm, 25 mm	47 mm, 25 mm
Length	0 ... 5 m, 0 ... 10 m, 0 ... 20 m, ..., 0 ... 150 m, 0 ... 200 m; Special lengths and special encodings: see chapter 14 "Order guide and accessories"	0 ... 5 m, 0 ... 10 m, 0 ... 20 m, ..., 0 ... 150 m; Special lengths and special encodings: see chapter 14 "Order guide and accessories"
Tape tolerance	±1 mm per meter	±1 mm per meter

NOTICE



Twin tapes on request

↪ An entry wizard for twin tapes with custom tape start value, tape end value, custom length and height is available on the Leuze website under devices BPS 300 – Accessories. The entry wizard provides support when entering the individual pieces of tape data and creates a query or order form for the desired twin tape.


Tab. 13.12: BCB structure

Manufacturing process	Filmsetting
Surface protection	Polyester, matt
Base material	Polyester film, affixed without silicone
Adhesive	Acrylate adhesive
Strength of adhesive	0.1 mm
Adhesive strength (average values)	On aluminum: 25 N/25 mm On steel: 25 N/25 mm On polycarbonate: 22 N/25 mm On polypropylene: 20 N/25 mm

Tab. 13.13: BCB environmental data

Recommended processing temperature	0 °C ... +45 °C
Ambient temperature	-40 °C ... +120 °C
Dimensional stability	No shrinkage, tested according to DIN 30646
Curing	Final curing after 72 h; the BPS can detect the position immediately after the BCB is affixed.
Tear resistance	150 N
Elongation at tear	Min. 80%, tested in accordance with DIN 50014, DIN 51220
Weathering resistance	UV-light, humidity, salt spray (150 h/5 %)
Chemical resistance (checked at 23 °C over 24 h)	Transformer oil, diesel oil, white spirit, heptane, ethylene glycol (1:1)
Behavior in fire	Self-extinguishing after 15 s, does not drip
Surface	Grease-free, dry, clean, smooth
Mechanical properties	Scratch and wipe resistant, UV resistant, moisture resistant, partly chemical resistant


13.3 Dimensioned drawings

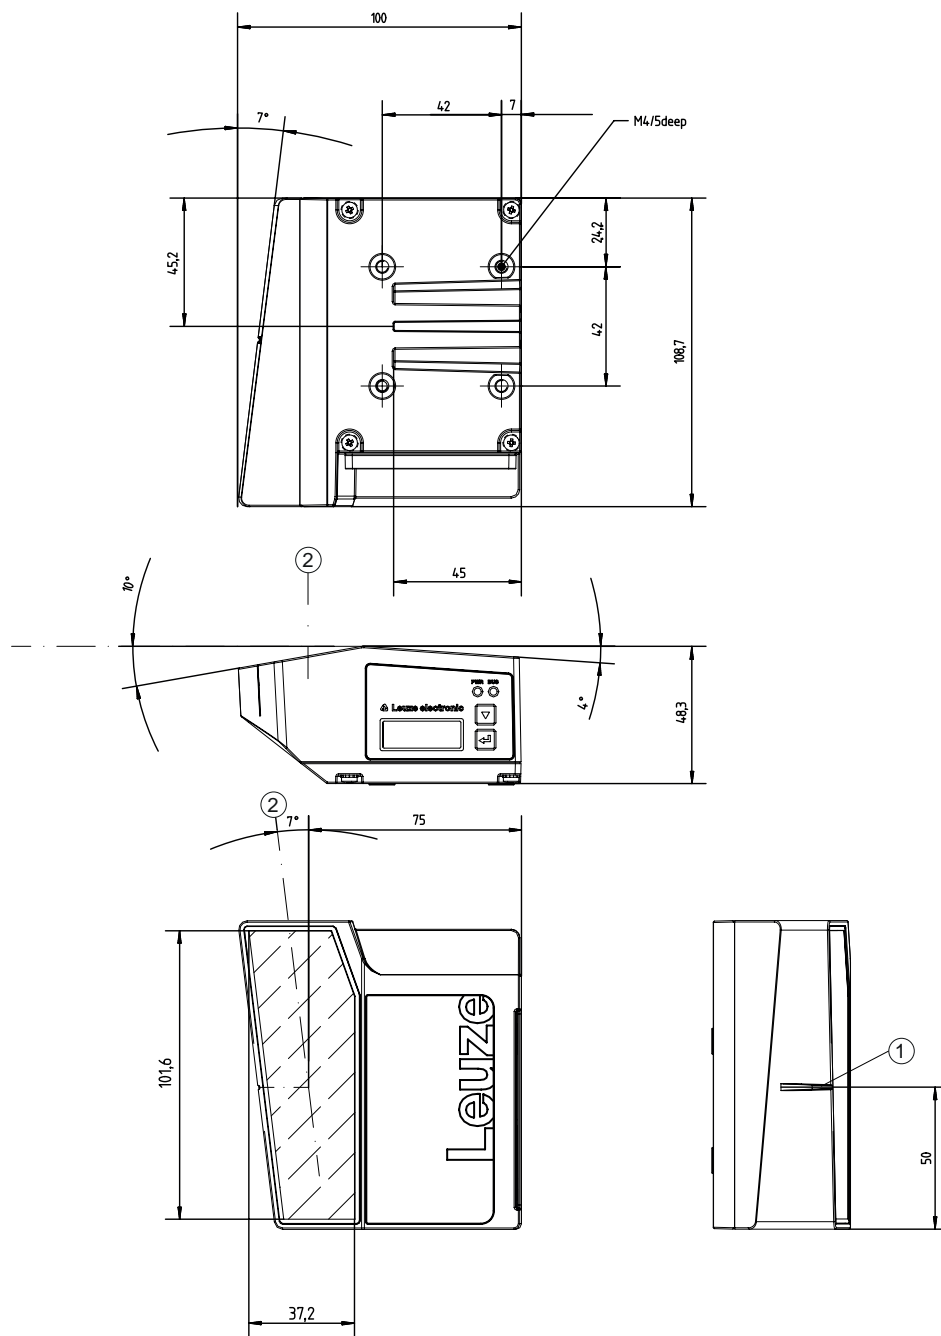

all dimensions in mm


- 1 Reference point for the bar code position
- 2 Optical axis

Fig. 13.2: Dimensioned drawing BPS without connection hood

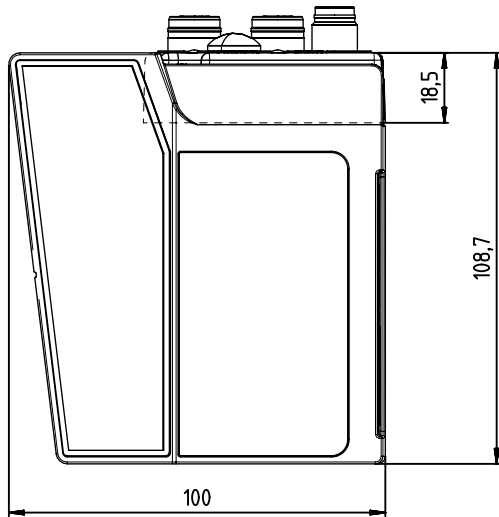


all dimensions in mm

Fig. 13.3: Dimensioned drawing BPS with MS 301 connection hood

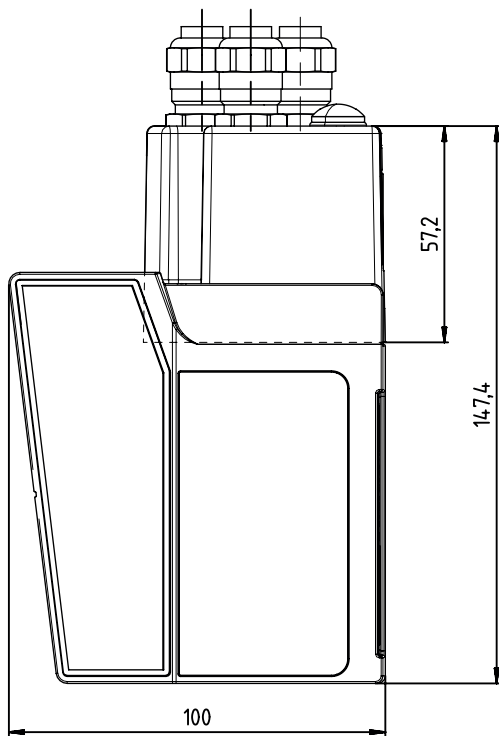

all dimensions in mm



Fig. 13.4: Dimensioned drawing BPS with MK 301 connection hood

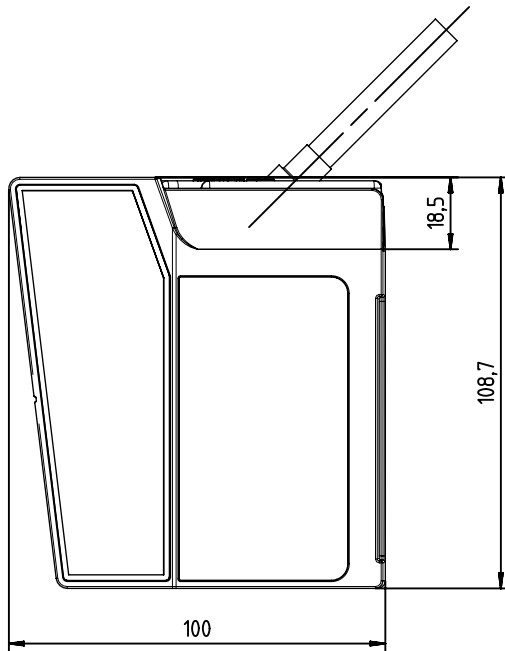

all dimensions in mm



Fig. 13.5: Dimensioned drawing BPS with KB 301-3000 connection hood

13.4 Dimensioned drawings: Accessories

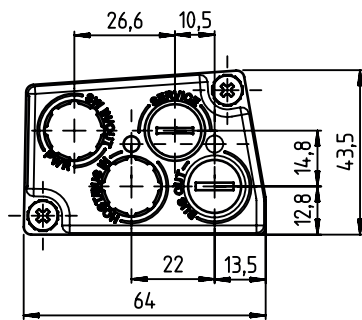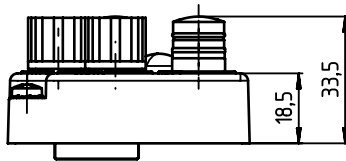



all dimensions in mm

Fig. 13.6: Dimensioned drawing MS 301 connection hood

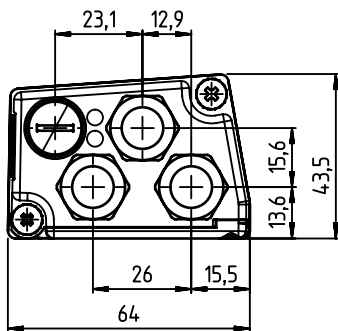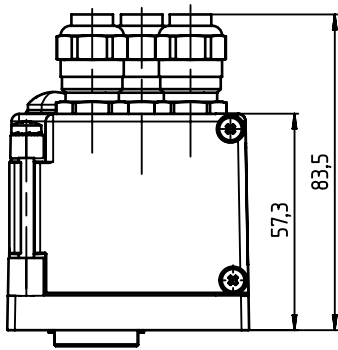


all dimensions in mm

Fig. 13.7: Dimensioned drawing MK 301 connection hood

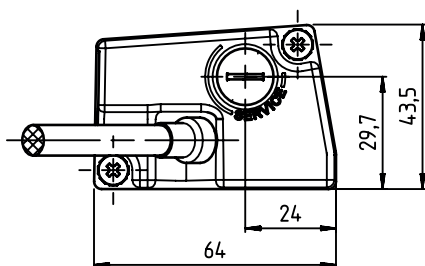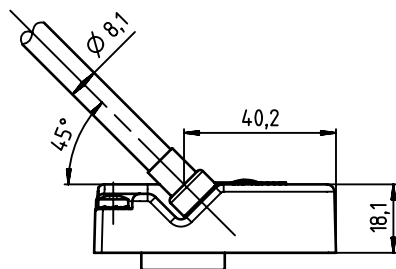


all dimensions in mm

Fig. 13.8: Dimensioned drawing KB 301-3000 connection hood

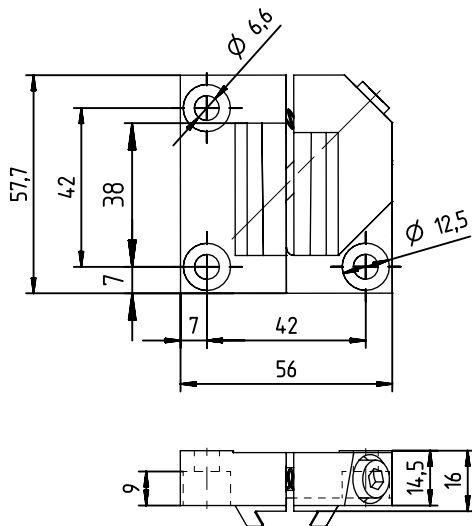


all dimensions in mm

Fig. 13.9: Dimensioned drawing BTU 0300M-W mounting device

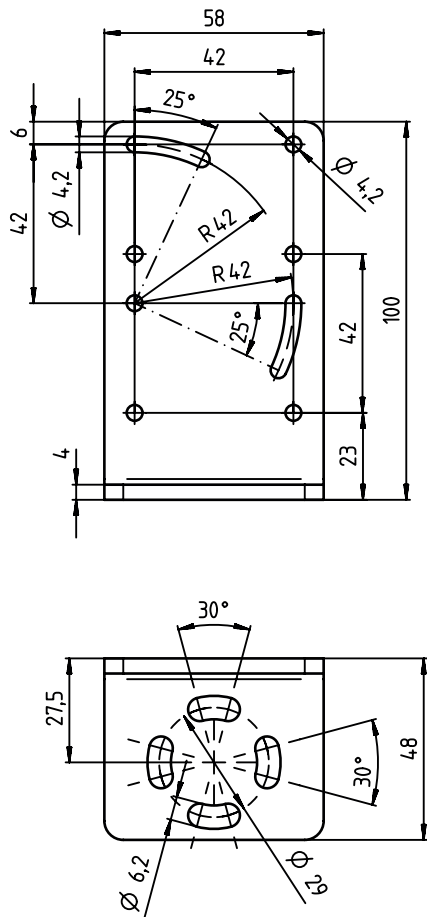

all dimensions in mm


Fig. 13.10: Dimensioned drawing BT 300-W mounting bracket

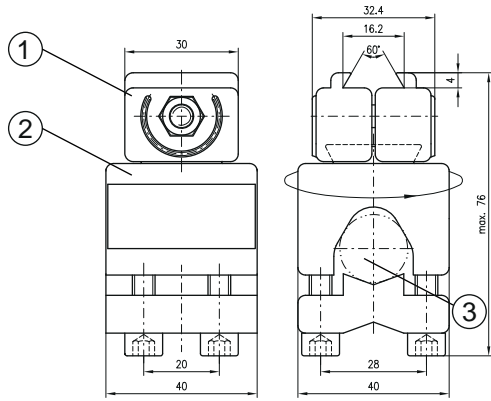

all dimensions in mm

- 1 Clamping jaws for mounting on the BPS
- 2 Clamp profile for mounting to round or oval pipes (\varnothing 16 ... 20 mm)
- 3 Rod holder, turnable 360°

Fig. 13.11: Dimensioned drawing BT 56 mounting device

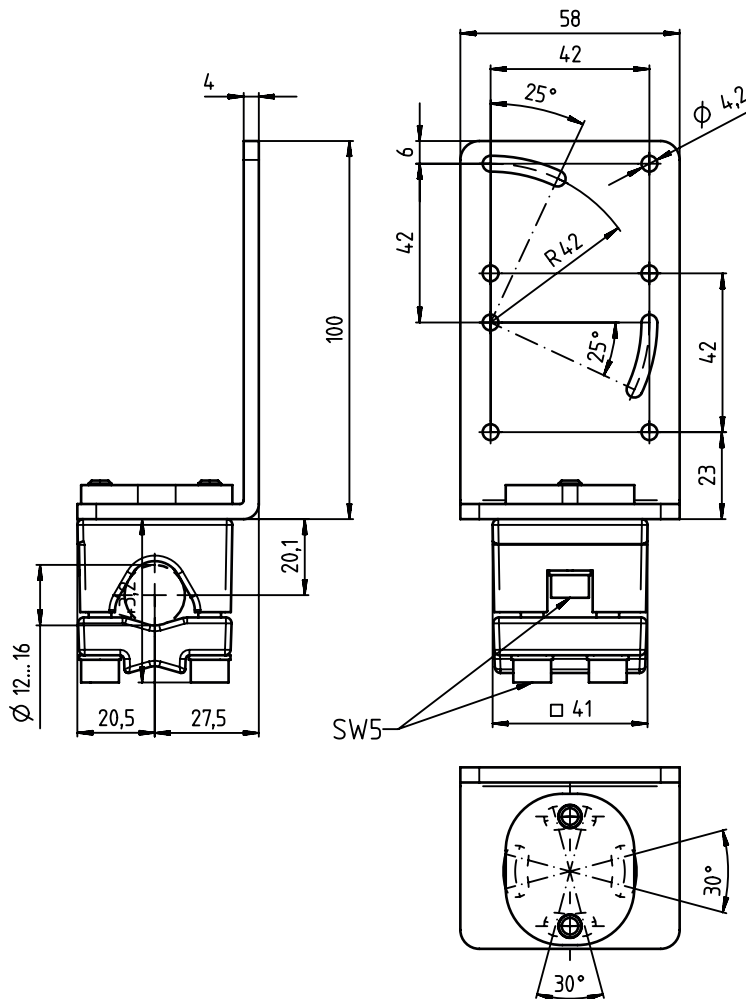

all dimensions in mm

Fig. 13.12: Dimensioned drawing BT 300-1 mounting device

13.5 Dimensioned drawing bar code tape

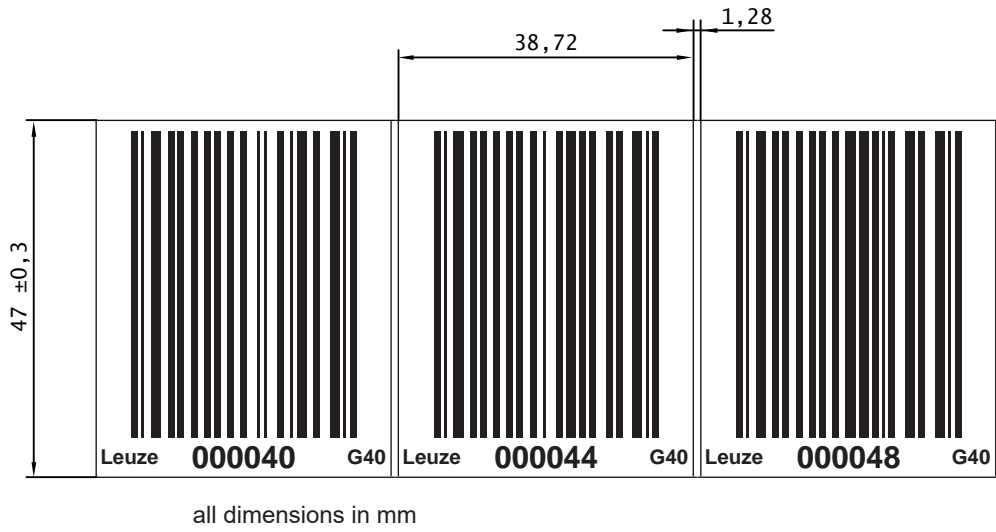


Fig. 13.13: Dimensioned drawing BCB G40 ... bar code tape with 40 mm grid

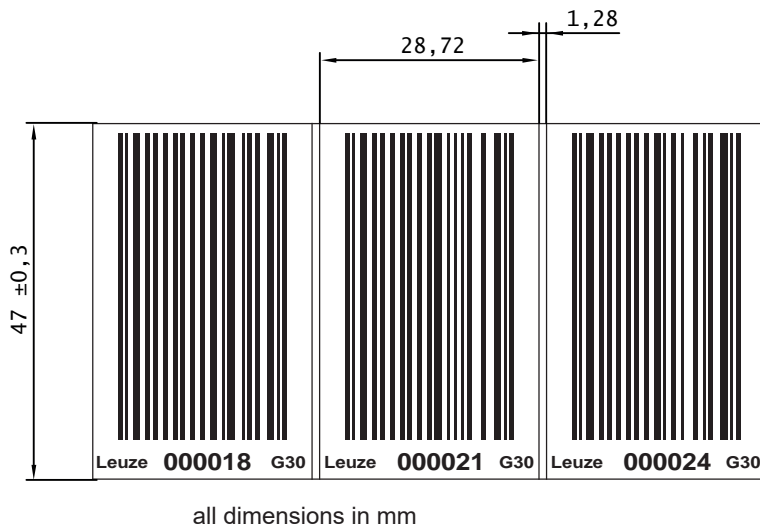


Fig. 13.14: Dimensioned drawing BCB G30 ... bar code tape with 30 mm grid

14 Order guide and accessories

14.1 BPS 301i type overview

Tab. 14.1: BPS 301i type overview

Part no.	Part designation	Description
50125671	BPS 301i SM 100 D H	BPS with RS 485 interface, display and heating
50125672	BPS 301i SM 100 D	BPS with RS 485 interface and display
50125673	BPS 301i SM 100	BPS with RS 485 interface

14.2 Connection hoods

Tab. 14.2: BPS connection hoods

Part no.	Part designation	Description
50116469	MS 301	Connection hood with M12 connectors
50116464	MK 301	Connection hood with spring-cage terminals
50114571	KB 301-3000	Connection hood with cable

14.3 Accessory terminating resistor

Tab. 14.3: Accessories – terminating resistor

Part no.	Part designation	Description
50038539	TS 02-4-SA M12	M12 connector with integrated terminating resistor for BUS OUT

14.4 Cables accessories

Tab. 14.4: Accessories – PWR connection cable (voltage supply)

Part no.	Part designation	Description
50132079	KD U-M12-5A-V1-050	PWR connection cable, M12 socket for PWR, axial plug outlet, open cable end, cable length 5 m, not shielded
50132080	KD U-M12-5A-V1-100	PWR connection cable, M12 socket for PWR, axial plug outlet, open cable end, cable length 10 m, not shielded

Tab. 14.5: Accessories – BUS IN connection cable (open cable end)

Part no.	Part designation	Description
M12 plug for BUS IN, axial connector, open line end		
50135242	KD PB-M12-4A-P3-020	BUS IN connection cable, length 2 m
50135243	KD PB-M12-4A-P3-050	BUS IN connection cable, length 5 m
50135244	KD PB-M12-4A-P3-100	BUS IN connection cable, length 10 m
50135245	KD PB-M12-4A-P3-150	BUS IN connection cable, length 15 m
50135246	KD PB-M12-4A-P3-300	BUS IN connection cable, length 30 m

Tab. 14.6: Accessories – BUS OUT connection cable (open cable end)

Part no.	Part designation	Description
M12 plug for BUS OUT, axial connector, open cable end		
50135247	KS PB-M12-4A-P3-020	BUS OUT connection cable, length 2 m
50135248	KS PB-M12-4A-P3-050	BUS OUT connection cable, length 5 m
50135249	KS PB-M12-4A-P3-100	BUS OUT connection cable, length 10 m
50135250	KS PB-M12-4A-P3-150	BUS OUT connection cable, length 15 m
50135251	KS PB-M12-4A-P3-300	BUS OUT connection cable, length 30 m

Tab. 14.7: Accessories – BUS OUT interconnection cable (M12 to M12)

Part no.	Part designation	Description
M12 plug + M12 socket, axial connectors		
50135252	KDS PB-M12-4A-M12-4A-P3-010	BUS OUT interconnection cable, length 1 m
50135253	KDS PB-M12-4A-M12-4A-P3-020	BUS OUT interconnection cable, length 2 m
50135254	KDS PB-M12-4A-M12-4A-P3-050	BUS OUT interconnection cable, length 5 m
50135255	KDS PB-M12-4A-M12-4A-P3-100	BUS OUT interconnection cable, length 10 m
50135256	KDS PB-M12-4A-M12-4A-P3-150	BUS OUT interconnection cable, length 15 m
50135257	KDS PB-M12-4A-M12-4A-P3-300	BUS OUT interconnection cable, length 30 m

Tab. 14.8: Accessory USB cable

Part no.	Part designation	Description
50117011	KB USB A – USB miniB	USB service cable, 1 Type A and Mini-B type connector, length 1 m

14.5 Other accessories

Tab. 14.9: Accessories – BPS connectors

Part no.	Part designation	Description
50020501	KD 095-5A	M12 axial socket for voltage supply, shielded
50038537	KD 02-5-SA	M12 axial plug for BUS OUT, shielded

Tab. 14.10: Mounting device accessories

Part no.	Part designation	Description
50124941	BTU 0300M-W	Mounting device for wall mounting – precise alignment of the BPS without adjustment (easy-mount).
50121433	BT 300 W	Mounting bracket for wall mounting
50027375	BT 56	Mounting device for rod
50121434	BT 300-1	Mounting device for rod

14.6 Bar code tapes

14.6.1 Standard bar code tapes

Leuze offers a wide selection of standardized bar code tapes.

Tab. 14.11: Data for standard bar code tapes

Feature	Value
Grid dimensions	30 mm (BCB G30 ...) 40 mm (BCB G40 ...)
Height	47 mm 25 mm
Length	5 m 10 m, 20 m ... in 10 m increments up to 150 m 200 m
Length graduation	10 m
Tape start value	0

- Standard bar code tapes are printed below the bar code with the corresponding position value.
- The bar code tapes are wound and delivered on a core.

All available standard tapes are listed on the Leuze website under the currently selected BPS device in the *Accessories* tab.

14.6.2 Special bar code tapes

Special tapes are produced according to customer specifications.

Tab. 14.12: Data for special bar code tapes

Feature	Value
Grid dimensions	30 mm (BCB G30 ...) 40 mm (BCB G40 ...)
Height	20 mm – 140 mm in millimeter increments
Length	According to customer specifications, maximum 10,000 m
Tape start value	According to customer specifications, dependent on grid dimension
Tape end value	According to customer specifications, dependent on grid dimension, maximum tape end value at 10,000 m

- Special bar code tapes are printed below the bar code with the corresponding position value.
- Special bar code tapes over 300 m in length are wound and delivered on multiple rolls.

An entry wizard is available for special bar code tapes on the Leuze website under devices BPS 300 - *Accessories* tab. The entry wizard provides support when entering the individual pieces of tape data and creates a query or order form with the correct part number and type designation.

14.6.3 Twin tapes

Twin tapes are special bar code tapes and are produced according to customer specifications.

Tab. 14.13: Data for Twin tapes

Feature	Value
Grid dimensions	30 mm (BCB G30 ...) 40 mm (BCB G40 ...)
Height	20 mm – 140 mm in millimeter increments
Length	According to customer specifications, maximum 10,000 m
Tape start value	According to customer specifications, dependent on grid dimension

Feature	Value
Tape end value	According to customer specifications, dependent on grid dimension, maximum tape end value at 10,000 m

- Two identical tapes are delivered in one package. The tape values as well as the tape tolerances are identical on both tapes. The tapes are printed with the position value in plain text below and above the bar code.
- Twin tapes over 300 m in length are wound and delivered on multiple rolls.

An entry wizard for twin tapes with custom tape start value, tape end value, custom length and height is available on the Leuze website under devices BPS 300 - *Accessories* tab. The entry wizard provides support when entering the individual pieces of tape data and creates a query or order form with the correct part number and type designation.

14.6.4 Repair tapes

Repair tapes are produced according to customer specifications.

Tab. 14.14: Data for repair tapes

Feature	Value
Grid dimensions	30 mm (BCB G30 ...) 40 mm (BCB G40 ...)
Height	47 mm 25 mm
Length	According to customer specifications, maximum 5 m
Tape start value	According to customer specifications, dependent on grid dimension
Tape end value	According to customer specifications, dependent on grid dimension

- Repair tapes longer than 5 m must be ordered as special tapes.
- Repair tapes are printed below the bar code with the corresponding position value.
- Repair tapes are usually delivered wound on a roll.

An entry wizard is available for repair tapes on the Leuze website under devices BPS 300 - *Accessories* tab. The entry wizard provides support when entering the individual pieces of tape data and creates a query or order form with the correct part number and type designation.

14.6.5 Marker labels and control labels

Leuze offers a selection of standardized marker and control labels.

Tab. 14.15: Data for marker labels and control labels

Feature	Value
Grid dimensions	30 mm (BCB G30 ...) 40 mm (BCB G40 ...)
Height	47 mm
Base color of control label BCB ... MVS	Red
Base color of control label BCB ... MV0	Yellow
Base color of marker label BCB ... ML	Red

- Marker labels and control labels are individual labels that are delivered in a packaging unit containing 10 pieces.

All available marker and control labels are listed on the Leuze website for the currently selected BPS device in the *Accessories* tab.

15 EC Declaration of Conformity

The bar code positioning systems of the BPS 300 series have been developed and manufactured in accordance with the applicable European standards and directives.



16 Appendix

16.1 Bar code sample

BCB G40 ... bar code tape with 40 mm grid



Fig. 16.1: Continuous, 40 mm grid



Fig. 16.2: Single label MVS, 40 mm grid



Fig. 16.3: Single label MV0, 40 mm grid



Fig. 16.4: Single marker label, 40 mm grid

BCB G30 ... bar code tape with 30 mm grid



Fig. 16.5: Continuous, 30 mm grid



Fig. 16.6: Single label MVS, 30 mm grid



Fig. 16.7: Single label MV0, 30 mm grid

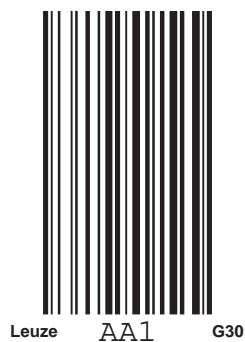


Fig. 16.8: Single marker label, 30 mm grid