

Original operating instructions

## AMS 307i

Optical laser measurement system – SSI



© 2023

Leuze electronic GmbH + Co. KG

In der Braike 1

D-73277 Owen / Germany

Phone: +49 7021 573-0

Fax: +49 7021 573-199

<http://www.leuze.com>

[info@leuze.de](mailto:info@leuze.de)

**The main menus**

```
AMS 307i 120
Leuze electronic
GmbH & Co. KG
SW: V 1.3.0HW:1
SN: -----
```



```
IO1 LSR PLB
IO2 TMP ATT
ERR SSI
+ 87.000m
```



```
Parameter
Parameter handling
SSI
Position value
I/O
Other
```



```
Language selection
o Deutsch
● English
o Español
o Français
o Italiano
```



```
Service
Status messages
Diagnosis
Expanded diagnosis
```

**Device information - main menu**  
This menu item contains detailed information on

- Device type
- Manufacturer
- Software and hardware version
- Serial number

No entries can be made via the display.

**Status and measurement data - main menu**

- Display of status, warning and error messages.
- Status overview of the switching inputs/ outputs
- Bar graph for the received signal level.
- Activated interface.
- Measurement value

No entries can be made via the display. See "Indicators in the display" on page 39.

**Parameter - main menu**

Configuration of the SSI interface is performed via the "SSI" menu item.

**Language selection - main menu**

- Selection of the display language. See "Language selection menu" on page 48.

**Service - main menu**

- Display of status messages.
- Display of diagnostic data.

No entries can be made via the display. See "Service menu" on page 48.

**Device buttons:**

Navigate upward/sideways

Navigate downward/sideways

**ESCAPE**  
leave

 **ENTER**  
confirm
**Input of values**

```
100
<-|0123456789 save
Default ---- Unit
126 | |
```

 + **Delete character**

 + **Enter digit**
save + **Save input**

- 1 General information . . . . . 4**
- 1.1 Explanation of symbols . . . . . 4
- 1.2 Declaration of Conformity . . . . . 4
- 1.3 Description of functions AMS 307*i* . . . . . 5
  
- 2 Safety . . . . . 6**
- 2.1 Intended use . . . . . 6
- 2.2 Foreseeable misuse . . . . . 7
- 2.3 Competent persons . . . . . 7
- 2.4 Exemption of liability . . . . . 8
- 2.5 Laser safety notices . . . . . 8
  
- 3 Fast commissioning / operating principle . . . . . 11**
- 3.1 Mounting the AMS 307*i* . . . . . 11
- 3.1.1 Mounting the device . . . . . 11
- 3.1.2 Mounting the reflector . . . . . 11
- 3.2 Connecting the voltage supply . . . . . 12
- 3.3 Display . . . . . 12
- 3.4 SSI interface . . . . . 12
  
- 4 Technical data . . . . . 13**
- 4.1 Technical data of laser measurement system . . . . . 13
- 4.1.1 General specifications AMS 307*i* . . . . . 13
- 4.1.2 AMS 307*i*/dimensioned drawing . . . . . 15
- 4.1.3 Overview of AMS 307*i*/types . . . . . 16
  
- 5 Installation and mounting . . . . . 17**
- 5.1 Storage, transportation . . . . . 17
- 5.2 Mounting the AMS 307*i* . . . . . 18
- 5.2.1 Optional mounting bracket . . . . . 20
- 5.2.2 Parallel mounting of the AMS 307*i* . . . . . 21
- 5.2.3 Parallel mounting of AMS 307*i*/and DDLS optical data transmission . . . . . 22
- 5.3 Mounting the AMS 307*i*/with laser beam deflector unit . . . . . 23
- 5.3.1 Mounting the laser beam deflector unit with integrated mounting bracket . . . . . 23
- 5.3.2 Dimensioned drawing of US AMS 01 deflector unit . . . . . 24
- 5.3.3 Mounting the US 1 OMS deflector unit without mounting bracket . . . . . 25

<b>6</b>	<b>Reflectors</b> .....	<b>26</b>
6.1	General information .....	26
6.2	Description of the reflective tape .....	26
6.2.1	Technical data of self-adhesive tape .....	27
6.2.2	Technical data of reflective tape on carrier plate .....	27
6.2.3	Dimensioned drawing of reflective tape on carrier plate .....	28
6.2.4	Technical data of heated reflectors .....	29
6.2.5	Dimensioned drawing of heated reflectors .....	30
6.3	Selecting reflector size .....	31
6.4	Mounting the reflector .....	32
6.4.1	General information .....	32
6.4.2	Mounting the reflector .....	32
6.4.3	Table of reflector pitches .....	35
<b>7</b>	<b>Electrical connection</b> .....	<b>36</b>
7.1	Safety notices for the electrical connection .....	36
7.2	PWR – voltage supply / switching input/output .....	37
7.3	SSI .....	37
7.4	Service .....	38
<b>8</b>	<b>Display and control panel AMS 307<i>i</i></b> .....	<b>39</b>
8.1	Structure of the control panel .....	39
8.2	Status indicators and operation .....	39
8.2.1	Indicators in the display .....	39
8.2.2	LED status indicators .....	41
8.2.3	Control buttons .....	42
8.3	Menu description .....	43
8.3.1	The main menus .....	43
8.3.2	Parameter menu .....	44
8.3.3	Language selection menu .....	48
8.3.4	Service menu .....	48
8.4	Operation .....	49
<b>9</b>	<b>SSI interface</b> .....	<b>52</b>
9.1	Principal functionality of the SSI interface .....	52
9.1.1	SSI sequence diagram .....	53
9.1.2	Cable length depending on the data rate .....	54
9.2	SSI - electrical connection .....	54

- 9.3 Default settings of the SSI interface ..... 55
- 9.3.1 Changing the SSI settings via the display ..... 55
  
- 10 Diagnostics and troubleshooting ..... 56**
- 10.1 Service and diagnosis in the display of the AMS 307*i* ..... 56
- 10.1.1 Status messages ..... 56
- 10.1.2 Diagnosis ..... 57
- 10.1.3 Expanded diagnosis ..... 57
- 10.2 General causes of errors ..... 58
- 10.2.1 Power LED ..... 58
- 10.3 Interface errors ..... 58
- 10.3.1 NET LED ..... 58
- 10.4 Status indicators in the display of the AMS 307*i* ..... 59
  
- 11 Type overview and accessories ..... 61**
- 11.1 Part number code ..... 61
- 11.2 Overview of AMS 307*i*/types (SSI) ..... 61
- 11.3 Overview of reflector types ..... 61
- 11.4 Accessories ..... 62
- 11.4.1 Accessories – Mounting bracket ..... 62
- 11.4.2 Accessories – Deflector unit ..... 62
- 11.4.3 Accessories – M12 connector ..... 62
- 11.4.4 Accessories – Ready-made cables for voltage supply ..... 63
- 11.4.5 Accessories – Ready-made cables for the SSI interface ..... 64
  
- 12 Maintenance ..... 66**
- 12.1 General maintenance information ..... 66
- 12.2 Repairs, servicing ..... 66
- 12.3 Disassembling, packing, disposing ..... 66

# 1 General information

## 1.1 Explanation of symbols

The symbols used in this technical description are explained below.



**Attention!**

*This symbol precedes text messages which must strictly be observed. Failure to observe the provided instructions could lead to personal injury or damage to equipment.*



**Attention Laser!**

*This symbol warns of possible danger through hazardous laser radiation.*



**Note!**

*This symbol indicates text passages containing important information.*

## 1.2 Declaration of Conformity

The AMS 307*i* absolute measuring optical laser measurement system was designed and manufactured in accordance with the applicable European directives and standards.

The AMS 3xx*i* series is "UL LISTED" according to American and Canadian safety standards and fulfills the requirements of Underwriter Laboratories Inc. (UL).



**Note!**












*The Declaration of Conformity for these devices can be requested from the manufacturer.*

The manufacturer of the product, Leuze electronic GmbH + Co. KG in D-73277 Owen, possesses a certified quality assurance system in accordance with ISO 9001.

### 1.3 Description of functions AMS 307*i*

The AMS 307*i* optical laser measurement system calculates distances to fixed as well as moving system parts. The distance to be measured is calculated according to the principle of the propagation time of radiated light. Here, the light emitted by the laser diode is reflected by a reflector onto the receiving element of the laser measurement system. The AMS 307*i* uses the "propagation time" of the light to calculate the distance to the reflector. The high absolute measurement accuracy of the laser measurement system and the fast response time are designed for position control applications.

With its AMS 3xx*i* product series, Leuze makes available a wide range of internationally relevant interfaces. Note that each interface version listed below corresponds to a different AMS 3xx*i* model.

	AMS 304 <i>i</i>
	AMS 307 <i>i</i>
	AMS 348 <i>i</i>
	AMS 355 <i>i</i>
	AMS 358 <i>i</i>
	AMS 335 <i>i</i>
	AMS 338 <i>i</i>
	AMS 308 <i>i</i>
	AMS 384 <i>i</i>
	AMS 301 <i>i</i>
	AMS 300 <i>i</i>



## 2 Safety

This sensor was developed, manufactured and tested in line with the applicable safety standards. It corresponds to the state of the art.

### 2.1 Intended use

The AMS 3xx*i* is an absolute measuring optical laser measurement system which allows distance measurement of up to 200m against a reflector.

#### Areas of application

The AMS 3xx*i* is designed for the following areas of application:

- Positioning of automated, moving plant components
- Travel and lifting axes of high-bay storage devices
- Repositioning units
- Gantry crane bridges and their trolleys
- Elevators
- Electroplating plants



CAUTION

#### Observe intended use!

↪ *Only operate the device in accordance with its intended use. The protection of personnel and the device cannot be guaranteed if the device is operated in a manner not complying with its intended use.*

*Leuze electronic GmbH + Co. KG is not liable for damages caused by improper use.*

↪ *Read the technical description before commissioning the device. Knowledge of this technical description is an element of proper use.*

#### NOTE

##### Comply with conditions and regulations!

↪ *Observe the locally applicable legal regulations and the rules of the employer's liability insurance association.*



#### Attention

*For UL applications, use is only permitted in Class 2 circuits in accordance with the NEC (National Electric Code).*

## 2.2 Foreseeable misuse

Any use other than that defined under "Intended use" or which goes beyond that use is considered improper use.

In particular, use of the device is not permitted in the following cases:

- in rooms with explosive atmospheres
- as stand-alone safety component in accordance with the machinery directive <sup>1)</sup>
- for medical purposes

### NOTE

#### **Do not modify or otherwise interfere with the device!**

↪ *Do not carry out modifications or otherwise interfere with the device.*

*The device must not be tampered with and must not be changed in any way.*

*The device must not be opened. There are no user-serviceable parts inside.*

*Repairs must only be performed by Leuze electronic GmbH + Co. KG.*

## 2.3 Competent persons

Connection, mounting, commissioning and adjustment of the device must only be carried out by competent persons.

Prerequisites for competent persons:

- They have a suitable technical education.
- They are familiar with the rules and regulations for occupational safety and safety at work.
- They are familiar with the technical description of the device.
- They have been instructed by the responsible person on the mounting and operation of the device.

### **Certified electricians**

Electrical work must be carried out by a certified electrician.

Due to their technical training, knowledge and experience as well as their familiarity with relevant standards and regulations, certified electricians are able to perform work on electrical systems and independently detect possible dangers.

In Germany, certified electricians must fulfill the requirements of accident-prevention regulations DGUV (German Social Accident Insurance) provision 3 (e.g. electrician foreman). In other countries, there are respective regulations that must be observed.

1) Use as safety-related component within the safety function is possible, if the component combination is designed correspondingly by the machine manufacturer.

## 2.4 Exemption of liability

Leuze electronic GmbH + Co. KG is not liable in the following cases:

- The device is not being used properly.
- Reasonably foreseeable misuse is not taken into account.
- Mounting and electrical connection are not properly performed.
- Changes (e.g., constructional) are made to the device.

## 2.5 Laser safety notices



ATTENTION! LASER RADIATION – CLASS 2 LASER PRODUCT

### Do not stare into beam!

The device satisfies the requirements of IEC 60825-1:2014 / EN 60825-1:2014+A11:2021 safety regulations for a product of **laser class 2** and complies with 21 CFR 1040.10 except for conformance with IEC 60825-1 Ed. 3., as described in Laser Notice No. 56, dated May 8, 2019.

- ⚠ *Never look directly into the laser beam or in the direction of reflected laser beams!  
If you look into the beam path over a longer time period, there is a risk of injury to the retina.*
- ⚠ *Do not point the laser beam of the device at persons!*
- ⚠ *Interrupt the laser beam using a non-transparent, non-reflective object if the laser beam is accidentally directed towards a person.*
- ⚠ *When mounting and aligning the device, avoid reflections of the laser beam off reflective surfaces!*
- ⚠ *CAUTION! The use of operating and adjustment devices other than those specified here or the carrying out of differing procedures may lead to dangerous exposure to radiation.*
- ⚠ *Observe the applicable statutory and local laser protection regulations.*
- ⚠ *The device must not be tampered with and must not be changed in any way.  
There are no user-serviceable parts inside the device.  
Repairs must only be performed by Leuze electronic GmbH + Co. KG.*

**NOTE**

**Affix laser information and warning signs!**


Laser information and warning signs are attached to the device (see figure 2.1). Also included with the device are self-adhesive laser warning and laser information signs (stick-on labels) in multiple languages (see figure 2.2).

☞ *Affix the laser information sheet to the device in the language appropriate for the place of use.*

*When using the device in the U.S.A., use the stick-on label with the "Complies with 21 CFR 1040.10" notice.*

☞ *Affix the laser information and warning signs near the device if no signs are attached to the device (e.g. because the device is too small) or if the attached laser information and warning signs are concealed due to the installation position.*

*Affix the laser information and warning signs so that they can be read without the reader being exposed to the laser radiation of the device or other optical radiation.*

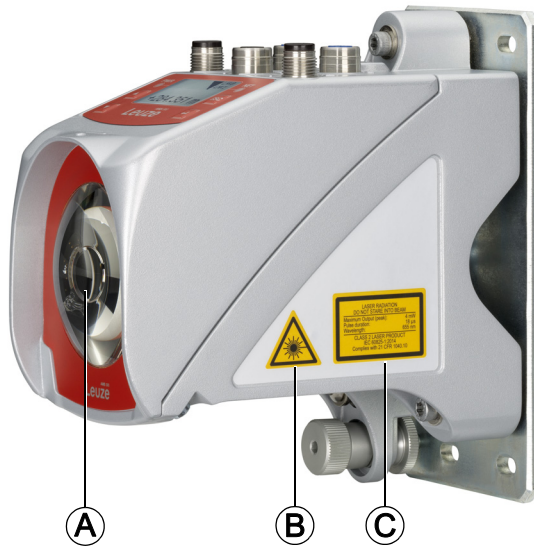

- A Laser aperture
- B Laser warning sign
- C Laser information sign with laser parameters

Figure 2.1: Laser apertures, laser warning signs

50125612-03

LASERSTRAHLUNG  
NICHT IN DEN STRAHL BLICKEN

Max. Leistung (peak):	≤4 mW
Impulsdauer:	≤0,8 μs
Wellenlänge:	655 nm

LASER KLASSE 2  
EN 60825-1:2014+A11:2021

RADIAZIONE LASER  
NON FISSARE IL FASCIO

Potenza max. (peak):	≤4 mW
Durata dell'impulso:	≤0,8 μs
Lunghezza d'onda:	655 nm

APPARECCHIO LASER DI CLASSE 2  
EN 60825-1:2014+A11:2021

LASER RADIATION  
DO NOT STARE INTO BEAM

Maximum Output (peak):	≤4 mW
Pulse duration:	≤0,8 μs
Wavelength:	655 nm

CLASS 2 LASER PRODUCT  
EN 60825-1:2014+A11:2021

RAYONNEMENT LASER  
NE PAS REGARDER DANS LE FAISCEAU

Puissance max. (crête):	≤4 mW
Durée d'impulsion:	≤0,8 μs
Longueur d'onde:	655 nm

APPAREIL À LASER DE CLASSE 2  
EN 60825-1:2014+A11:2021



RADIACIÓN LÁSER  
NO MIRAR FIJAMENTE AL HAZ

Potencia máx. (peak):	≤4 mW
Duración del impulso:	≤0,8 μs
Longitud de onda:	655 nm

PRODUCTO LÁSER DE CLASE 2  
EN 60825-1:2014+A11:2021

RADIAÇÃO LASER  
NÃO OLHAR FIXAMENTE O FEIXE

Potência máx. (peak):	≤4 mW
Período de pulso:	≤0,8 μs
Comprimento de onda:	655 nm

EQUIPAMENTO LASER CLASSE 2  
EN 60825-1:2014+A11:2021

LASER RADIATION  
DO NOT STARE INTO BEAM

Maximum Output (peak):	≤4 mW
Pulse duration:	≤0,8 μs
Wavelength:	655 nm

CLASS 2 LASER PRODUCT  
IEC 60825-1:2014  
Complies with 21 CFR 1040.10

激光辐射  
勿直视光束

最大输出 (峰值):	≤4 mW
脉冲持续时间:	≤0,8 μs
波长:	655 nm

2 类激光产品  
IEC 60825-1:2014



Figure 2.2: Laser warning and information signs – supplied stick-on labels

### 3 Fast commissioning / operating principle



**Note!**

Below you will find a **short description for the initial commissioning** of the AMS 307*i*. Detailed explanations for the listed points can be found throughout the handbook.

#### 3.1 Mounting the AMS 307*i*

The AMS 307*i* and the corresponding reflector are mounted on two mutually opposing, plane-parallel, flat walls.



Figure 3.1: Schematic illustration of mounting



**Attention!**

For error-free position measurement, there must be an unobstructed line-of-sight between the AMS 307*i* and the reflector.

##### 3.1.1 Mounting the device

The laser is mounted using 4 screws (M5).

Alignment is performed using 2 adjustment screws. Adjust so that the laser light spot is positioned at the center of the reflector. The alignment is secured with the knurled nut and locked with the M5 nut.

**Detailed information can be found in Chapter 5.2 and Chapter 5.3.**

##### 3.1.2 Mounting the reflector

The reflector is mounted using 4 screws (M5). The reflector is angled using the spacer sleeves included. Incline the reflector by approx. 1°.

**Detailed information can be found in Chapter 6.4.**

### 3.2 Connecting the voltage supply

The laser measurement system is connected using M12 connectors. The voltage supply is connected via the PWR M12 connection.

**Detailed information can be found in Chapter 7.**

### 3.3 Display

Once the laser measurement system is supplied with voltage, the device status as well as the measured position values can be read on the display. The display automatically switches to the display of the measurement values.

Use the up/down buttons (▲ ▼) to the left of the display to read and change a wide range of data and parameters.

**Detailed information can be found in Chapter 8.**

### 3.4 SSI interface

For correct data exchange between frequency inverter and AMS 307*i*, both devices must have the same settings for the following parameters.

- Encoding
- Number of data bits
- Resolution
- Error bit on/off

**For further information, see also Chapter 9 "SSI interface" on page 52 and display menu structure level 2, menu item "SSI" in the appendix of the manual.**

## 4 Technical data

### 4.1 Technical data of laser measurement system

#### 4.1.1 General specifications AMS 307/

Measurement data	AMS 307/40	AMS 307/120
Measurement range	0.2 ... 40m	0.2 ... 120m
Accuracy	± 2mm	± 2mm
Reproducibility <sup>1)</sup>	0.3mm	0.5mm
Light spot diameter	≤ 40mm	≤ 100mm
Output time		1.7 ms
Response time		14ms
Basis for contouring error calculation		7 ms
Resolution	Adjustable, see chapter 9 "SSI interface"	
Temperature drift	≤ 0.1mm/K	
Ambient temperature sensitivity	1 ppm/K	
Air pressure sensitivity	0.3ppm/hPa	
Traverse rate	≤ 10m/s	
<b>Electrical data</b>		
Supply voltage $V_{in}$ <sup>2)</sup>	18 ... 30VDC	
Current consumption	≤ 250mA / 24VDC	
<b>Optical data</b>		
Transmitter	Laser diode, red light	
Laser class	2 in acc. with IEC 60825-1:2014 / EN 60825-1:2014+A11:2021	
Wavelength	655nm	
Impulse duration	≤ 0.8µs	
Max. output power (peak)	≤ 4mW	
<b>Interfaces</b>		
SSI clock rate	50kHz ... 800kHz	
<b>Controls and indicators</b>		
Keyboard	4 keys	
Display	Monochromatic graphical display, 128 x 64 pixels	
LED	2 LEDs, two-colored	
Inputs/outputs	2, programmable	
Quantity	2, programmable	
Input	Protected against polarity reversal	
Output	Max. 60 mA, short-circuit-proof	



**Mechanical data**

Housing	Diecast zinc/aluminum
Optics	Glass
Weight	Approx. 2.45 kg
Degree of protection	IP 65 acc. to EN 60529 <sup>3)</sup>

**Environmental conditions**

Operating temperature	-5 °C ... +50 °C
Storage temperature	-30°C ... +70°C
Air humidity	Max. 90% rel. humidity, non-condensing
MTTF	31 years (at 25 °C) <sup>4)</sup>

**Mechanical/electrical loading capacity**


Vibration	Acc. to EN 60068-2-6
Noise	Acc. to EN 60060-2-64
Shock	Acc. to EN 60068-2-27
EMC	Acc. to EN 61000-6-2 and EN 61000-6-4 <sup>5)</sup>

- 1) Statistical error: 1 sigma; minimum switch-on time: 2min.
- 2) For UL applications: only for use in "Class 2" circuits according to NEC.
- 3) With screwed-on M12 plugs or mounted caps.
- 4) We reserve the right to make changes. (Value is updated at regular intervals.)
- 5) This is a Class A product. In a domestic environment this product may cause radio interference, in which case the operator may be required to take adequate measures.



The AMS 307*i* is designed in accordance with protection class III for supply with PELV (protective extra-low voltage).

4.1.2 AMS 307 / dimensioned drawing

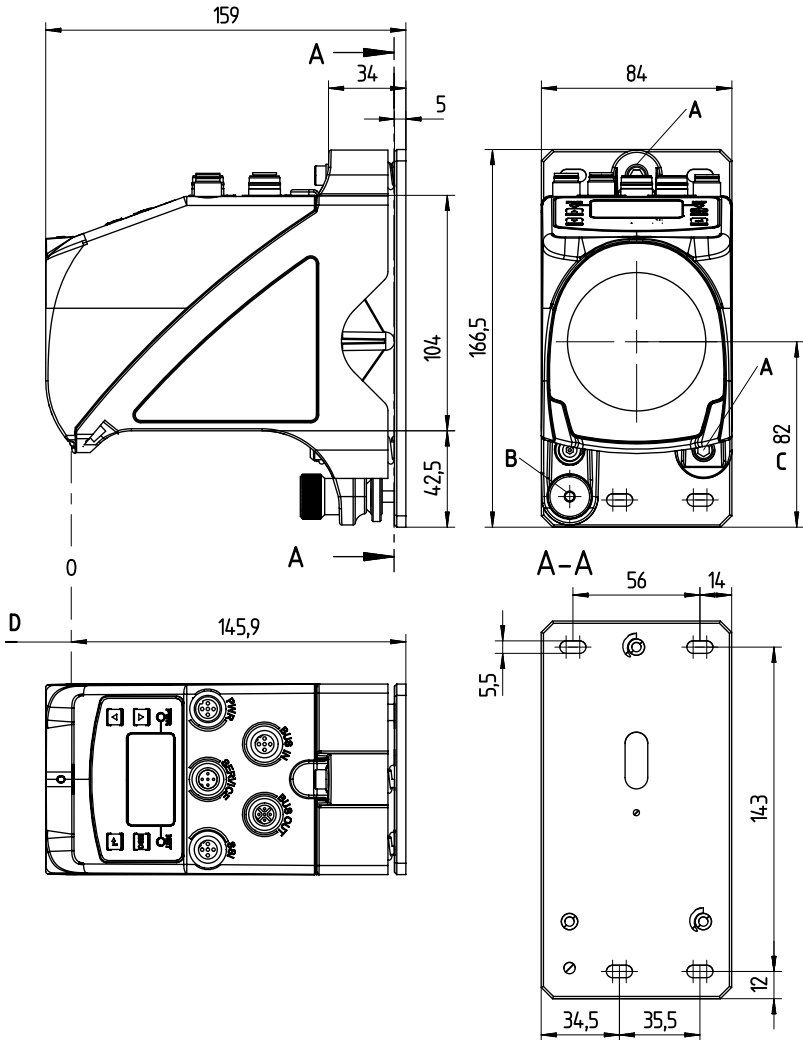

- A** M 5 screw for alignment
- B** Knurled nut with WAF4 hexagon socket and M5 nut for securing
- C** Optical axis
- D** Zero point of the distance to be measured

Figure 4.1: AMS 307 / dimensioned drawing

### 4.1.3 Overview of AMS 307*i*types

#### AMS 307*i*

Type designation	Description	Part no.
AMS 307 <i>i</i> 40	40m operating range, SSI interface	50137593
AMS 307 <i>i</i> 120	120m operating range, SSI interface	50137594

Table 4.1: Overview of AMS 307*i*types

## 5 Installation and mounting

### 5.1 Storage, transportation



**Attention!**

Package the device for transport and storage in such a way that is protected against shock and humidity. Optimum protection is achieved when using the original packaging. Ensure compliance with the approved environmental conditions listed in the specifications.

**Unpacking**

- ↳ Check the packaging content for any damage. If damage is found, notify the post office or shipping agent as well as the supplier.
- ↳ Check the delivery contents using your order and the delivery papers:
  - Delivered quantity
  - Device type and model as indicated on the name plate
  - Brief manual

The name plate provides information as to what AMS 307*i* type your device is. For specific information, please refer to Chapter 11.2.

**Name plates**



Figure 5.1: Device name plate using the AMS 358*i* as an example



**Note!**

Please note that the shown name plate is for illustration purposes only; the contents do not correspond to the original.

- ↳ Save the original packaging for later storage or shipping.

If you have any questions concerning your shipment, please contact your supplier or your local Leuze sales office.

🗑️ *Observe the applicable local regulations when disposing of the packaging materials.*

## 5.2 Mounting the AMS 307/

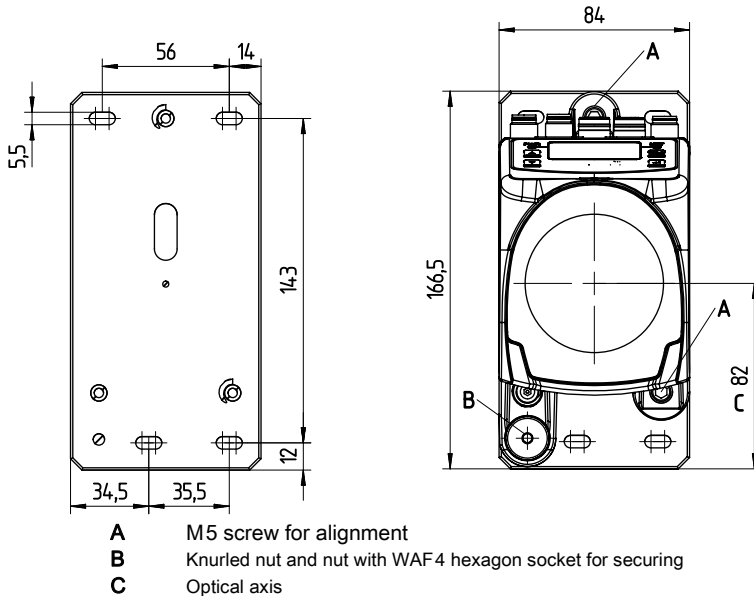


Figure 5.2: Mounting the device

The AMS 307/ and the corresponding reflector are mounted on two mutually opposing, plane-parallel, flat walls or system parts. For error-free position measurement, there must be an unobstructed line-of-sight between the AMS 307/ and the reflector.

Use M5 screws to fasten the laser measurement system. Secure the screws with a lock washer to protect against loosening caused by vibrations.

**Aligning the laser light spot with the center of the reflector**

The laser light spot has to be aligned so that it always hits the center of the opposing reflector, both at close range as well as at the maximum measurement distance. To align, use the two M5 Allen screws ("A" in Figure 5.2). When aligning, please ensure that the knurled nut and the lock nut ("B" in Figure 5.2) are opened wide.

**Attention!**

*To prevent the laser measurement system from moving out of alignment during continuous operation, subsequently hand-tighten the knurled nut and counterlock with the nut with WAF4 hexagon socket ("B" in Figure 5.2). Knurled nut and nut must not be tightened until alignment has been completed.*

**Attention!**

*The device must not be opened. Failure to comply will render the guarantee void. Warranted features cannot be guaranteed after the device has been opened.*

### 5.2.1 Optional mounting bracket

A mounting bracket for mounting the AMS 307*i* on a flat, horizontal surface is available as an optional accessory.

Type designation: MW OMS/AMS 01

Part no.: 50107255

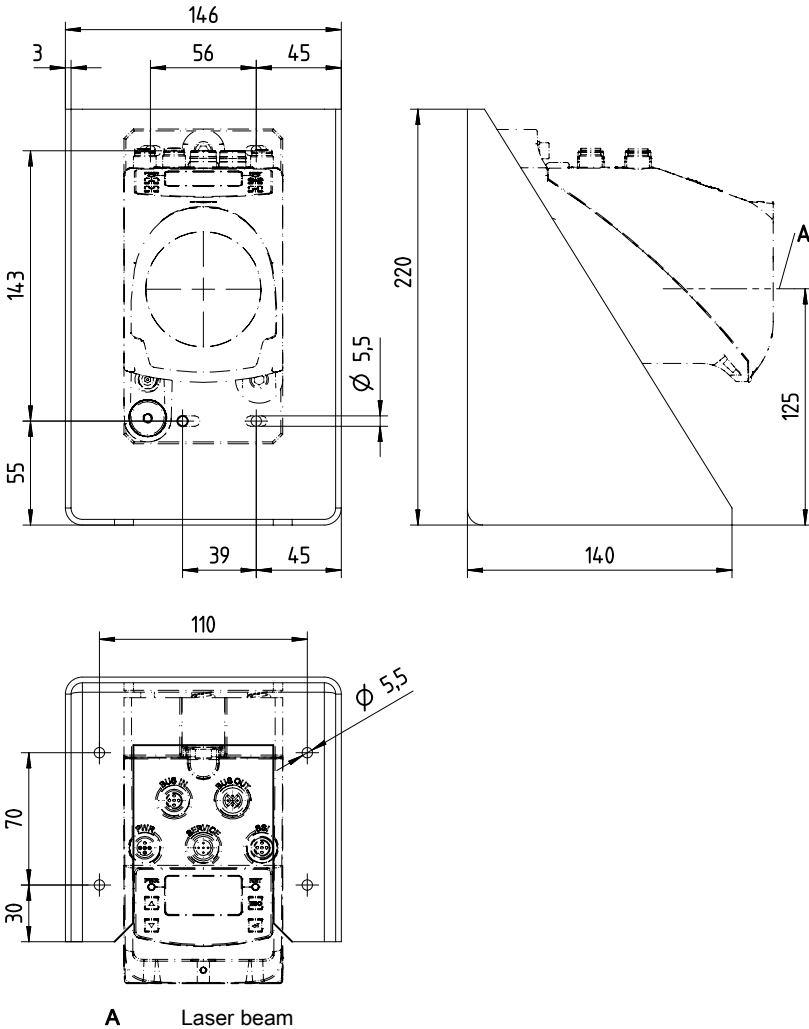


Figure 5.3: Optional mounting bracket

5.2.2 Parallel mounting of the AMS 307*i*

Definition of the term "parallel spacing"

As shown in Figure 5.4, dimension X describes the "parallel spacing" of the inner edges of the two laser light spots on the reflector.

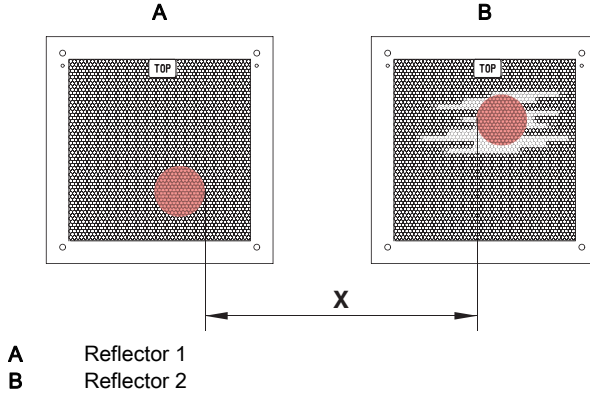


Figure 5.4: Minimum parallel spacing X between adjacent AMS 307*i*

The diameter of the light spot increases with distance.

	AMS 307/40	AMS 307/120
Max. measurement distance	40m	120m
Light spot diameter	≤ 40mm	≤ 100mm

Thus, the center-to-center spacing of the two AMS 307*i* devices with respect to one another can be calculated as a function of the maximum measurement distance.

To define the minimum parallel spacing between two AMS 307*i*, it is necessary to distinguish between three different arrangements of AMS 307*i* and reflectors.

**The AMS 307*i* are mounted stationary and in parallel on one plane.**

**Both reflectors move independently of one another at different distances to the AMS 307*i*.**

Minimum parallel spacing X of the two laser light spots:

$$X = 100\text{mm} + (\text{max. measurement distance in mm} \times 0.01)$$

**The AMS 307*i* are mounted stationary and in parallel on one plane.**

**Both reflectors move in parallel at the same distance to the AMS 307*i*.**

Measurement distance up to 120m: minimum parallel spacing  $X \geq 600\text{mm}$



**The reflectors are mounted stationary and in parallel on one plane.**

**Both AMS 307*i* move independently of one another at different or the same distances to the reflectors.**

Measurement distance up to 120m: minimum parallel spacing  $X \geq 600\text{mm}$



***Note!***

*Please note that when the AMS 307*i* are mounted in a mobile manner, travel tolerances could cause the two laser light spots to move towards each other.*

*Take the travel tolerances of the vehicle into account when defining the parallel spacing of adjacent AMS 307*i*.*

### 5.2.3 Parallel mounting of AMS 307*i* and DDLS optical data transmission

The optical data transceivers of the DDLS series and the AMS 307*i* do not interfere with one another. Depending on the size of the used reflector, the DDLS can be mounted with a minimum parallel spacing of 100mm to the AMS 307*i*. The parallel spacing is independent of the distance.

### 5.3 Mounting the AMS 307*i* with laser beam deflector unit

#### General information

The two available deflector units are used for the 90° deflection of the laser beam, see "Accessories – Deflector unit" on page 62.



#### **Attention!**

*The deflector units are designed for a maximum range of 40m. Longer distances on request.*

#### 5.3.1 Mounting the laser beam deflector unit with integrated mounting bracket

The AMS 307*i* is screwed onto the mechanism of the US AMS 01 deflector unit. The mirror can be mounted for three deflection directions:

1. Upward beam deflection
2. Beam deflection to the left
3. Beam deflection to the right

The deflector unit is mounted on plane-parallel, flat walls or system parts. For error-free position measurement, there must be an unobstructed line-of-sight between the AMS 307*i*... and the deflection mirror as well as between the mirror and the reflector.

Use the M5 screws to mount the deflector unit. Secure the screws with a lock washer to protect against loosening caused by vibrations.



Figure 5.5: Mounting variants of the US AMS 01 laser beam deflector unit

5.3.2 Dimensioned drawing of US AMS 01 deflector unit

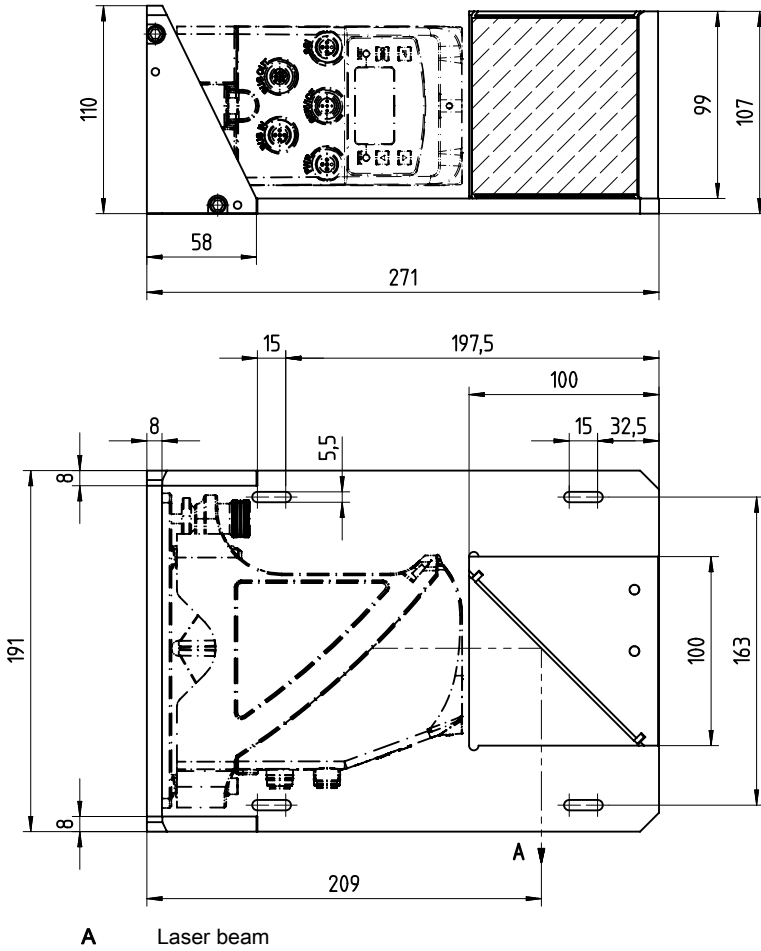


Figure 5.6: Dimensioned drawing of US AMS 01 deflector unit

### 5.3.3 Mounting the US 1 OMS deflector unit without mounting bracket

The US 1 OMS deflector unit and the AMS 307*i* are mounted separately.



**Note!**

When mounting, make certain that the laser light spot of the AMS 307*i* is aligned with the center of the deflection mirror.

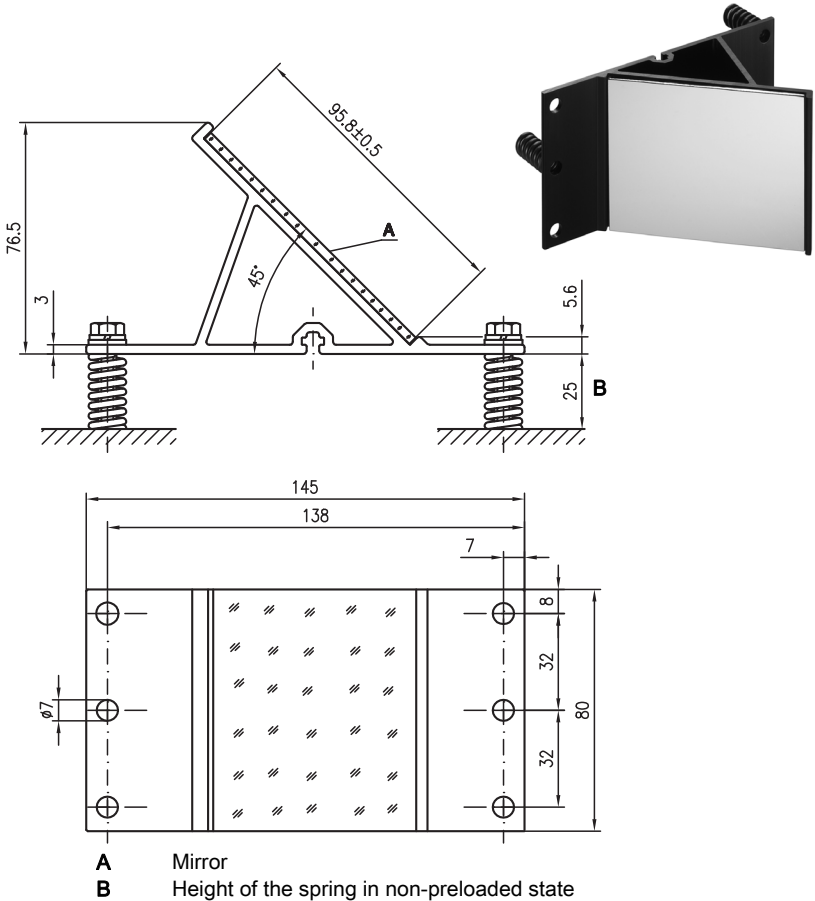


Figure 5.7: Photo and dimensioned drawing of the US 1 OMS deflector unit

The laser light spot is aligned with the reflector as described in Chapter 5.2.

## 6 Reflectors

### 6.1 General information

The AMS 307*i* measures distances against a reflective tape specified by Leuze. All technical data given for the AMS 307*i*, such as the operating range or accuracy, can only be achieved with the reflective tape specified by Leuze.

The reflective tapes are available as self-adhesive tapes or affixed to a carrier plate and with an integrated heater especially for use at low temperatures. Reflective tapes with heating have the designation "**Reflective tape ...x...-H**", where "**H**" is an abbreviation for the heating variant.

The reflective tapes/reflectors must be ordered separately. The choice of size is left to the user. In Chapter 6.3, recommendations on reflector size are given depending on the distance that is to be measured. In each case, the user must check whether the recommendation is suitable for the respective application.

### 6.2 Description of the reflective tape

The reflective tape consists of a white, microprism-based reflective material. The microprisms are protected by a hard, highly transparent protective layer.

Under certain circumstances, the protective layer can cause surface reflections. The surface reflections can be directed past the AMS 307*i* by positioning the reflective tape at a slight incline. The inclination of the reflective tape/reflectors is described in Chapter 6.4.2. The required pitch can be found in Table 6.1 "Reflector pitch resulting from spacer sleeves" on page 35.

The reflective tapes have a protective film that is easy to peel off. It must be removed from the reflector before the complete system is put into operation.

6.2.1 Technical data of self-adhesive tape


	Article				
Type designation	Reflective tape 200x200-S	Reflective tape 500x500-S	Reflective tape 914x914-S	REF 4-A- 150x150	REF 4-A- 300x300
Part no.	50104361	50104362	50108988	50141015	50141014
Film size	200 x 200mm	500 x 500mm	914x914mm		
Recommended application temperature for adhesive tape	+5°C ... +25°C				
Temperature resistance, affixed	-40°C ... +80°C				
Bonding surface	The bonding surface must be clean, dry and free of grease.				
Cutting tape	Cut with a sharp tool, always on the side with the prism structure.				
Cleaning	Do not use any abrasive agents. A conventional household detergent can be used as a cleaning agent. Rinse with clear water and dry the surface.				
Film storage	Store in a cool and dry place.				


6.2.2 Technical data of reflective tape on carrier plate

The reflective tape is affixed to a carrier plate. Included with the carrier plate are spacers for positioning at an incline in order to avoid surface reflections (see chapter 6.4.2 "Mounting the reflector").

	Article		
Type designation	Reflective tape 200x200-M	Reflective tape 500x500-M	Reflective tape 914x914-M
Part no.	50104364	50104365	50104366
Film size	200 x 200mm	500 x 500mm	914x914mm
Outer dimensions of carrier plate	250 x 250mm	550 x 550mm	964 x 964mm
Weight	0.4kg	1.6kg	6kg
Cleaning	Do not use any abrasive agents. A conventional household detergent can be used as a cleaning agent. Rinse with clear water and dry the surface.		
Reflector storage	Store in a cool and dry place.		

6.2.3 Dimensioned drawing of reflective tape on carrier plate

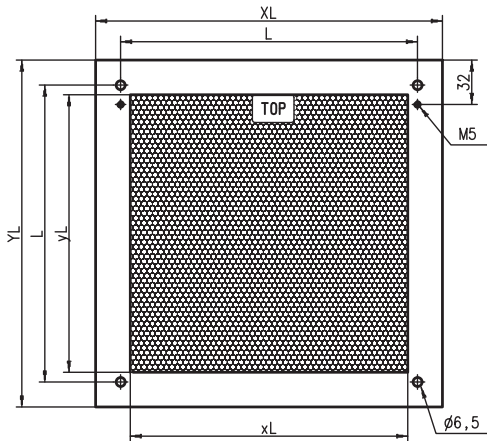

 Always align the TOP marking with the AMS connections! (Chapter 6.4.2)

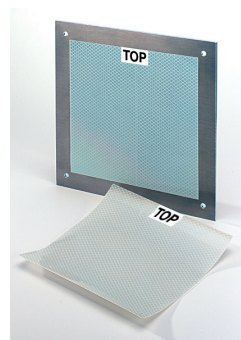


Figure 6.1: Dimensioned drawing of reflectors

Article	Reflective tape (mm)		Reflector plate (mm)		
	xL	yL	XL	YL	L
Reflective tape 200x200-M	200	200	250	250	214
Reflective tape 500x500-M	500	500	550	550	514
Reflective tape 914x914-M	914	914	964	964	928

### 6.2.4 Technical data of heated reflectors

The reflective tape is affixed to a heated, thermally insulated carrier. The insulation results in a very high energetic efficiency.

Only the reflective tape is kept at the specified temperature by the integrated heater. The insulation on the back prevents the generated heat from being dissipated via the steel construction. Energy costs are greatly reduced in the case of continuous heating.

	Article		
Type designation	Reflective tape 200x200-H	Reflective tape 500x500-H	Reflective tape 914x914-H
Part no.	50115020	50115021	50115022
Voltage supply	230 VAC		
Power	100W	600W	1800W
Current consumption	~ 0.5A	~ 3A	~ 8A
Length of supply line	2 m		
Size of reflective tape	200 x 200mm	500 x 500mm	914 x 914mm
Outer dimensions of base material	250 x 250mm	550 x 550mm	964 x 964mm
Weight	0.5kg	2.5kg	12kg
Temperature control	Controlled heating with the following switch-on and switch-off temperatures, measured at the reflector surface.		
Switch-on temperature	~ 5°C		
Switch-off temperature	~ 20°C		
Operating temperature	-30°C ... +70°C		
Storage temperature	-40°C ... +80°C		
Air humidity	Max. 90%, non-condensing		
Cleaning	Do not use any abrasive agents. A conventional household detergent can be used as a cleaning agent. Rinse with clear water and dry the surface.		
Reflector storage	Store in a cool and dry place.		



6.2.5 Dimensioned drawing of heated reflectors

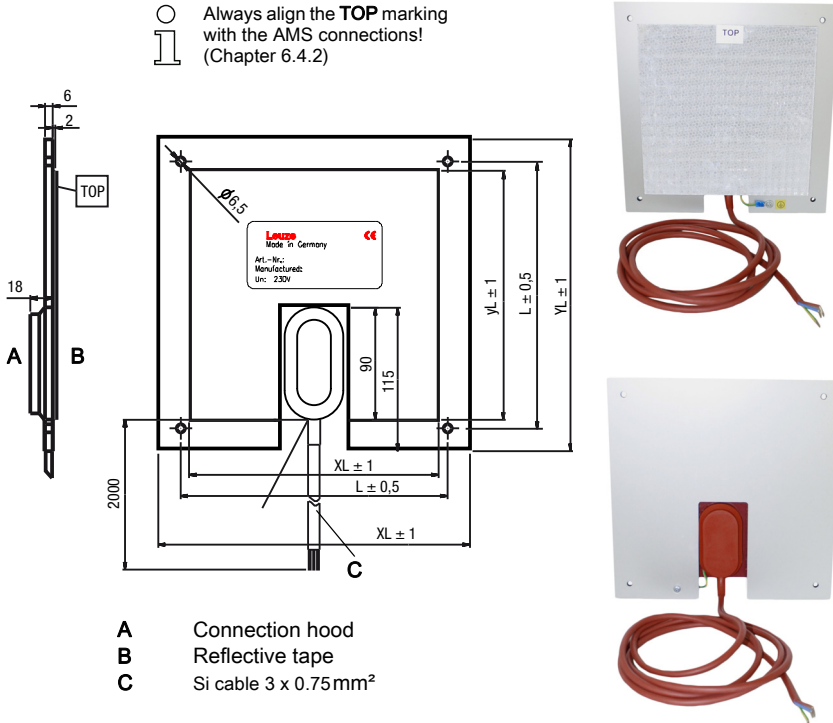


Figure 6.2: Dimensioned drawing of heated reflectors

Article	Reflective tape (mm)		Insulated carrier plate (mm)		
	xL	yL	XL	YL	L
Reflective tape 200x200-H	200	200	250	250	214
Reflective tape 500x500-H	500	500	550	550	514
Reflective tape 914x914-H	914	914	964	964	928

### 6.3 Selecting reflector size

Depending on the system design, the reflector can be mounted so that it moves with the vehicle or it can be mounted at a fixed location.



**Attention!**

*The reflector sizes shown below are a recommendation from Leuze for on-vehicle mounting of the AMS 307*i*. For stationary mounting of the AMS 307*i*, a smaller reflector is generally sufficient for all measurement distances. For this reason, two smaller reflector sizes are available in the self-adhesive variant "-S".*

*During system planning and design, always check whether mechanical travel tolerances require the use of a reflector larger than that which is recommended. This applies, in particular, when the laser measurement system is mounted on a vehicle. During travel, the laser beam must reach the reflector unobstructed. For on-vehicle mounting of the AMS 307*i*, the reflector size must accommodate any travel tolerances that may arise and the associated "wandering" of the light spot on the reflector.*

**Overview of reflector types**

Recommended reflector size			
Selected AMS 307 <i>i</i> (operating range in m)	Recommended reflector size (H x W)	Type designation ...-S = self-adhesive ...-M = Carrier plate ...-H = heating	Part no.
AMS 307 <i>i</i> 40 (max. 40m)	200 x 200mm	REF 4-A-150x150 <sup>1)</sup> Reflective tape 200x200-S Reflective tape 200x200-M Reflective tape 200x200-H REF 4-A-300x300 <sup>1)</sup>	50141015 50104361 50104364 50115020 50141014
AMS 307 <i>i</i> 120 (max. 120m)	500x500mm	Reflective tape 500x500-S Reflective tape 500x500-M Reflective tape 500x500-H	50104362 50104365 50115021

1) For roadside mounting

## 6.4 Mounting the reflector

### 6.4.1 General information

#### ***Self-adhesive reflective tapes***

The reflective tapes of the "Reflective tape ...x...-S" series (self-adhesive) must be affixed to a flat, clean and grease-free surface. We recommend using a separate carrier plate, which is to be provided on-site.

As described in Table 6.1, the reflective tape must be at an angle.

#### ***Reflective tapes on carrier plate***

The reflective tapes of the "Reflective tape ...x...-M" series have corresponding mounting holes. Spacer sleeves are provided to enable mounting at the necessary pitch angle. For further information, see Table 6.1.

#### ***Heated reflectors***

The reflective tapes of the "Reflective tape ...x...-H" series have corresponding mounting holes. Due to the voltage supply affixed on the rear, the reflector cannot be mounted flat. Four spacer sleeves in two different lengths are supplied. Use the spacer sleeves to ensure separation from the wall as well as to provide the necessary pitch for avoiding surface reflection. For further information, see Table 6.1.

The reflector has a 2m-long connection cable for supplying with 230VAC. Connect the cable to the nearest power distribution point. Observe the current consumptions listed in the technical data.



#### ***Attention!***

*Connection work must be carried out by a certified electrician.*

### 6.4.2 Mounting the reflector

The combination of laser measurement system and reflective tape/reflector is mounted so that the laser light spot hits the film as centered as possible and without obstruction.

For this purpose, use the alignment elements provided on the AMS 307*i*.. (see chapter 5.2 "Mounting the AMS 307i"). If necessary, remove the protective film from the reflector.



#### ***Attention!***

The "TOP" label on the reflectors should be aligned the same as the connections of the AMS 307*i*.

#### ***Example:***


*If the AMS 307i is mounted so that the M 12 connections are on the top, the "TOP" label of the reflector is also on the top. If the AMS 307i is mounted so that the M 12 connections are on the side, the "TOP" label of the reflector is also on the side.*



**Note!**


The reflector must be positioned at an angle. Use the spacer sleeves for this purpose. Angle the reflector so that the surface reflections of the foil seal are deflected to the left, right or upwards. Chapter 6.4.3 gives the correct pitch with respect to the reflector size and, thus, the length of the spacers.

**Reflective tapes ...-S and ...-M**

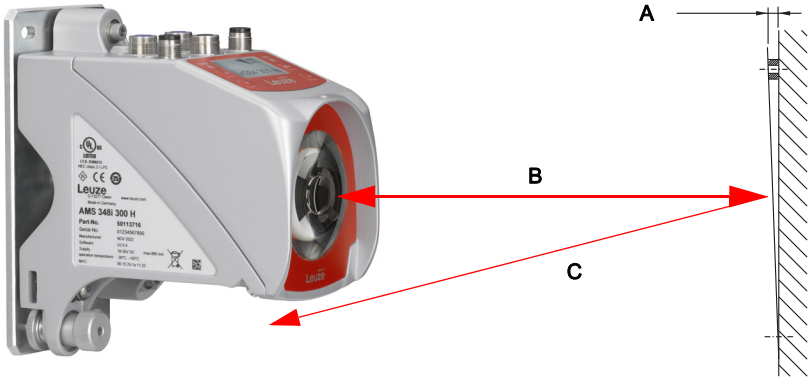

- A** Pitch approx. 1°
- B** Direct reflection due to the triple structure
- C** Deflected surface reflection due to the pitch of the reflective tape

Figure 6.3: Mounting the reflector

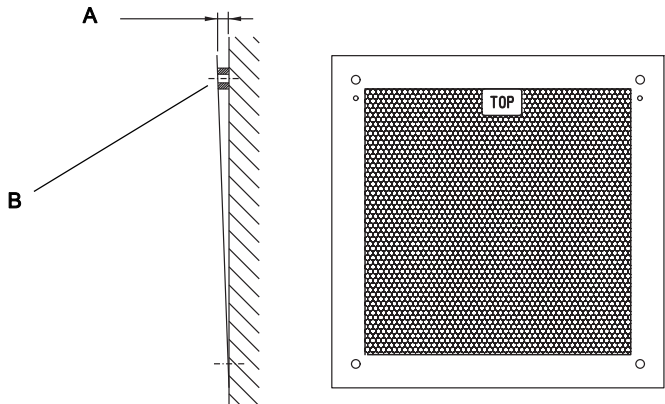

- A** Pitch approx 1°
- B** Spacer sleeves

Figure 6.4: Pitch of the reflector

*Reflective tapes ...-H*

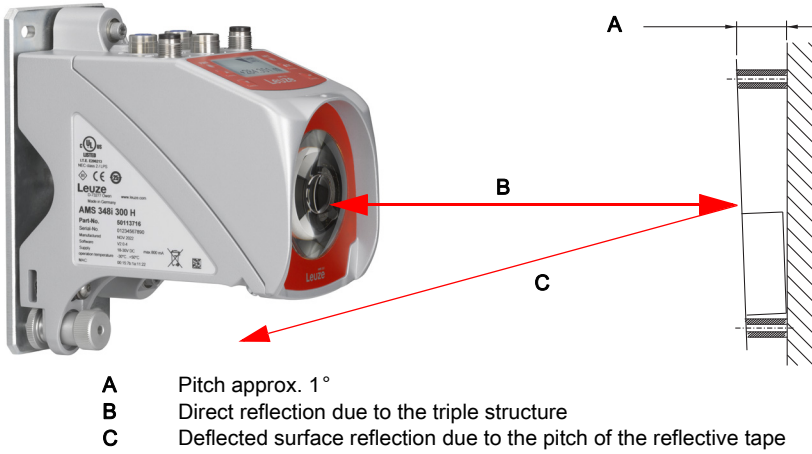


Figure 6.5: Mounting of heated reflectors

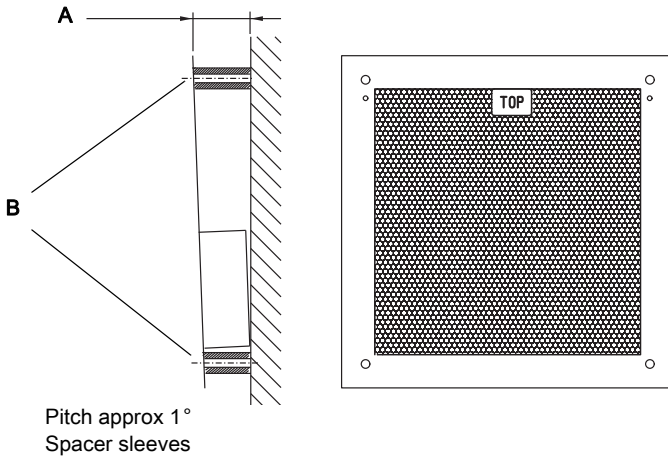


Figure 6.6: Pitch of the heated reflector

### 6.4.3 Table of reflector pitches

Reflector type	Pitch resulting from spacer sleeves <sup>1)</sup>	
Reflective tape 200x200-S Reflective tape 200x200-M	2 x 5mm	
Reflective tape 200x200-H	2 x 15mm	2 x 20mm
Reflective tape 500x500-S Reflective tape 500x500-M	2 x 10mm	
Reflective tape 500x500-H	2 x 15mm	2 x 25mm
Reflective tape 749x914-S	2 x 20mm	
Reflective tape 914x914-S Reflective tape 914x914-M	2 x 20mm	
Reflective tape 914x914-H	2 x 15mm	2 x 35mm

1) Spacer sleeves are included with reflective tape ...-M and ...-H

Table 6.1: Reflector pitch resulting from spacer sleeves



**Note!**

Reliable operation of the AMS 307*i* and, thus, max. operating range and accuracy can only be achieved with the reflective tape specified by Leuze. Correct operation cannot be guaranteed if other reflectors are used!


## 7 Electrical connection

The AMS 307*i* laser measurement systems are connected using variously coded M12 connectors. This ensures unique connection assignments.



### **Note!**

*The corresponding mating connectors and ready-made cables are available as accessories for all connections. For further information, see chapter 11 "Type overview and accessories".*

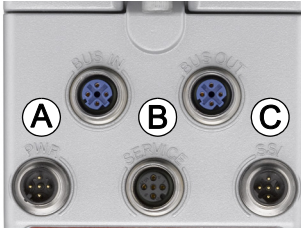

- A** PWR / IOs, M12 plug (A-coded)
- B** Leuze SERVICE, M12 socket (A-coded)
- C** SSI, M12 plug (B-coded)

Figure 7.1: Connections of the AMS 307*i*

### 7.1 Safety notices for the electrical connection



#### **Attention!**

*Before connecting the device, be sure that the supply voltage agrees with the value printed on the name plate.*

*The device may only be connected by a qualified electrician.*

*Ensure that the functional earth (FE) is connected correctly. Unimpaired operation is only guaranteed when the functional earth is connected properly.*

*If faults cannot be cleared, the device should be switched off and protected against accidental use.*



#### **Attention!**

*For UL applications, use is only permitted in Class 2 circuits in accordance with the NEC (National Electric Code).*



*The laser measurement systems are designed in accordance with protection class III for supply by PELV (protective extra-low voltage with reliable disconnection).*



### **Note!**

*Degree of protection IP65 is achieved only if the connectors and caps are screwed into place!*

Described in detail in the following are the individual connections and pin assignments.

### 7.2 PWR – voltage supply / switching input/output

PWR (5-pin plug, A-coded)			
<p>M 12 connector (A-coded)</p>	Pin	Name	Comment
	1	VIN	Positive supply voltage +18 ... +30VDC
	2	I/O 1	Switching input/output 1
	3	GNDIN	Negative supply voltage 0VDC
	4	I/O 2	Switching input/output 2
	5	FE	Functional earth
Thread	FE	Functional earth (housing)	

Table 7.1: Pin assignments - PWR

Further information on configuring the input/output can be found in display menu structure level 2, menu item "I/O" in the appendix of the manual.

### 7.3 SSI

SSI (5-pin plug, B-coded)			
<p>M12 connector (B-coded)</p>	Pin	Name	Comment
	1	DATA+	+ Data line SSI (output)
	2	DATA-	- Data line SSI (output)
	3	CLK+	+ Clock line SSI (input electrically insulated)
	4	CLK-	- Clock line SSI (input electrically insulated)
	5	FE	Functional earth
Thread	FE	Functional earth (housing)	

Table 7.2: SSI pin assignment



## 7.4 Service

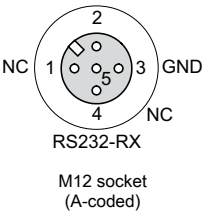
Service (5-pin socket, A-coded)			
	Pin	Name	Comment
 <p>SERVICE</p> <p>RS232-TX</p> <p>2</p> <p>NC 1 3 GND</p> <p>4 NC</p> <p>RS232-RX</p> <p>M12 socket (A-coded)</p>	1	NC	Not assigned
	2	RS232-TX	RS 232 transmission line/ service data
	3	GND	Voltage supply 0VDC
	4	RS232-RX	RS 232 receiving line/ service data
	5	NC	Not used
	Thread	FE	Functional earth (housing)

Table 7.3: Pin assignment - Service



**Note!**

*The service interface is designed only for use by Leuze!*

## 8 Display and control panel AMS 307i

### 8.1 Structure of the control panel



- A LED
- B Status indicator
- C Bargraph
- D Bus/interface info
- E Distance measurement value
- F Control buttons

Figure 8.1: Structure of the control panel

## 8.2 Status indicators and operation

### 8.2.1 Indicators in the display

#### Status and warning messages in the display

- IO1 Input 1 or output 1 active:  
Function depending on configuration.
- IO2 Input 2 or output 2 active:  
Function depending on configuration.
- LSR Warning - laser prefailure message:  
Laser diode old, device still functional, exchange or have repaired.
- TMP Warning - temperature monitoring:  
Internal device temperature above/below permissible range.
- PLB Plausibility error:  
Implausible measurement value. Possible causes: light beam interruption, outside of measurement range, permissible internal device temperature considerably exceeded or traverse rate >10m/s.

Depending on the configuration, either zero or the last valid measurement value is output at the interfaces.

- ATT Warning - received signal:  
Laser exit window or reflector soiled or fogged by rain, water vapor or fog. Clean or dry surfaces.
- ERR Internal hardware error:  
The device must be sent in for inspection.


**Bar graph**



Indicates the strength of the received laser light.  
The center bar represents the ATT warning threshold. The distance value remains valid and is output at the interfaces.  
If no bar graph is available, the PLB status information appears at the same time.  
The measurement value is assessed as implausible. Depending on the configuration, either zero or the last valid measurement value is output at the interfaces.

**Interface info**

The abbreviation "SSI" stands for the activated SSI interface.

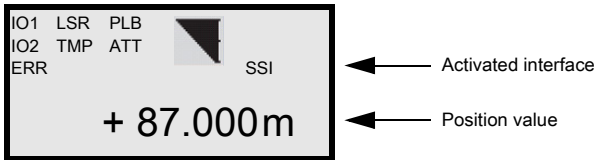

**Position value**

The measured position value is displayed in the configured unit of measurement.

- +87.000m With the metric setting, the measurement value is always displayed in meters to three decimal places.
- +87.0in With the inch setting, the measurement value is always displayed in inches to one decimal place.

### 8.2.2 LED status indicators

#### PWR LED

PWR



**Off**

#### Device OFF

- No supply voltage

PWR



**Flashing green**

#### Power LED flashes green

- No measurement value output
- Voltage connected
- Self test running
- Initialization running
- Parameter download running
- Boot process running

PWR



**Green continuous light**

#### Power LED green

- AMS 307*i* OK
- Measurement value output
- Self test successfully finished
- Device monitoring active

PWR



**Red flashing**

#### Power LED flashes red

- Device OK but warning message (ATT, TMP, LSR) set in display
- Light beam interruption
- Plausibility error (PLB)

PWR



**Red continuous light**

#### Power LED red

- No measurement value output; for details, see display

PWR



**Orange continuous light**

#### Power LED orange

- Parameter enable active
- No data on the host interface

#### NET LED

NET



**Off**

#### NET LED off

- No supply voltage (Power)
- SSI interface deactivated

NET



**Green continuous light**

**NET LED green**

- SSI interface is activated

NET



**Flashing green**

**NET LED flashes green**

- SSI interface is being initialized

### 8.2.3 Control buttons



Up

Navigate upward/sideways.



Down

Navigate downward/sideways.



ESC

Exit menu item.



ENTER

Confirm/enter value, change menu levels.

#### Navigating within the menus

The menus within a level are selected with the up/down buttons .


The selected menu item is activated with the enter button .

Press the ESC button to move up one menu level.

When one of the buttons is actuated, the display illumination is activated for 10 min.

#### Setting values

If input of a value is possible, the display looks like this:

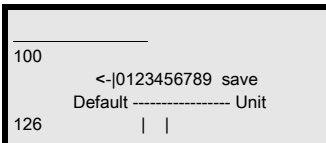

Delete character



Enter digit




Save

Use the and buttons to set the desired value. An accidental, incorrect entry can be corrected by selecting <-| and then pressing .

Then use the buttons to select save and save the set value by pressing .

### Selecting options

If options can be selected, the display looks like this:

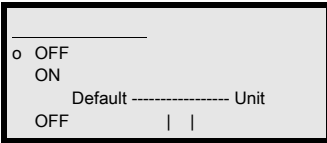


Select the desired option with the buttons. Activate the option by pressing .

## 8.3 Menu description

### 8.3.1 The main menus

After voltage has been applied to the laser, device information is displayed for several seconds. The display then shows the measurement window with all status information.

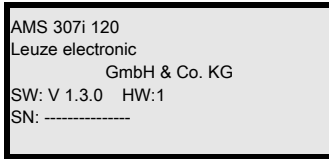


#### Device information - main menu

This menu item contains detailed information on

- Device type
- Manufacturer
- Software and hardware version
- Serial number


No entries can be made via the display.

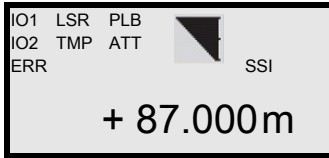

#### Status and measurement data - main menu

- Display of status, warning and error messages.
- Status overview of the switching inputs/outputs
- Bar graph for the received signal level.
- Measurement value

No entries can be made via this mask.  
See "Indicators in the display" on page 39.

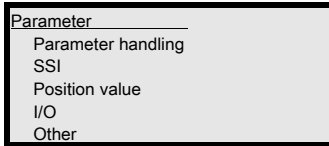


#### Parameter - main menu

- Configuration of the AMS.


See "Parameter menu" on page 44.



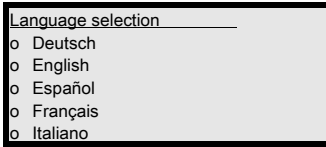

Language selection - main menu

- Selection of the display language.  
See "Language selection menu" on page 48.

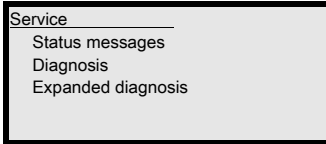

Service - main menu

- Display of status messages.
  - Display of diagnostic data.
- No entries can be made via the display.  
See "Service menu" on page 48.



**Note!**

*The rear cover of this manual includes a fold-out page with the complete menu structure. It describes the menu items in brief.*

**8.3.2 Parameter menu**

**Parameter handling submenu**

The following functions can be called up in the Parameter handling submenu:

- Lock and enable parameter entry
- Set up a password
- Reset the AMS 307*i* to the default settings

Table 8.1: Parameter handling submenu

Level 3	Level 4	Level 5	Selection/configuration option Description	Standard
Parameter enable			ON/OFF The standard setting (OFF) prevents unintended parameter changes. With parameter enable activated (ON), the display is inverted. In this state, it is possible to change parameters manually.	OFF
Password	Activate password		ON/OFF To enter a password, parameter enable must be activated. If a password is assigned, changes to the AMS 307 <i>i</i> can only be made after the password is entered. The master password 2301 overrides the individually set password.	OFF
	Password entry		For setting a four-digit numerical password.	
Parameters to default			By pressing the enter button (↵) after selecting Parameters to default, all parameters are reset to their standard settings without any further security prompts. In this case, English is selected as the display language.	

Additional important information on parameter handling can be found at the end of the chapter.

SSI submenu

Table 8.2: SSI submenu

Level 3	Level 4	Level 5	Selection/configuration option Description	Standard
Activation			ON/OFF Activates or deactivates the AMS 307i as an SSI participant.	ON
Encoding			Binary/gray Specifies the output format of the measurement value.	Gray
Number of data bits			24-bit/25-bit/26-bit The measurement value can be represented on the SSI interface in this data width.	24 bit
SSI resolution			0.001 mm / 0.01 mm / 0.1 mm / 1 mm / 10 mm / free resolution The measurement value can be displayed in these resolutions.	0.1 mm
Error bit			ON/OFF This parameter determines whether an error bit is also attached to the "number of data bits". The error bit is the LSB and is not converted in the case of gray representation of the measurement value.	ON
Error bit function			The error bit can be assigned the following status messages: Overflow / Intensity (ATT) / Temperature (TMP) / Laser (LSR) / Plausibility (PLB) / Hardware (ERR). In the case of multiple entries, the individual states in the error bit are processed in an OR function.	Plausibility (PLB) Hardware (ERR)
Update rate			1.7 / 0.2ms	1.7
Clock frequency			50 - 79kHz / 80 - 800kHz Selection of the clock frequency.	80 - 800kHz

Position value submenu

Table 8.3: Position value submenu

Level 3	Level 4	Level 5	Selection/configuration option Description	Standard
Unit			Metric/Inch Specifies the units of the measured distances	Metric
Counting direction			Positive/Negative Positive: The measurement value begins at 0 and increases with increasing distance. Negative: The measurement value begins at 0 and decreases with increasing distance. Negative distance values may need to be compensated with an offset or preset.	Positive
Offset			Output value = measurement value + offset The resolution of the offset value is independent of the selected "Position resolution" and is entered in mm or inch/100. The offset value is effective immediately after entry. If the preset value is activated, this has priority over the offset. Preset and offset are not offset against each other.	0 mm
Preset			The preset value is accepted by means of teach pulse. The teach pulse can be applied to a hardware input of the M 12 PWR connector. The hardware input must be appropriately configured. See also configuration of the I/Os.	0 mm



Table 8.3: Position value submenu

Level 3	Level 4	Level 5	Selection/configuration option Description	Standard
Error delay			ON/OFF Specifies whether, in the event of an error, the position value immediately outputs the value of the "Position value in the case of failure" parameter or the last valid position value for the configured error delay time.	ON/100 ms
Position value in the case of failure			Last valid value / zero Specifies which position value is output after the error delay time elapses.	Zero

### I/O submenu

Table 8.4: I/O submenu

Level 3	Level 4	Level 5	Selection/configuration option Description	Standard
I/O 1	Port configuration		Input/Output Defines whether I/O 1 functions as an output or input.	Output
	Switching input	Function	No function/teach preset/laser ON/OFF	No function
		Activa- tion	Low active/High active	Low active
Switching output	Function		Pos. limit value 1 / Pos. limit value 2 / Velocity / Intensity (ATT) / Temp. (TMP) / Laser (LSR) / Plausibility (PLB) / Hardware (ERR) The individual functions are "ORed" on the selected switching output.	Plausibility (PLB), hardware (ERR)
		Activa- tion	Low active/High active	Low active
	I/O 2	Port configuration		Input/Output Defines whether I/O 2 functions as an output or input.
Switching input		Function	No function/teach preset/laser ON/OFF	No function
		Activa- tion	Low active/High active	Low active
Switching output	Function		Pos. limit value 1 / Pos. limit value 2 / Velocity / Intensity (ATT) / Temp. (TMP) / Laser (LSR) / Plausibility (PLB) / Hardware (ERR) The individual functions are "ORed" on the selected switching output.	Intensity (ATT), Temp. (TMP), Laser (LSR)
		Activa- tion	Low active/High active	Low active
	Limit values	Upper pos. limit 1	Activa- tion	ON/OFF
Limit value input			Value input in mm or inch/100	0
Lower pos. limit 1		Activa- tion	ON/OFF	OFF

Table 8.4: I/O submenu


Level 3	Level 4	Level 5	Selection/configuration option Description	Standard
		Limit value input	Value input in mm or inch/100	0
	Upper pos. limit 2	Activa-tion	ON/OFF	OFF
		Limit value input	Value input in mm or inch/100	0
	Lower pos. limit 2	Activa-tion	ON/OFF	OFF
		Limit value input	Value input in mm or inch/100	0
	Max. velocity	Activa-tion	ON/OFF	OFF
		Max. velocity	Value input in mm/s or inch/100s	0

Other submenu

Table 8.5: Other submenu

Level 3	Level 4	Level 5	Selection/configuration option Description	Standard
Display illumination			10 minutes/ON Display illumination is switched off after 10 minutes or, if the parameter is set to "ON", illumination is always on.	10 min
Display contrast			Weak/Medium/Strong The display contrast may change at extreme temperature values. The contrast can subsequently be adapted using the three levels.	Medium
Service RS232	Baud rate		57.6kbit/s / 115.2kbit/s The service interface is only available to Leuze personnel.	115.2kbit/s
	Format		8,e,1 / 8,n,1 The service interface is only available to Leuze personnel.	8,n,1

### 8.3.3 Language selection menu

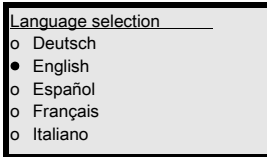


5 display languages are available:

- German
- English
- Spanish
- French
- Italian

The AMS 307*i* is delivered from the factory with the display preset to English.

To change the language, no password needs to be entered nor must parameter enable be active. The display language is a passive operational control and is therefore not a function parameter per se.

### 8.3.4 Service menu

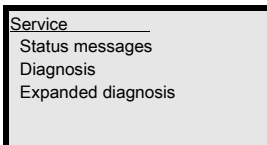


A detailed description of the individual functions can be found in Chapter 10.

### 8.4 Operation


An operating process is described here using parameter enable as an example.

#### Parameter enable


During normal operation parameters can be viewed only. If parameters are to be changed, the ON menu item in the Parameter -> Parameter handling -> Parameter enable menu must be activated. To do this, proceed as follows.

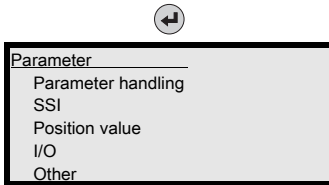

In the main menu, press the enter button to enter the Parameter menu.

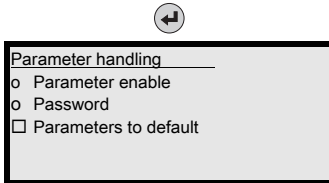

Use the ▲▼ buttons to select the Parameter handling menu item.

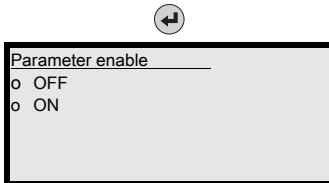

Press the enter button to enter the Parameter handling menu.

In the Parameter handling menu, use the ▲▼ buttons to select the Parameter enable menu item.



Press the enter button to enter the Parameter enable menu.

In the Parameter enable menu, use the ▲▼ buttons to select the ON menu item.

Press the enter button to activate parameter enable.

The PWR LED lights up orange; the display is inverted. You can now set the individual parameters on the display.



Press the ESC button twice to return to the Parameter menu.



#### Viewing and editing parameters

As long as parameter enable is active, the entire AMS 307i display is inverted.



#### Note!

If a password was stored, parameter enable is not possible until this password is entered; see "Password for parameter enable" below.

For the SSI interface, communication between the control and the AMS 307*i* is also active when parameter enable is active.




**Note!**

*Changes to the SSI parameters via display entry have immediate effect.*

**Password for parameter enable**

Parameter entry on the AMS 307*i* can be protected with a password.

If a password is assigned, parameter enable must be activated using the password. If parameter enable has been activated after successfully entering the password, parameters can be changed via the display.

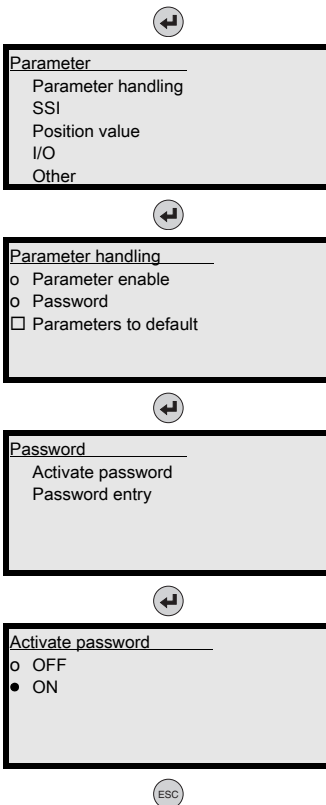

In the main menu, press the enter button to enter the Parameter menu.

Use the buttons to select the Parameter handling menu item.

Press the enter button to enter the Parameter handling menu.

In the Parameter handling menu, use the buttons to select the Password menu item.


Press the enter button to enter the Password menu.

In the Password menu, use the buttons to select the Activate password menu item.

Press the enter button to enter the Password menu.


In the Activate password menu, use the buttons to select the ON menu item and press the enter button.

Press the ESC button to return to the Password menu.

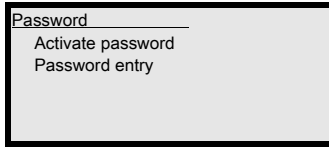

In the Password menu, use the ▲▼ buttons to select the Parameter entry menu item.

Press the enter button to enter the Password menu.

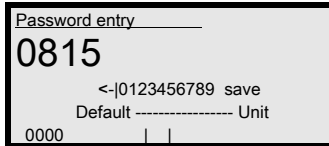

Now enter the password (digits). See "Setting values" on page 42.

Press the ESC button twice to return to the Parameter menu.



**Note!**

*The master password 2301 can enable the AMS 307i at any time.*

## 9 SSI interface

### 9.1 Principal functionality of the SSI interface

Data communication of the SSI interface is based on differential transmission as is used for RS 422 interfaces. The position value is transmitted in sync with a clock cycle (CLOCK) specified by the control, starting with the most significant bit (MSB).

In the idle state, both the clock line as well as the data line are at HIGH level. At the first HIGH-LOW edge (point ① in Figure 9.1), the data in the internal register is stored. This ensures that the data are not changed during serial transfer of the value.

When the next clock signal change from LOW to HIGH level (point ② in Figure 9.1) occurs, transmission of the position value begins with the most significant bit (MSB). With each subsequent change of the clock signal from LOW to HIGH level, the next least-significant bit is transmitted on the data line. After the least significant bit (LSB) has been output, the clock signal switches from LOW to HIGH for one last time and the data line switches to LOW level (end of transmission).

A monoflop retriggered by the clock signal determines the time span before the SSI interface can be called for the next transmission. This results in the minimum pause time between two successive clock cycles. If time  $t_m = 20\ \mu\text{s}$  has elapsed, the data line is returned to the quiescent level (HIGH) (point ③ in Figure 9.1). This signals completed data communication and that the device is again ready for transmission.



**Note!**

*If the off-cycle of data transmission is interrupted for longer than  $t_m = 20\ \mu\text{s}$ , the next cycle will begin with a completely new transmission cycle with a newly calculated value.*

*If a new transmission cycle is started before time  $t_m$  elapses, the previous value is output again.*



**Attention!**

***The SSI interface can only represent positive distance values. If negative output values are ascertained due to the offset or counting direction, a zero value is output at the SSI interface! In the event of a number overflow, all data bits are set to "1".***

9.1.1 SSI sequence diagram

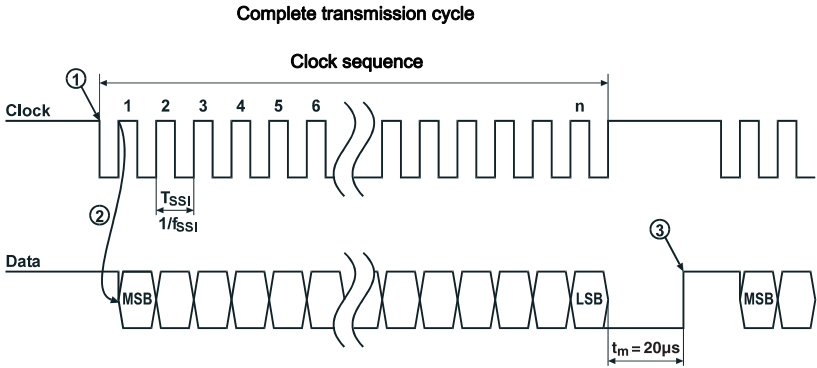


Figure 9.1: SSI data transmission sequence diagram



**Note!**

*In the default setting, the **LSB** bit is the error bit.*



**Attention!**

**Significance of the error bit:**

*By default, a 25th error bit (**LSB**) is appended to the 24-bit measurement value. The error bit is not included in the Gray encoding of the measurement value. The error bit is 1 = active, 0 = not active.*



**Note!**

*The data can be read out at a clock rate between 80kHz and 800kHz.*



**Attention!**

**Updating the measurement values on the SSI interface of the AMS 307*i*:**

*The measurement value on the SSI interface of the AMS 307*i* is updated approx. every 1.7ms (default) irrespective of the clock frequency. The update rate on the interface can be reduced to 0.2ms via the display under the SSI menu item.*



### 9.1.2 Cable length depending on the data rate

Only shielded and twisted pair cables (pin 1 with 2 and pin 3 with 4) are permitted as data lines for the SSI interface (see chapter 9.2 "SSI - electrical connection").

↳ The shielding must be connected at both ends.


↳ Do not lay the cable parallel to power cables.

The maximum possible cable length is dependent on the cable used and the clock rate:

<b>Data rate</b>	80kBit/s	100 kBit/s	200 kBit/s	300kBit/s	400 kBit/s	500 kBit/s	1.000 kBit/s
<b>Max. cable length (typical)</b>	500m	400m	200m	100m	50m	25 m	10 m

Table 9.1: Max. cable length as a function of the clock rate

## 9.2 SSI - electrical connection

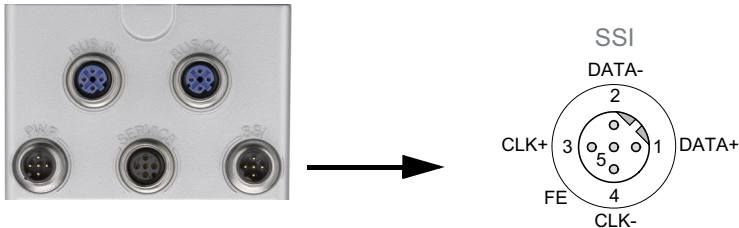

SSI connector (5-pin plug, B-coded)		
Pin	Name	Comment
1	DATA+	+ Data line SSI (output)
2	DATA-	- Data line SSI (output)
3	CLK+	+ Clock line SSI (input electrically insulated)
4	CLK-	- Clock line SSI (input electrically insulated)
5	FE	Functional earth
Thread	FE	Functional earth (housing)

Figure 9.2: SSI - electrical connection



**Note!**

To connect the SSI interface, we recommend our ready-made SSI cables; see Chapter 11.4.5.

### 9.3 Default settings of the SSI interface

Default parameters of the SSI interface	
SSI activation	ON
Measurement value coding	Gray
Transmission mode	24-bit measurement value + 1-bit error (error: 1 = active), error bit = LSB
Resolution	0.1 mm
Default error bit	Plausibility error or hardware error
Update rate	1.7 ms
Unit	metric
Counting direction	Positive (the SSI interface cannot represent negative values)
I/O 1	Output – plausibility error or hardware error
I/O 2	Output – temperature error, intensity error or laser prefailure message
Static preset	+000,000
Dynamic preset	+000,000
Position limit value range 1	Lower limit and upper limit: both 0
Position limit value range 2	Lower limit and upper limit: both 0
Error handling procedures	Position output: 0
	Suppress position status: active
	Position suppression time: 100 ms
Display language	English
Display illumination	OFF after 10 min.
Display contrast	Medium
Password protection	Off
Password	0000

Table 9.2: Default settings of the SSI interface

#### 9.3.1 Changing the SSI settings via the display




**Note!**

*For basic operation of the display, please refer to Chapter 8.2.3. In order to change the parameters, please activate parameter enable. The SSI interface remains active even during parameter enable. Changes to parameters have an immediate effect.*

## 10 Diagnostics and troubleshooting

### 10.1 Service and diagnosis in the display of the AMS 307*i*

In the main menu of the AMS 307*i*, expanded "Diagnostics" can be called up under the Service heading.

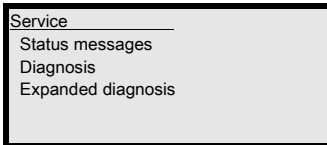


From the Service main menu, press the enter button (↵) to access the underlying menu level.

Use the up/down buttons (▲ ▼) to select the corresponding menu item in the selected level; use the enter button (↵) to activate the selection.

Return from any sub-level to the next-higher menu item by pressing the ESC button (⏏).

#### 10.1.1 Status messages

The status messages are written in a ring memory with 25 positions. The ring memory is organized according to the FIFO principle. No separate activation is necessary for storing the status messages. Power OFF clears the ring memory.

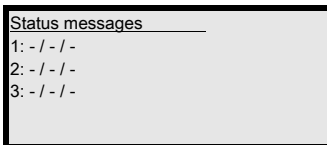

#### Basic representation of the status messages

n: Type / No. / 1

Meaning:

n: memory position in the ring memory

Type: type of message:

I = info, W = warning, E = error, F = severe system error.


No: internal error detection

1: frequency of the event (always "1" because no summation occurs)

The status messages within the ring memory are selected with the up/down buttons (▲ ▼). Use the enter button (↵) to call up detailed information about the respective status message:


**Detailed information about a status message**

- Type: type of message + internal counter
- UID: Leuze-internal coding of the message
- ID: description of the message
- Info: not currently used

Within the detailed information, press the enter button  again to activate an action menu with the following functions:



- Acknowledge message
- Delete message
- Acknowledge all
- Delete all

**10.1.2 Diagnosis**

The diagnostics function is activated by selecting the Diagnostics menu item. The ESC button  deactivates the diagnostics function and clears the contents of the recordings.

The recorded diagnostic data is displayed in 2 fields. In the upper half of the display, status messages of the AMS 307*i* and the bar graph are displayed. The lower half contains information used for Leuze-internal evaluation.



Use the up/down buttons   to scroll in the bottom half between various displays. The contents of the scrollable pages are intended solely for Leuze for internal evaluation.

The diagnostics have no influence on communication with the host interface and can be activated during operation of the AMS 307*i*.

**10.1.3 Expanded diagnosis**

The Expanded diagnosis menu item is used for Leuze-internal evaluation.

## 10.2 General causes of errors

### 10.2.1 Power LED

See also Chapter 8.2.2.

Error	Possible error cause	Measure
PWR LED "OFF"	No supply voltage connected	Check supply voltage.
	Hardware error	Send in device.
PWR LED "flashes red"	Light beam interruption	Check alignment.
	Plausibility error	Traverse rate >10m/s.
PWR LED "static red"	Hardware error	For error description, see display. It may be necessary to send in the device.

Table 10.1: General causes of errors

## 10.3 Interface errors

### 10.3.1 NET LED

Error	Possible error cause	Measure
NET LED "OFF"	No supply voltage connected	Check supply voltage.
	Incorrect wiring	Check wiring.
	SSI deactivated	Activate SSI interface in AMS 307 <i>i</i> .

Table 10.2: Bus error

### 10.4 Status indicators in the display of the AMS 307*i*

Display	Possible error cause	Measure
PLB (implausible measurement values)	Laser beam interruption	Laser spot must always be incident on the reflector.
	Laser spot outside of reflector	Traverse rate < 10 m/s?
	Measurement range for maximum distance exceeded	Restrict traversing path or select AMS with larger measurement range.
	Velocity greater than 10 m/s	Reduce velocity.
	Ambient temperature far outside permissible range (TMP display; PLB)	Provide cooling.
ATT (insufficient received signal level)	Reflector soiled	Clean reflector or glass lens.
	Glass lens of the AMS soiled	
	Performance reduction due to snow, rain, fog, condensing vapor or heavily polluted air (oil mist, dust)	Optimize usage conditions.
	Laser spot only partially on reflector	Check alignment.
	Protective film on reflector	Remove protective film from reflector.
TMP (operating temperature outside of specification)	Ambient temperatures outside specified range	In case of low temperatures, remedy may be an AMS with heating. If temperatures are too high, provide cooling or change mounting location.
LSR Laser diode warning	Laser diode prefailure message	Send in device at next possible opportunity to have laser diode replaced. Have replacement device ready.
ERR Hardware error	Indicates an uncorrectable error in the hardware	Send in device for repair.

**Service hotline:**

You can find the contact information for the hotline in your country on our website [www.leuze.com](http://www.leuze.com) under "Contact & Support".

**Repair service and returns:**

Defective devices are repaired at our service centers competently and quickly. We offer you an extensive service packet to keep any system downtimes to a minimum. Our service center requires the following information:

- Your customer number
- Product description or part description
- Serial number and batch number
- Reason for requesting support together with a description

For this purpose, please register the merchandise concerned. Simply register return of the merchandise on our website [www.leuze.com](http://www.leuze.com) under Contact & Support -> Repair Service & Returns:

To ensure quick and easy processing of your request, we will send you a returns order with the returns address in digital form.

**Note!**

*Please use Chapter 10 as a master copy should servicing be required.*

*Cross the items in the "Measures" column which you have already examined, fill out the following address field and fax the pages together with your service contract to the fax number listed below.*

**Customer data (please complete)**

Device type:	
Company:	
Contact person/department:	
Phone (direct dial):	
Fax:	
Street / no.:	
ZIP code / City:	
Country:	

**Leuze Service fax number:**

**+49 7021 573 - 199**

## 11 Type overview and accessories

### 11.1 Part number code

AMS 3xx / yyy

Operating range	40	Max. operating range in m
	120	Max. operating range in m
Interface	i=	Integrated fieldbus technology
	07	SSI interface
AMS Absolute MeasuringSystem		

### 11.2 Overview of AMS 307/i types (SSI)

Type designation	Description	Part no.
AMS 307/i40	40m operating range, SSI interface	50137593
AMS 307/i120	120m operating range, SSI interface	50137594

Table 11.1: Overview of AMS 307/i types

### 11.3 Overview of reflector types

Type designation	Description	Part no.
REF 4-A-150x150	Reflective tape, 150x150mm, self-adhesive	50141015
Reflective tape 200x200-S	Reflective tape, 200x200mm, self-adhesive	50104361
REF 4-A-300x300	Reflective tape, 300x300mm, self-adhesive	50141014
Reflective tape 500x500-S	Reflective tape, 500x500mm, self-adhesive	50104362
Reflective tape 914x914-S	Reflective tape, 914x914mm, self-adhesive	50108988
Reflective tape 200x200-M	Reflective tape, 200x200mm, affixed to carrier plate	50104364
Reflective tape 500x500-M	Reflective tape, 500x500mm, affixed to carrier plate	50104365
Reflective tape 914x914-M	Reflective tape, 914x914mm, affixed to carrier plate	50104366
Reflective tape 200x200-H	Reflective tape, 200 x 200mm, heated	50115020
Reflective tape 500x500-H	Reflective tape, 500 x 500mm, heated	50115021
Reflective tape 914x914-H	Reflective tape, 914 x 914mm, heated	50115022

Table 11.2: Overview of reflector types



## 11.4 Accessories

### 11.4.1 Accessories – Mounting bracket

Type designation	Description	Part no.
MW OMS/AMS 01	Mounting bracket for mounting AMS 307/i to horizontal surfaces	50107255

Table 11.3: Accessories – Mounting bracket

### 11.4.2 Accessories – Deflector unit

Type designation	Description	Part no.
US AMS 01	Deflector unit with integrated mounting bracket for AMS 307/i Variable 90° deflection of laser beam in different directions	50104479
US 1 OMS	Deflector unit without mounting bracket for simple 90° deflection of laser beam	50035630

Table 11.4: Accessories – Deflector unit


### 11.4.3 Accessories – M12 connector

Type designation	Description	Part no.
KD 02-5-BA	M12 connector, B-coded socket, SSI	50038538
KD 095-5A	M12 connector, A-coded socket, Power (PWR)	50020501

Table 11.5: Accessories – M12 connector

### 11.4.4 Accessories – Ready-made cables for voltage supply

#### Contact assignment/core color of PWR connection cable

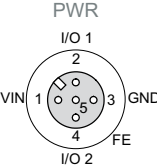PWR connection cable (5-pin socket, A-coded)			
 <p>M12 socket (A-coded)</p>	Pin	Name	Core color
	1	VIN	Brown
	2	I/O 1	White
	3	GND	Blue
	4	I/O 2	Black
	5	FE	Gray
	Thread	FE	Bare

#### Technical data of the cables for voltage supply

Operating temperature range	In idle state: -30°C ... +70°C In motion: -5°C ... +70°C
Material	Sheathing: PVC
Bending radius	> 50 mm

#### Order codes of the cables for voltage supply


Type designation	Description	Part no.
KD U-M12-5A-V1-050	M12 socket, A-coded, axial plug outlet, open cable end, cable length 5m	50132079
KD U-M12-5A-V1-100	M12 socket, A-coded, axial plug outlet, open cable end, cable length 10m	50132080


### 11.4.5 Accessories – Ready-made cables for the SSI interface

#### General

- KB SSI ... cable for connection to the SSI M12 connector
- Standard cables available in lengths from 2 ... 30m
- Special cables on request.

#### Contact assignment of SSI connection cable

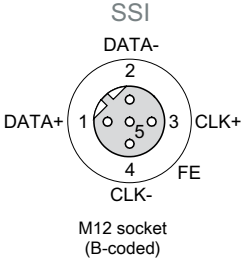SSI/IBS connection cable (5-pin socket, B-coded)			
	Pin	Name	Core color
	1	DATA+	Yellow
	2	DATA-	Green
	3	CLK+	Gray
	4	CLK-	Pink
	5	FE	Brown
	Thread	FE	Bare

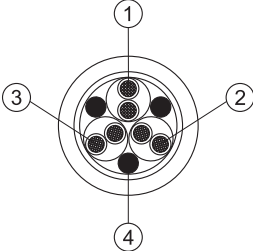	<p>1 Conductor pair with white/brown insulation</p> <p>2 Conductor pair with green/yellow insulation</p> <p>3 Conductor pair with gray/pink insulation</p> <p>4 Filler (polyester threads)</p>
<p>All conductor pairs stranded, colors acc. to DIN 47100</p>	

#### Technical data of SSI connection cable

Operating temperature range	In idle state: -40°C ... +80°C In motion: -5°C ... +80°C
Material	Free of halogens, silicone and PVC
Bending radius	> 80mm, suitable for drag chains

## Order codes for SSI connection cables

Type designation	Comment	Part no.
KB SSI/IBS-2000-BA	M12 socket, B-coded, for SSI/Interbus, axial connector, open cable end, cable length 2m	50104172
KB SSI/IBS-5000-BA	M12 socket, B-coded, for SSI/Interbus, axial connector, open cable end, cable length 5m	50104171
KB SSI/IBS-10000-BA	M12 socket, B-coded, for SSI/Interbus, axial connector, open cable end, cable length 10m	50104170
KB SSI/IBS-15000-BA	M12 socket, B-coded, for SSI/Interbus, axial connector, open cable end, cable length 15m	50104169
KB SSI/IBS-20000-BA	M12 socket, B-coded, for SSI/Interbus, axial connector, open cable end, cable length 20m	50104168
KB SSI/IBS-25000-BA	M12 socket, B-coded, for SSI/Interbus, axial connector, open cable end, cable length 25m	50108447
KB SSI/IBS-30000-BA	M12 socket, B-coded, for SSI/Interbus, axial connector, open cable end, cable length 30m	50108446

## 12 Maintenance

### 12.1 General maintenance information

With normal use, the laser measurement system does not require any maintenance by the operator.

#### Cleaning

In the event of dust build-up or if the warning message (ATT) is displayed, clean the device with a soft cloth; use a cleaning agent (commercially available glass cleaner) if necessary. Also check the reflector for possible soiling.



#### **Attention!**

*Do not use solvents and cleaning agents containing acetone. The use of such solvents can dull the reflector, the housing window and the display.*


### 12.2 Repairs, servicing



#### **Attention!**

*Access to or changes on the device, except where expressly described in this operating manual, is not authorized. The device must not be opened. Failure to comply will render the guarantee void. Warranted features cannot be guaranteed after the device has been opened.*

Repairs to the device must only be carried out by the manufacturer.

 *Contact your Leuze distributor or service organization should repairs be required. The addresses can be found on the inside of the cover and on the back.*



#### **Note!**

*When sending laser measurement systems to Leuze for repair, please provide an accurate description of the fault.*

### 12.3 Disassembling, packing, disposing

#### Repacking

For later reuse, the device is to be packed so that it is protected.

#### **Note!**

*Electrical scrap is a special waste product! Observe the locally applicable regulations regarding disposal of the product.*

**A**

Accessories	61
Accessories – Deflector unit	62
Accessories – Mounting bracket	62
Accessories – Ready-made cables	63
Accuracy	13
Alignment	19

**C**

Cleaning	66
Connections	
PWR IN	37
Service	38
SSI	37
Contouring error calculation	13
Control buttons	42
Control panel	39

**D**

Declaration of Conformity	4
Deflector unit	
Maximum operating range	23
With integrated mounting bracket	23
Without mounting bracket	25
Deflector unit US 1 OMS	
Dimensioned drawing	25
Deflector unit US AMS 01	
Dimensioned drawing	24
Description of functions	5
Diagnosis	56
Dimensioned drawing of AMS 3xxi	15
Display	39

**E**

Electrical connection	36
Safety notices	36
Expanded diagnosis	57
Explanation of symbols	4

**F**

Fast commissioning	11
--------------------	----

**G**

General causes of errors	58
--------------------------	----

**H**

Heated reflectors	
Dimensioned drawing	30
Technical data	29

**I**

Installation	17
Interface errors	58
Interface info in display	40
Internal hardware error	40

**M**

Main menu	
Device information	43
Language selection	44
Parameter	43
Service	44
Maintenance	66
Measurement range	13
Menus	
Language selection menu	48
Main menu	43
Parameter menu	44
Service menu	48
Mounting	18
With laser beam deflector unit	23
Mounting bracket (optional)	20

**N**

Name plates	17
NET LED	41

**O**

Operating principle	11
Operating range	61
Operating temperature	14
Operation	39, 49
Output time	13
Overview of reflector types	61

**P**

Package contents	17
Parallel mounting	21
Parameter enable	49, 50
Parameter menu	
I/O	46
Other	47

Parameter handling .....	44
Position value .....	45
SSI .....	45
Plausibility error .....	39
Prefailure message .....	39
PWR LED .....	41

**Q**

Quality assurance .....	4
-------------------------	---

**R**

Received signal .....	40
Reflective tape	
Dimensioned drawing .....	28
Technical data .....	27
Reflector .....	26
Mounting .....	32
Pitch .....	35
Size .....	31
Type overview .....	31
Repair .....	66
Response time .....	13

**S**

Servicing .....	66
SSI .....	52
Default settings .....	55
Electrical connection .....	54
Status and measurement data - main menu	43
Status and warning messages .....	39
Status indicator .....	39
ATT .....	59
ERR .....	59
PLB .....	59
TMP .....	59
Status indicator – LSR .....	59
Status indicators .....	41
Status indicators in the display .....	59
Status messages .....	56
Storage .....	17
Storage temperature .....	14
Supply voltage .....	13
Surface reflections .....	33
Symbols .....	4

**T**

Technical data .....	13
Dimensioned drawing .....	15
General specifications .....	13
Reflective tapes .....	26
Temperature monitoring .....	39
Transport .....	17
Troubleshooting .....	56
Type overview .....	16, 61

Level 1 ▲▼ : Selection	Level 2 ▲▼ : Selection ESC : Back	Level 3 ▲▼ : Selection ESC : Back	Level 4 ▲▼ : Selection ESC : Back	Level 5 ▲▼ : Selection ESC : Back	Selection/configuration option ▲▼ : Selection ↵ : Activate ESC : Back	Detailed information on
Device information						Page 43
Network information						Page 43
Status and measurement data						Page 43
Parameter	↵ Parameter handling	↵ Parameter enable			ON/OFF	Page 44
		↵ Password	↵ Activate password		ON/OFF	
			↵ Password entry		For setting a four-digit numerical password	
		↵ Parameters to default			All parameters are reset to their factory settings	
	↵ SSI	↵ Activation			ON/OFF	Page 45
		↵ Encoding			Binary/gray	
		↵ Number of data bits			24-bit/25-bit/26-bit	
		↵ SSI resolution			0.001mm / 0.01mm / 0.1mm / 1mm / 10mm / free resolution	
		↵ Error bit			ON/OFF	
		↵ Error bit function			Overflow / Intensity (ATT) / Temp. (TMP) / Laser (LSR) / Plausibility (PLB) / Hardware (ERR)	
	↵ Position value	↵ Update rate			1.7 ms / 0.2 ms	Page 45
		↵ Clock frequency			80kHz - 800kHz, monoflop time 20us / 50kHz - 79kHz, monoflop time 30us	
↵ Unit				Metric/Inch		
↵ Counting direction				Positive/Negative		
↵ Offset				Value input:		
↵ Preset				Value input		
↵ I/O	↵ I/O 1	↵ Error delay			ON/OFF	Page 46
		↵ Position value in the case of failure			Last valid value / zero	
		↵ Port configuration			Input/Output	
		↵ Switching input	↵ Function		No function/teach preset/laser ON/OFF	
			↵ Activation		Low active/High active	
		↵ Switching output	↵ Function		Pos. limit value 1 / Pos. limit value 2 / Velocity / Intensity (ATT) / Temp. (TMP) / Laser (LSR) / Plausibility (PLB) / Hardware (ERR)	
		↵ Activation		Low active/High active		
	↵ I/O 2	↵ Port configuration			Input/Output	
		↵ Switching input	↵ Function		No function/teach preset/laser ON/OFF	
			↵ Activation		Low active/High active	
		↵ Switching output	↵ Function		Pos. limit value 1 / Pos. limit value 2 / Velocity / Intensity (ATT) / Temp. (TMP) / Laser (LSR) / Plausibility (PLB) / Hardware (ERR)	
			↵ Activation		Low active/High active	



	Limit values	Upper pos. limit 1	Activation	ON/OFF	
			Limit value input	Value input in mm or inch/100	
		Lower pos. limit 1	Activation	ON/OFF	
			Limit value input	Value input in mm or inch/100	
		Upper pos. limit 2	Activation	ON/OFF	
			Limit value input	Value input in mm or inch/100	
		Lower pos. limit 2	Pos. limit value act.	ON/OFF	
			Position value	Value input in mm or inch/100	
		Max. velocity	Activation	ON/OFF	
			Max. velocity	Value input in mm/s or inch/100s	
Other	Display background			10 minutes/ON	Page 47
	Display contrast			Weak/Medium/Strong	
	Service RS232	Baud rate		57.6kbit/s / 115.2kbit/s	
		Format		8,e,1 / 8,n,1	
Language selection			Deutsch / English / Español / Français / Italiano	Page 48	
Service	Status messages			Number of readings, reading gates, reading rate / non-reading rate etc.	Page 48
	Diagnosis			Only for use by Leuze personnel for service purposes	
	Expanded diagnosis			Only for use by Leuze personnel for service purposes	